Side view

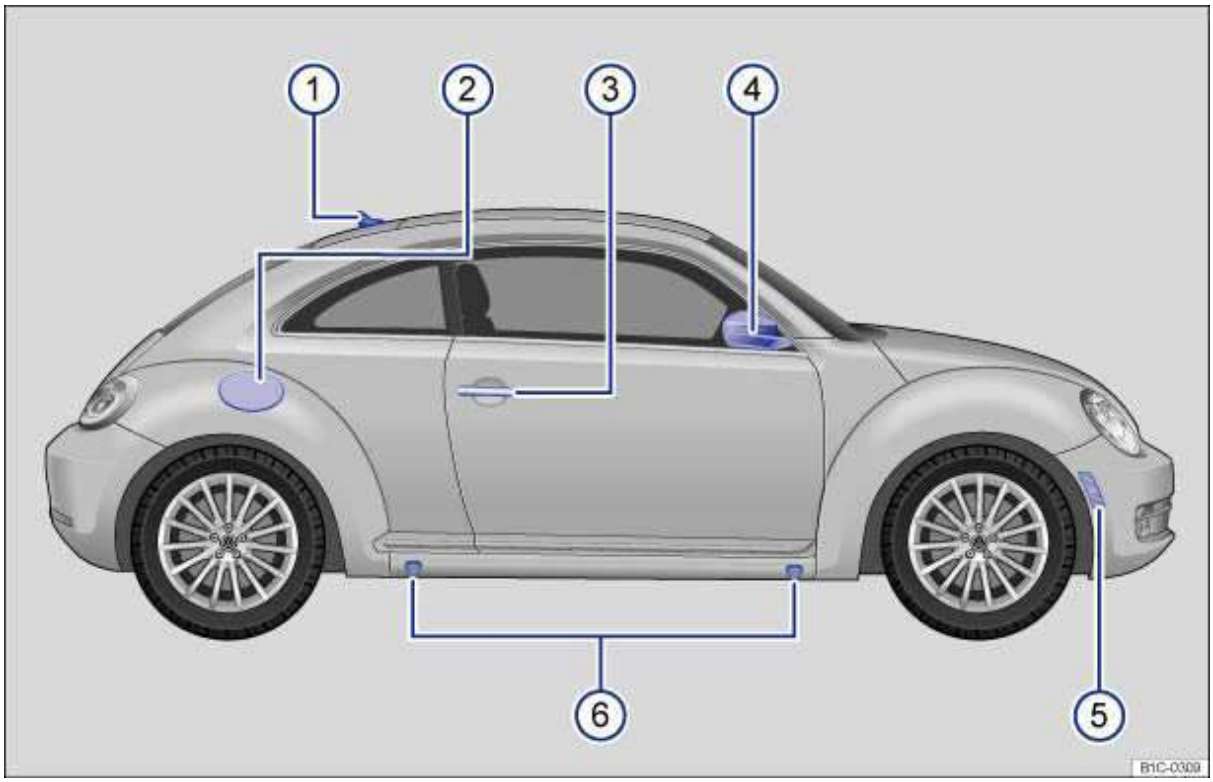

Fig. 1 Vehicle side overview.

Key to fig. 1:

(1) Roof antenna
(2) Fuel filler flap
(3) Outside door handle
(4) Outside mirror
  – Additional turn signal light
(5) Side marker light
(6) Lift points for the jack

Front view

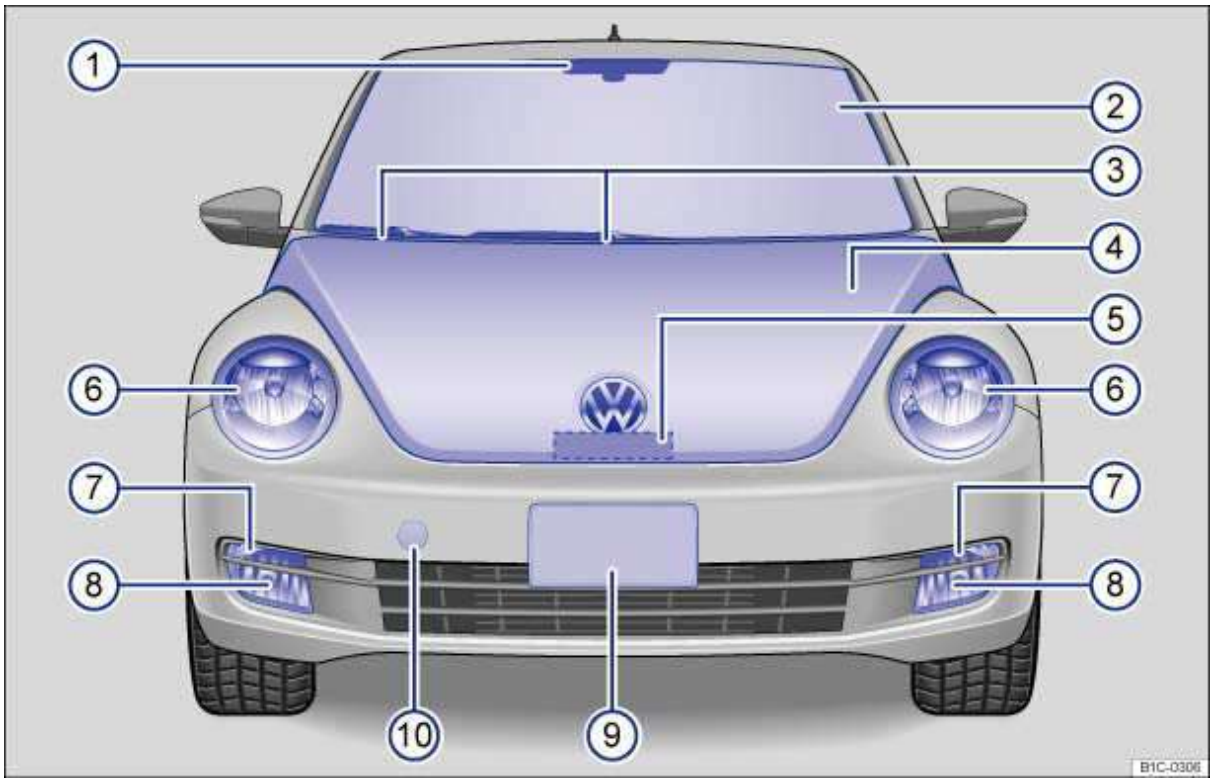

Fig. 2 Vehicle front overview.

Key to fig. 2:

(1) Inside mirror
(2) Front windshield
(3) Windshield wipers
(4) Engine hood
(5) Engine hood release
(6) Headlights
(7) Turn signals
(8) Fog lights/static cornering lights (if equipped)
(9) Front license plate bracket
(10) Threaded hole for the front towing eye (behind cover)

Rear view

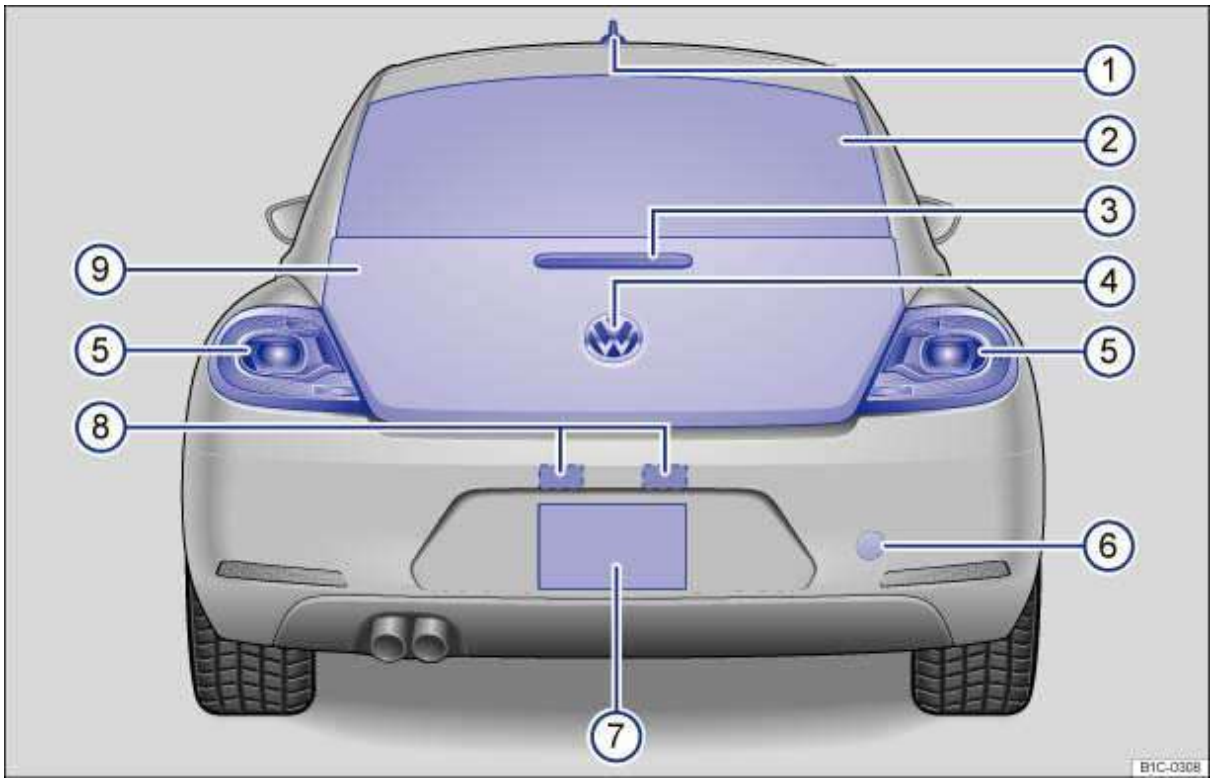

Fig. 3 Vehicle rear overview.

Key to fig. 3:

(1) Roof antenna
(2) Rear window
  – Rear window defroster
(3) High-mounted brake light
(4) Volkswagen Emblem for opening the rear hatch
(5) Taillights
(6) Threaded hole for the rear towing eye (behind cover)
(7) Rear license plate bracket
(8) License plate lights
(9) Rear hatch

Driver door overview

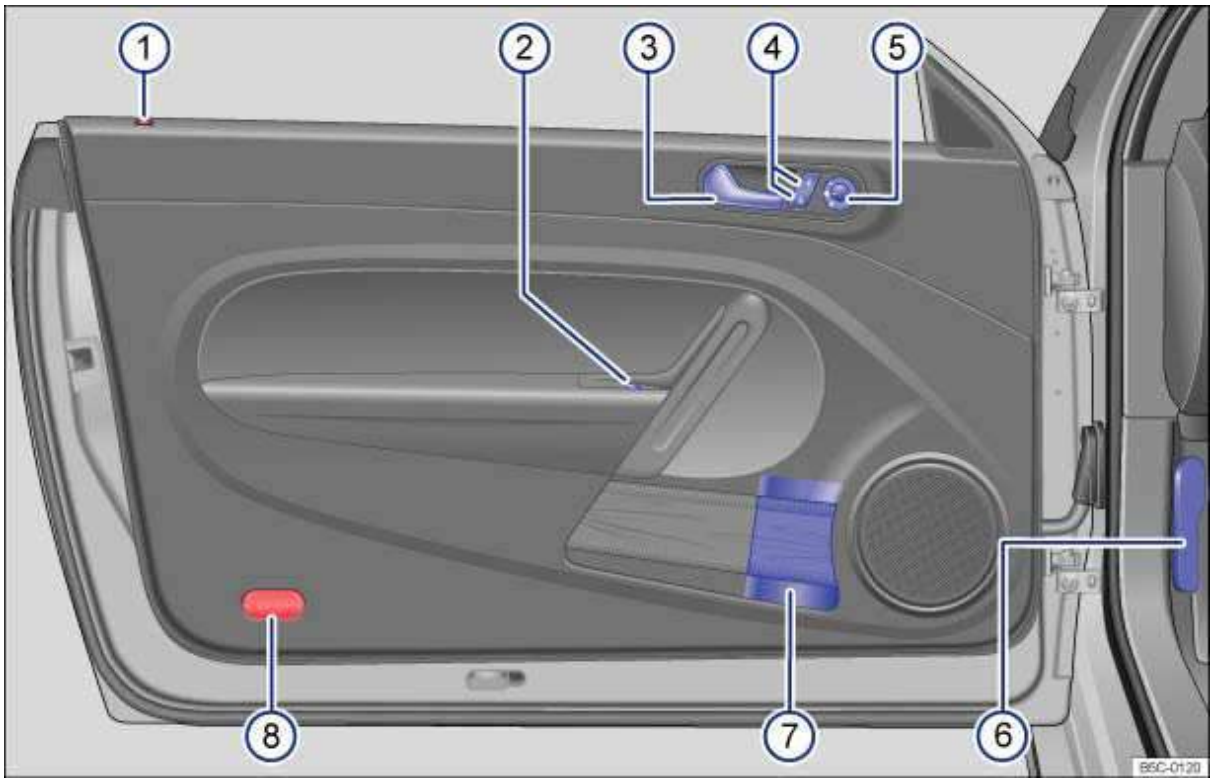

Fig. 4 Overview of controls in the driver door.

Key to fig. 4:

(1) Indicator light for power locking system and anti-theft alarm system (if equipped)
(2) Buttons for operating the power windows
(3) Door handle
(4) Power locking button for locking and unlocking the vehicle –
(5) Switch for adjusting the outside mirror
  – Adjusting outside mirrors L - 0 - R
  – Outside mirror heating
(6) Lever for releasing the engine hood
(7) Bottle holder
(8) Reflector

Driver side overview

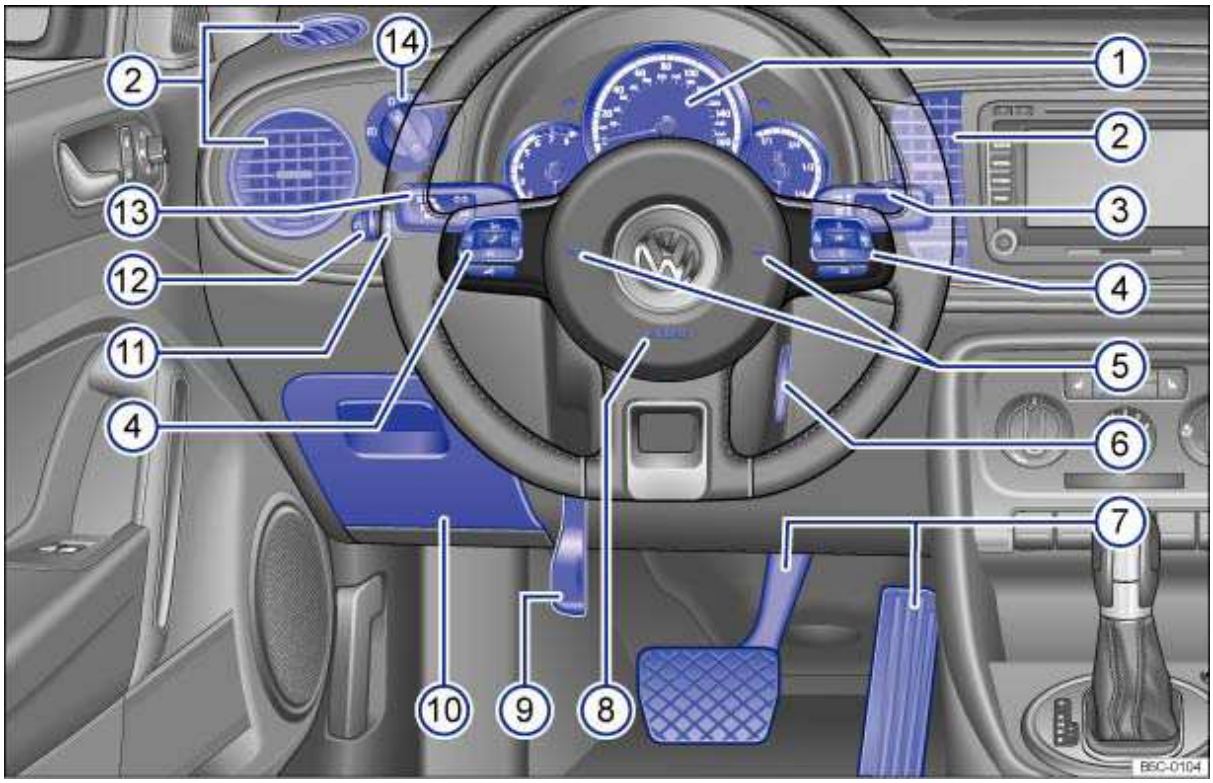

Fig. 5 Driver side overview.

Key to ⇒ fig. 5:

(1) Instrument cluster:
- Instruments
- Display

(2) Air vents ◀ - ▮▮▸ - ▶

(3) Windshield wiper and washer lever
- Windshield wiper HIGH - LOW
- Intermittent operation for windshield wipers ..▮▮
- Windshield wiper OFF
- "One-tap wiping" 1x
- Windshield wiper
- Automatic wipe/wash for windshield
- Lever with buttons for the Volkswagen Information System (Basic version) TRIP , OK/RESET

(4) Multi-function steering wheel controls (if equipped)
- Volume setting for radio programs, navigation system notifications, or telephone calls ± -
- Mute switching for radio or activation of voice control
- Audio, Navigation ◁ - ▷
- Control buttons for the Volkswagen Information System - △ - ▽ - , OK, ↩

(5) Horn (only works when the ignition is switched on)

(6) Ignition switch (vehicles without Keyless Access) or location for the emergency start feature for the Keyless Access locking and starting system

(7) Pedals

(8) Driver front airbag

(9) Lever for adjustable steering wheel

(10) Storage compartment

(11) Switch for background lighting (in the doors) ☼

(12) Dimmer control for the instrument and switch illumination

(13) Lever for

- High beams
- Headlight flasher
- Turn signals
- Cruise Control System (CCS) **ON** - **CANCEL** - **OFF** - **RES/+** - **SET/–**

(14) Headlight switch ☼

- Off position **0**
- Low beams
- Fog lights

Upper center console

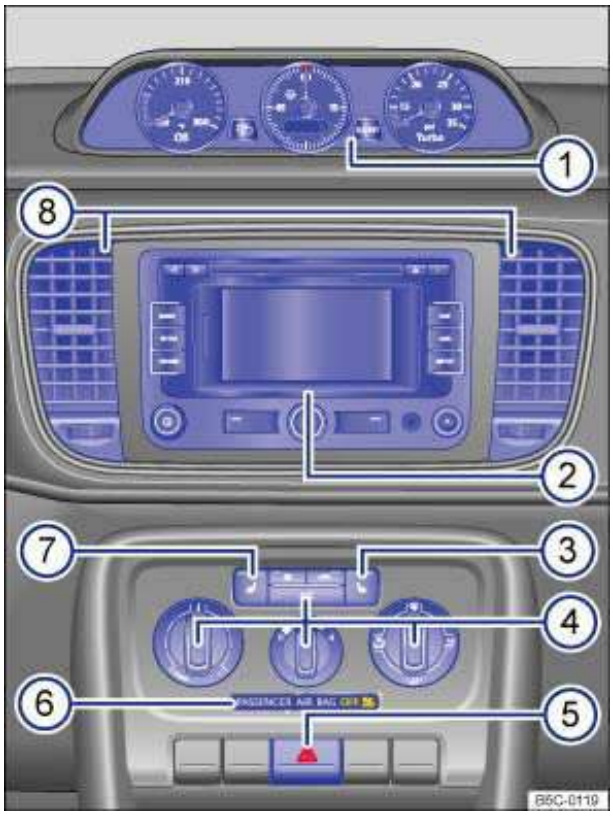

Fig. 6 Overview of the upper center console.

Key to fig. 6:

(1) Additional instruments (if equipped)

(2) Radio or Radio & Navigation system (factory-installed) ⇒ Booklet *Radio* or ⇒ Booklet *Navigation system*

(3) Passenger seat heating button

(4) Controls for:
– Manual AC

(5) Switch for emergency flashers

(6) PASSENGER AIR BAG OFF light (front airbag for front seat passenger)

(7) Driver seat heating button

(8) Air vents ◀ - ▶

Lower center console

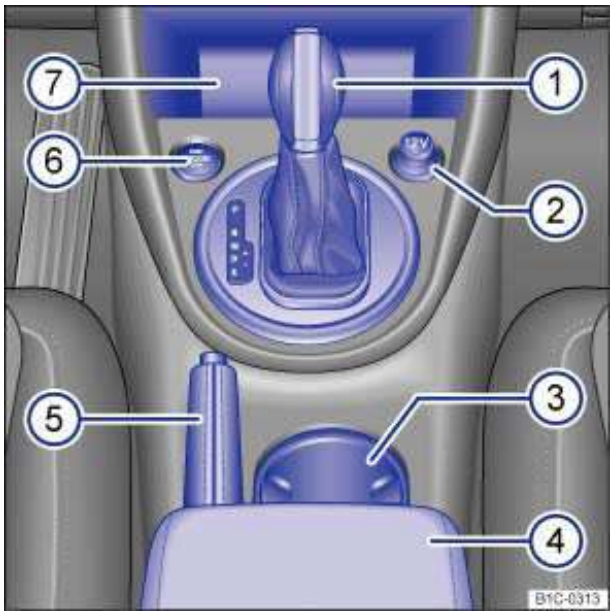

Fig. 7 Overview of the lower center console.

Key to fig. 7:

(1) Lever for:
- Manual transmission
- Automatic transmission

(2) 12 Volt socket

(3) Storage compartment with cup holder in the center console

(4) Center armrest with storage compartment (if equipped)

(5) Parking brake lever

(6) Starter button for the Keyless Access locking and starting system

(7) Storage compartment

Applicable only in the United States

Front passenger side overview

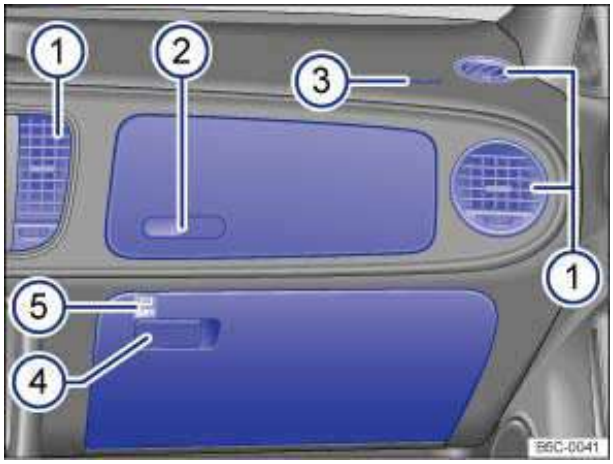

Fig. 8 Overview of the front passenger side.

Key to fig. 8:

(1) Air vents ◀ - ▮▮▸ - ▶
(2) Opening handle for the upper glove compartment (if equipped)
(3) Passenger front airbag location in the instrument panel (approximate)
(4) Opening handle for the lower glove compartment
(5) Inside the lower glove compartment: SET button for Tire Pressure Monitoring System (!) SET

Applicable only in Canada

Front passenger side overview

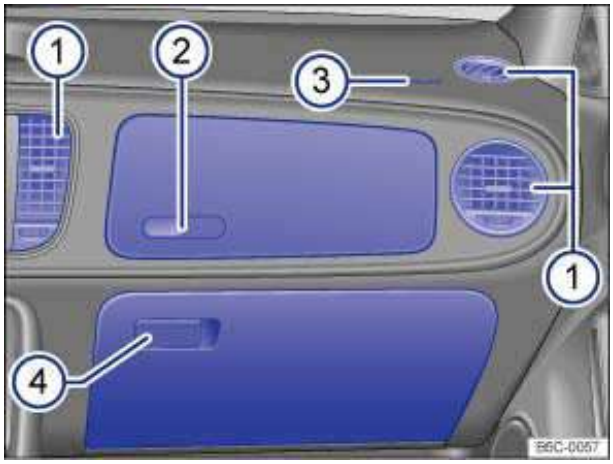

Fig. 9 Overview of the front passenger side.

Key to ⇒ fig. 9:

(1) Air vents ◀ - ▮▮▸ - ▶
(2) Opening handle for the upper glove compartment (if equipped)
(3) Passenger front airbag location in the instrument panel (approximate)
(4) Opening handle for the lower glove compartment

Symbols on the roof console

Symbol	Meaning
0	Interior and reading lights.
	Power sunroof.
	Three-button module ⇒ Booklet *Mobile Phone Package.*

Instrument cluster

Introduction

In this section you'll find information about:

Instrument overview
Additional instruments
Displays
Service reminder display

More information

- Warning and indicator lights.**or! Bookmark not defined.**
- Volkswagen Information System.• Display of the selected gears (automatic transmission).
- Service reminder information ⇒ Booklet *Warranty and Maintenance*.

WARNING

Driving on today's roads demands the full attention of the driver at all times. Driver distraction causes accidents, collisions and serious personal injury!

- **Never use the buttons in the instrument cluster while driving.**

Instrument overview

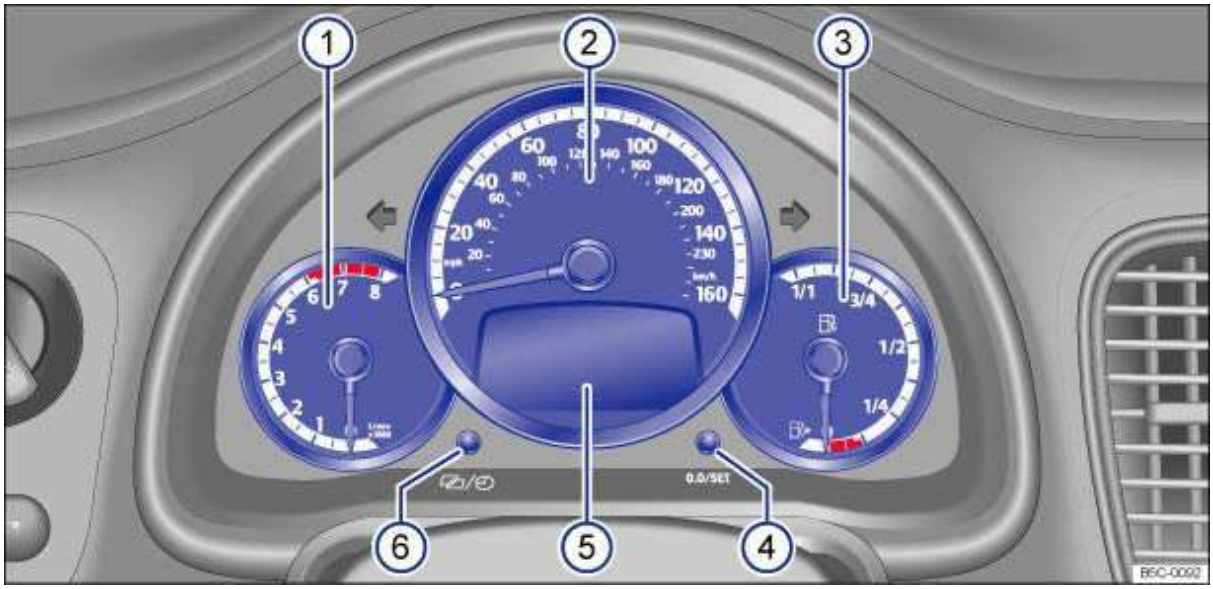

Fig. 10 Instrument cluster in the instrument panel.

Please first read and note the introductory information and heed the WARNINGS ⚠.

Instrument explanations ⇒ fig. 10:

(1) **Tachometer** (thousands of revolutions per minute when the engine is running).

The red zone at the end of the scale indicates maximum permissible engine rpm (revolutions per minute) for all gears after the break-in period. Before reaching the red zone, select the next higher gear or selector level position **D**, or ease your foot off the accelerator ⇒ⓘ.

(2) **Speedometer**.

(3) **Fuel gauge**..

(4) **Reset button** for the TRIP odometer display (*trip*).

– Push the 0.0 / SET button for about 1 second to reset to zero.

(5) **Displays**.

(6) **Button for setting the clock**.

– With the ignition on, push the ⧉ / ⊕ button to highlight the hour or the minutes in the clock display.

– To advance the clock, push the 0.0 / SET button (4). Press and hold the button to fast forward.

– Push the ⧉ / ⊕ button again to finish setting the clock.

NOTICE

- **To help prevent engine damage, always avoid high engine speeds, full throttle acceleration and heavy engine loads when the engine is cold.**
- **To help prevent engine damage, the tachometer needle should only enter the red zone (warning zone) briefly.**

Upshifting early into the next higher gear saves fuel and reduces engine noise.

Additional instruments

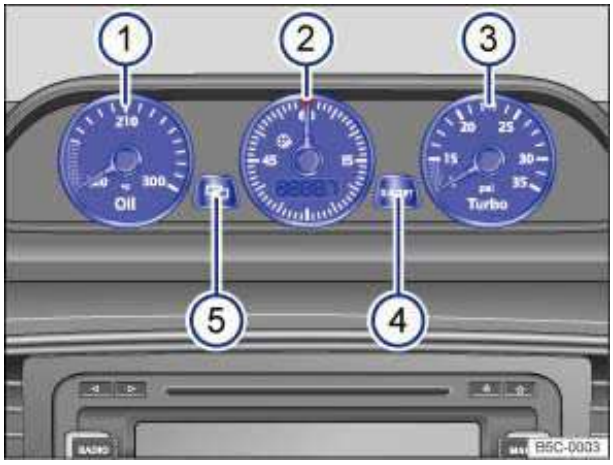

Fig. 11 Above the center console: Engine oil temperature indicator 1, stopwatch 2 and boost pressure indicator 3.

Please first read and note the introductory information and heed the WARNINGS ⚠.

Instrument explanations ⇒fig. 11:

(1) **Engine oil temperature indicator**

The engine has reached operating temperature when the needle moves into the center of the gauge under normal driving conditions. The needle may move farther to the right on the gauge with a heavier engine load at high outside temperatures. This is not a cause for concern as long as the e or ô indicator light does light up or flash.**or! Bookmark not defined.**.

(2) **Stopwatch**

– Analog stopwatch that measures up to 60 seconds.

– Digital stopwatch with hour, minute and second display (one tenth of a second intervals are shown up to 59 minutes and 59 seconds when the ignition is switched on).
– Digital display with stop function selected.

(3) **Boost pressure indicator**

The boost pressure indicator shows the pressure in the boost pressure duct between the supercharger or turbocharger and the engine. The farther right that the indicator points on the gauge, the higher the pressure in the boost pressure duct and the greater the output from the engine. The word “Turbo” on the gauge indicates the system is charged.

(4) **Start / Stop / Reset button**

– Stopwatch mode: press the button 0.0 / SET once to start timing and press a second time to stop. Press the button 0.0 / SET again to resume timing.
– Speed-dependent stopwatch mode: the stopwatch starts automatically with an audible chime when you begin driving. Press once to stop the watch.
– Press and hold longer than 2 seconds: the stopwatch resets.

(5) **Stopwatch mode button**

You can switch between stopwatch modes using the set button ⧉.

After selecting the stopwatch in the display, the mode displays briefly, followed by the last time that a time was recorded.

– Stopwatch mode.
– Speed-dependent stopwatch mode. The stopwatch starts automatically with an audible chime when you begin driving. An LED in the stopwatch comes on to indicate that this mode is active ⇒ ⚠.

WARNING

Rapid acceleration can cause skidding and loss of traction, especially on slippery roads, resulting in a loss of vehicle control, collisions, and serious personal injury.

- **Only use the stopwatch feature or fast acceleration if visibility, weather, road, and traffic conditions permit and other drivers will not be endangered by your driving and the vehicle's acceleration.**

WARNING

Driving on today's roads demands the full attention of the driver at all times. Driver distraction causes accidents, collisions and serious personal injury!

- **Never set the stopwatch when the vehicle is moving.**

NOTICE

To help prevent engine damage, always avoid high engine speeds, full throttle acceleration and heavy engine loads when the engine is cold.

Displays

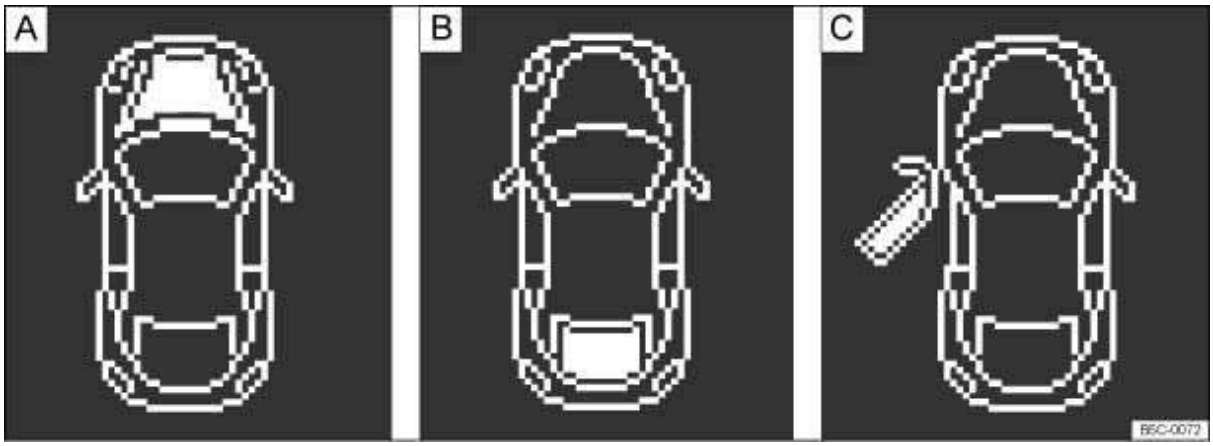

Fig. 12 In the instrument cluster display: A: Open engine hood, B: Open rear hatch, C: Open driver door.

Please first read and note the introductory information and heed the WARNINGS ⚠.

Depending on the vehicle model, different information may be shown in the instrument cluster display ⇒fig. 10 (5).

- Warning and information texts
- Odometer displays
- Time
- Outside temperature
- Compass display
- Open door, engine hood, or rear hatch
- Selector lever position.
- Gear recommendation (manual transmission).

- Multi-Function Indicator (MFI) and menus for different settings.

- Service reminder display.The instrument cluster displays and their arrangement may vary depending on the vehicle model and engine. For displays without warning and information messages, malfunctions are only signaled with indicator lights.

ⓘ If there are multiple warning messages, the symbols are displayed for several seconds in order of importance. The symbols are displayed until the cause has been corrected.

Service reminder display

Please first read and note the introductory information and heed the WARNINGS ⚠.

The service appointment reminder is shown in the instrument cluster display ⇒fig. 10 (5).

For information on maintenance intervals, please see the ⇒Booklet *Warranty and Maintenance*.

For vehicles with **time- or distance driven-dependent service**, only fixed service intervals are displayed.

Service reminder

If service is due in the near future, a **service reminder** is displayed when the ignition is switched on.

On *vehicles without text messages* (Basic instrument cluster), a wrench symbol d and a ***miles*** (***kilometers***) indicator are shown in the instrument cluster display. The distance shown in miles (kilometers) is the maximum distance the vehicle can be driven without having a service completed. The display changes after a few seconds. A clock symbol is displayed and the number of days until the required service is shown.

On *vehicles with text messages* (Premium instrument cluster), ***Service in --- mi or --- days*** (***Service in --- km or --- days***) is shown in the instrument cluster display.

Service event

When **service is due**, a warning chime sounds when the ignition is switched on, and a flashing wrench symbol d is displayed for several seconds. For *vehicles with text messages*, ***Service now*** is shown in the instrument cluster display.

Viewing service message

The current **service message** can be accessed when the ignition is switched on, the engine is switched off, and the vehicle is stopped:

- Push the ⊟ / ◷ button in the instrument cluster several times until the wrench symbol appears.
- **OR:** Select the ***Settings*** menu.
- In the ***Service*** submenu, select the ***Info*** menu item.

A **minus sign** in front of the number of miles (kilometers) or days means that **service is overdue**. On *vehicles with Premium text message display*, ***Service since --- mi or --- days*** (***Service since --- km or --- days***) is shown in the instrument cluster display when service is overdue.

Resetting the service reminder display

If the service was not performed by an authorized Volkswagen dealer or an authorized Volkswagen Service Facility, the service reminder can be reset as follows:

Vehicles with Premium text message display:
Select the ***Settings*** menu.
In the ***Service*** submenu, select the ***Reset*** menu item.
Confirm request with the OK button on the multi-function steering wheel.

Vehicles with Basic text message display:
Switch off the ignition.
Push the 0.0 / SET button in the instrument cluster and hold down.
Switch on the ignition.
Release the 0.0 / SET button and push the ⊟ / ◷ button in the instrument cluster within about 20 seconds.

ⓘ Do **not** reset the service reminder between service intervals; otherwise, incorrect information will be displayed.

ⓘ The service reminder disappears after a few seconds when the engine is running or after the OK/RESET button on the windshield wiper lever or the OK button on the multi-function steering wheel has been pushed.

Instrument cluster

Introduction

In this section you'll find information about:

Instrument overview
Additional instruments
Displays
Service reminder display

More information

- Warning and indicator lights.**or! Bookmark not defined.**
- Volkswagen Information System.• Display of the selected gears (automatic transmission).
- Service reminder information ⇒ Booklet *Warranty and Maintenance*.

WARNING

Driving on today's roads demands the full attention of the driver at all times. Driver distraction causes accidents, collisions and serious personal injury!

- **Never use the buttons in the instrument cluster while driving.**

Instrument overview

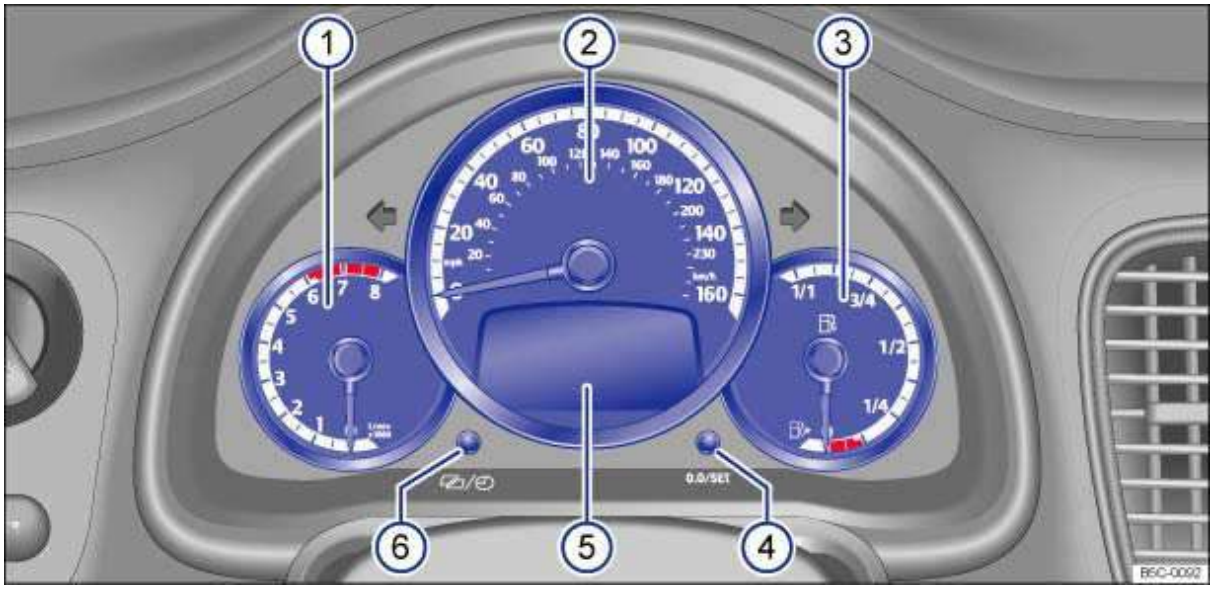

Fig. 10 Instrument cluster in the instrument panel.

Please first read and note the introductory information and heed the WARNINGS ⚠.

Instrument explanations ⇒ fig. 10:

(1) **Tachometer** (thousands of revolutions per minute when the engine is running).

The red zone at the end of the scale indicates maximum permissible engine rpm (revolutions per minute) for all gears after the break-in period. Before reaching the red zone, select the next higher gear or selector level position **D**, or ease your foot off the accelerator ⇒ⓘ.

(2) **Speedometer**.

(3) **Fuel gauge**..

(4) **Reset button** for the TRIP odometer display (*trip*).

– Push the 0.0 / SET button for about 1 second to reset to zero.

(5) **Displays**.

(6) **Button for setting the clock**.

– With the ignition on, push the ⧉ / ⊕ button to highlight the hour or the minutes in the clock display.

– To advance the clock, push the 0.0 / SET button (4). Press and hold the button to fast forward.

– Push the ⧉ / ⊕ button again to finish setting the clock.

NOTICE

- **To help prevent engine damage, always avoid high engine speeds, full throttle acceleration and heavy engine loads when the engine is cold.**
- **To help prevent engine damage, the tachometer needle should only enter the red zone (warning zone) briefly.**

Upshifting early into the next higher gear saves fuel and reduces engine noise.

Additional instruments

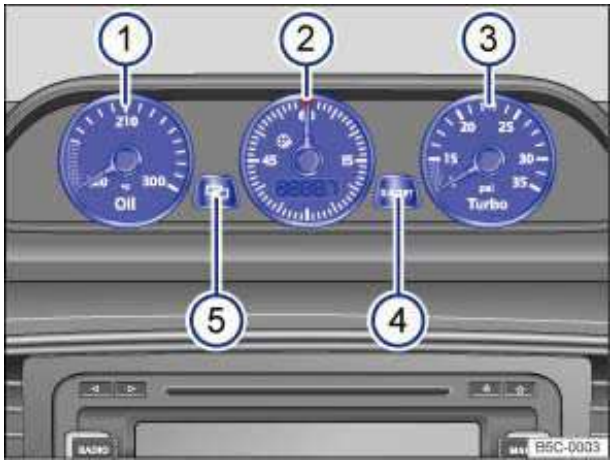

Fig. 11 Above the center console: Engine oil temperature indicator 1, stopwatch 2 and boost pressure indicator 3.

Please first read and note the introductory information and heed the WARNINGS ⚠.

Instrument explanations ⇒fig. 11:

(1) **Engine oil temperature indicator**

The engine has reached operating temperature when the needle moves into the center of the gauge under normal driving conditions. The needle may move farther to the right on the gauge with a heavier engine load at high outside temperatures. This is not a cause for concern as long as the e or ô indicator light does light up or flash.**or! Bookmark not defined.**.

(2) **Stopwatch**

– Analog stopwatch that measures up to 60 seconds.

– Digital stopwatch with hour, minute and second display (one tenth of a second intervals are shown up to 59 minutes and 59 seconds when the ignition is switched on).
– Digital display with stop function selected.

(3) **Boost pressure indicator**

The boost pressure indicator shows the pressure in the boost pressure duct between the supercharger or turbocharger and the engine. The farther right that the indicator points on the gauge, the higher the pressure in the boost pressure duct and the greater the output from the engine. The word “Turbo” on the gauge indicates the system is charged.

(4) **Start / Stop / Reset button**

– Stopwatch mode: press the button 0.0 / SET once to start timing and press a second time to stop. Press the button 0.0 / SET again to resume timing.
– Speed-dependent stopwatch mode: the stopwatch starts automatically with an audible chime when you begin driving. Press once to stop the watch.
– Press and hold longer than 2 seconds: the stopwatch resets.

(5) **Stopwatch mode button**

You can switch between stopwatch modes using the set button ⧉.

After selecting the stopwatch in the display, the mode displays briefly, followed by the last time that a time was recorded.

– Stopwatch mode.
– Speed-dependent stopwatch mode. The stopwatch starts automatically with an audible chime when you begin driving. An LED in the stopwatch comes on to indicate that this mode is active ⇒ ⚠.

WARNING

Rapid acceleration can cause skidding and loss of traction, especially on slippery roads, resulting in a loss of vehicle control, collisions, and serious personal injury.

- **Only use the stopwatch feature or fast acceleration if visibility, weather, road, and traffic conditions permit and other drivers will not be endangered by your driving and the vehicle's acceleration.**

WARNING

Driving on today's roads demands the full attention of the driver at all times. Driver distraction causes accidents, collisions and serious personal injury!

- **Never set the stopwatch when the vehicle is moving.**

NOTICE

To help prevent engine damage, always avoid high engine speeds, full throttle acceleration and heavy engine loads when the engine is cold.

Displays

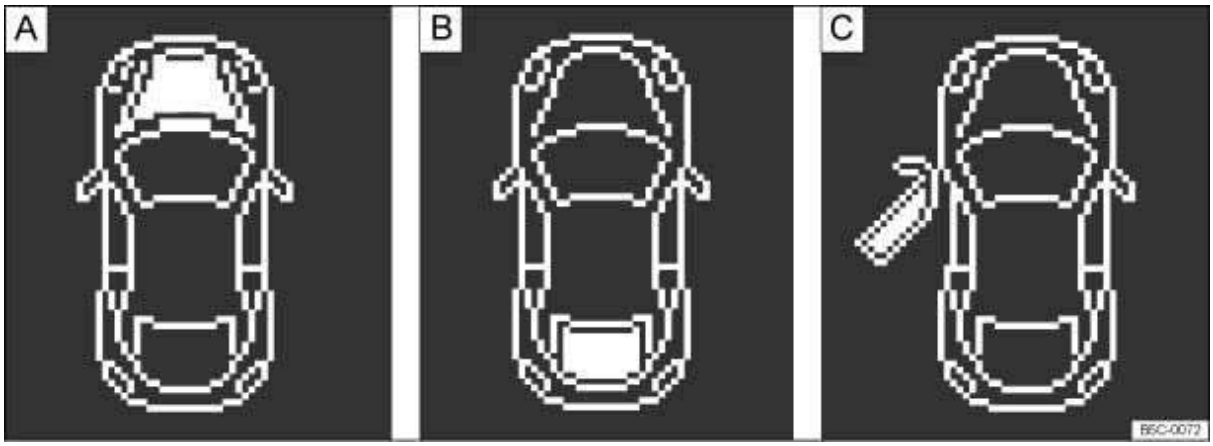

Fig. 12 In the instrument cluster display: A: Open engine hood, B: Open rear hatch, C: Open driver door.

Please first read and note the introductory information and heed the WARNINGS ⚠.

Depending on the vehicle model, different information may be shown in the instrument cluster display ⇒fig. 10 (5).

- Warning and information texts
- Odometer displays
- Time
- Outside temperature
- Compass display
- Open door, engine hood, or rear hatch
- Selector lever position.
- Gear recommendation (manual transmission).

- Multi-Function Indicator (MFI) and menus for different settings.

- Service reminder display.The instrument cluster displays and their arrangement may vary depending on the vehicle model and engine. For displays without warning and information messages, malfunctions are only signaled with indicator lights.

ⓘ If there are multiple warning messages, the symbols are displayed for several seconds in order of importance. The symbols are displayed until the cause has been corrected.

Service reminder display

Please first read and note the introductory information and heed the WARNINGS ⚠.

The service appointment reminder is shown in the instrument cluster display ⇒fig. 10 (5).

For information on maintenance intervals, please see the ⇒Booklet *Warranty and Maintenance*.

For vehicles with **time- or distance driven-dependent service**, only fixed service intervals are displayed.

Service reminder

If service is due in the near future, a **service reminder** is displayed when the ignition is switched on.

On *vehicles without text messages* (Basic instrument cluster), a wrench symbol d and a ***miles*** (***kilometers***) indicator are shown in the instrument cluster display. The distance shown in miles (kilometers) is the maximum distance the vehicle can be driven without having a service completed. The display changes after a few seconds. A clock symbol is displayed and the number of days until the required service is shown.

On *vehicles with text messages* (Premium instrument cluster), ***Service in --- mi or --- days*** (***Service in --- km or --- days***) is shown in the instrument cluster display.

Service event

When **service is due**, a warning chime sounds when the ignition is switched on, and a flashing wrench symbol d is displayed for several seconds. For *vehicles with text messages*, ***Service now*** is shown in the instrument cluster display.

Viewing service message

The current **service message** can be accessed when the ignition is switched on, the engine is switched off, and the vehicle is stopped:

- Push the ⊟ / ◷ button in the instrument cluster several times until the wrench symbol appears.
- **OR:** Select the ***Settings*** menu.
- In the ***Service*** submenu, select the ***Info*** menu item.

A **minus sign** in front of the number of miles (kilometers) or days means that **service is overdue**. On *vehicles with Premium text message display*, ***Service since --- mi or --- days*** (***Service since --- km or --- days***) is shown in the instrument cluster display when service is overdue.

Resetting the service reminder display

If the service was not performed by an authorized Volkswagen dealer or an authorized Volkswagen Service Facility, the service reminder can be reset as follows:

Vehicles with Premium text message display:
Select the ***Settings*** menu.
In the ***Service*** submenu, select the ***Reset*** menu item.
Confirm request with the OK button on the multi-function steering wheel.

Vehicles with Basic text message display:
Switch off the ignition.
Push the 0.0 / SET button in the instrument cluster and hold down.
Switch on the ignition.
Release the 0.0 / SET button and push the ⊟ / ◷ button in the instrument cluster within about 20 seconds.

ⓘ Do **not** reset the service reminder between service intervals; otherwise, incorrect information will be displayed.

ⓘ The service reminder disappears after a few seconds when the engine is running or after the OK/RESET button on the windshield wiper lever or the OK button on the multi-function steering wheel has been pushed.

Driving checklists and warnings

🕮 Introduction

In this section you'll find information about:

Getting ready and driving safely
Driving in other countries
Driving through water on roads

More information:

- Sitting properly and safely.
- Transporting.
- Starting, shifting, parking.
- Saving fuel and helping the environment.
- Consumer information.

⚠ WARNING

Driving under the influence of alcohol, illegal drugs, narcotics and some medications may cause collisions and other accidents, severe personal injuries and even death.

- **Alcohol, illegal drugs, narcotics and some medications may severely affect perception, reaction times and safe driving, which may result in the loss of vehicle control.**

Getting ready and driving safely

🕮 Please first read and note the introductory information and heed the WARNINGS ⚠.

Checklist

Observe the following points before and during every drive for your own safety, the safety of all passengers and others ⇒⚠:

✓ Check proper function of lights and turn signals.

✓ Check tire pressure (⇒page 198) and fuel level (⇒page 167).

✓ Make sure that all windows are clean.

✓ Store items and all luggage safely in the storage compartments, in the luggage compartment and, if necessary, on the roof.

✓ Always make sure that nothing keeps the pedals from moving freely.

✓ Make sure that children are properly secured by a restraint system appropriate for their size and weight.**or! Bookmark not defined.**.

✓ Properly adjust front seats, all head restraints and mirrors to the correct height.

✓ Wear shoes that give your feet a good grip, and that give you a feel for the pedals.

✓ Make sure that the floormat on the driver side is properly fastened and cannot interfere with the pedals.

✓ Assume a proper seating position before the vehicle starts to move and keep this position while driving. Make sure that all passengers do the same.

- ✓ Properly fasten your safety belt before driving the vehicle and wear your safety belt properly at all times while driving. Make sure that all passengers do the same.
- ✓ Only transport as many passengers as there are seats and safety belts available.
- ✓ Never drive if your driving ability has been impaired, for example by medication, alcohol or illegal drugs.
- ✓ Never let passengers or phone calls distract you while driving, and never take your attention off the road while using vehicle software or adjusting vehicle equipment or accessories.
- ✓ Always adapt your speed and driving style to visibility, weather, road, and traffic conditions.
- ✓ Always obey traffic laws and speed limits.
- ✓ On long TRIPs make frequent rest stops – at least once every 2 hours.
- ✓ Secure animals in the vehicle with a system that corresponds to weight and size.

WARNING

Always observe traffic rules and posted speed limits and use common sense. Your good judgment can mean the difference between arriving safely at your destination and being seriously injured in a crash or other kind of accident.

Regular service and maintenance of your vehicle is important both for operational and driving safety and to help prolong your vehicle's service life. Always follow the scheduled maintenance intervals in the ⇒ Booklet *Warranty and Maintenance*, especially for changing the brake fluid. Hard use, frequent stop-and-go driving, driving in very dusty areas, and other factors may make it necessary to have the vehicle serviced more frequently. Ask an authorized Volkswagen dealer or an authorized Volkswagen Service Facility for more information.

Driving in other countries

Please first read and note the introductory information and heed the WARNINGS ⚠.

Checklist

Some countries have special safety standards and emissions requirements that your vehicle may not meet. Before taking your vehicle to another country, Volkswagen therefore recommends that you ask your authorized Volkswagen dealer or authorized Volkswagen Service Facility about the following issues with regard to the country to which you would like to travel:

- ✓ Should the vehicle be technically prepared for the TRIP abroad, such as masking or adjusting headlights?
- ✓ Are maintenance, repair facilities, necessary tools and testing equipment as well as spare parts readily available for your vehicle?
- ✓ Are there authorized Volkswagen dealers and authorized Volkswagen Service Facilities in the countries where you will be driving?
- ✓ For gasoline engines: Is unleaded fuel with the right octane rating readily available?
- ✓ For diesel engines: Is ultra low-sulfur diesel fuel. readily available?
- ✓ Are engine oil (⇒ page 182) and other operating fluids that meet Volkswagen quality and performance requirements available where you will be driving? For more information, please see ⇒ Booklet *Warranty and Maintenance*.
- ✓ Does the factory-installed navigation system work in the countries where you will be driving, and is navigation data available?

✓ Are special or heavy-duty tires necessary for the kind of driving expected?

NOTICE

Volkswagen is not responsible for mechanical damage that may result from substandard fuel or service or the unavailability of Genuine Volkswagen parts.

Driving through water on roads

Please first read and note the introductory information and heed the WARNINGS ⚠.

Note the following to help prevent vehicle damage when driving through water, for example on flooded roads:

- Check the depth of the water before driving through it. The water **must not be any higher than** the bottom of the vehicle body ⇒ⓘ.
- Do not drive faster than walking speed.
- Never stop the vehicle, and do not drive in reverse or switch the engine off when driving through water.
- Oncoming vehicles may create waves that raise the water level and make it too deep for your vehicle to drive through safely.

WARNING

After driving through water, mud, sludge, etc., the brakes react slower and need longer stopping distances.

- **Always dry the brakes and clean off any ice coatings with a few careful applications of the brake. Make sure not to endanger other motorists or cyclists or disobey legal requirements.**
- **Avoid abrupt or sudden braking maneuvers immediately after driving through water.**

NOTICE

- **Vehicle components such as the engine, transmission, suspension or electrical system may be severely damaged by driving through water.**
- **Never drive through salt water. Salt causes vehicle corrosion. Thoroughly rinse with fresh water all vehicle parts that were exposed to salt water.**

Technical data

Introduction

In this section you'll find information about:

Important vehicle labels
Engine data
Dimensions

Your vehicle's engine type is shown on the vehicle identification label.

The specifications in this Manual refer to the base model. The stated values may vary, depending upon different equipment or models, as well as with respect to special vehicles and vehicles exported to different countries.

More information:

- Transporting.
- Saving fuel and helping the environment.
- Fuel.
- Engine oil.
- Engine coolant.
- Tires and wheels.
- Consumer information.

WARNING

Disregarding or exceeding stated values for weights, loads, dimensions and maximum speed may result in accidents and serious personal injuries.

Important vehicle labels

Fig. 15 Vehicle identification label: shown in the example with engine identification code CBTA 3.

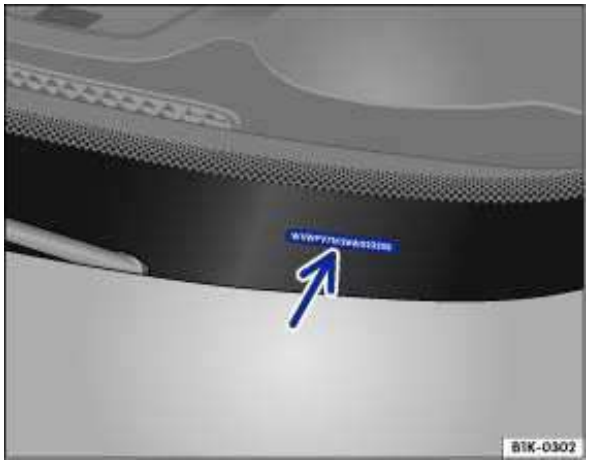

Fig. 16 Vehicle identification number (VIN).

Please first read and note the introductory information and heed the WARNINGS ⚠.

Vehicle identification number

The vehicle identification number is on a plate on top of the instrument panel on the driver side, and is visible from the outside through the windshield ⇒ fig. 16. The view window is on the side at the bottom of the windshield. The vehicle identification number is also stamped into the bulkhead in the engine compartment. Open the engine hood to read the vehicle identification number ⚠..

Vehicle identification label

The vehicle identification label ⇒ fig. 15 is affixed to the area of the spare wheel well in the luggage compartment and contains the following information:

(1) Vehicle identification number (VIN)

(2) Vehicle type, engine output, transmission

(3) Engine and transmission classification code, paint number, interior. In the example, the engine classification code is “CBTA” .

(4) Optional equipment, part numbers

Other important vehicle labels

Other important vehicle labels are discussed elsewhere in this Manual:

- **Safety Compliance Certification Label,** affixed to the driver door jamb (see., *Consumer information*).
- **Radiator fan and high voltage warning sticker** in the engine compartment next to the engine hood release (see., *Consumer information*).
- **Tire inflation pressure label** on the driver door jamb (see., *Tires and wheels*).

Engine data

Please first read and note the introductory information and heed the WARNINGS ⚠.

Gasoline engines

Maximum power output (SAE net)	Injection technology	Engine ID code	Maximum torque	No. of cylinders Displacement
170 hp at 5700 rpm (125 kW at 5700 rpm)	SRE	CBTA, CBUA 2.5L	177 lb-ft at 4250 rpm (240 Nm at 4250 rpm)	5 cylinder 151 CID (2480 ccm)
200 hp at 5100 – 6000 rpm (147 kW at 5100 – 6000 rpm)	TSI®	CCTA, CBFA 2.0T	207 lb-ft at 1700 – 5000 rpm (280 Nm at 1700 – 5000 rpm)	4 cylinder 121 CID (1984 ccm)

Diesel engines

Maximum power output (SAE net)	Injection technology	Engine ID code	Maximum torque	No. of cylinders Displacement
140 hp at 4000 rpm (103 kW at 4000 rpm)	TDI® **with** DPF	CJAA 2.0L TDI	236 lb-ft at 1750 – 2500 rpm (320 Nm at 1750 – 2500 rpm)	4 cylinders 120 CID (1968 ccm)

Dimensions

Please first read and note the introductory information and heed the WARNINGS ⚠.

Length	168.4 in. (4278 mm)
Width	71.2 in. (1808 mm)
Height (unloaded)	58.1 – 58.5 in. (1477 – 1486 mm)
Wheelbase	99.9 in. (2537 mm)
Minimum turning circle diameter (wall to wall)[2]	35.4 ft (10.8 m)
Track[2], front	61.8 – 62.2 in. (1570 – 1580 mm)
Track[2], rear	60.9 – 61.2 in. (1546 – 1556 mm)
Ground clearance (unloaded)	about 5.7 in. (144 mm)[3]

NOTICE

- **Please be careful when parking your vehicle in areas with parking barriers or curbs. These vary in height and could damage your bumper and related parts if the front of your vehicle hits a barrier or curb that is too high while you are getting into or out of a parking spot.**

---

[2] Slight differences to these figures are possible, depending on wheel and tire size fitted and the level selected.

[3] Varies depending on your vehicle's equipment (engine, tires, wheels, tire inflation pressure, driving situation and other factors).

- **Always be careful when you enter a driveway or drive up or down steep ramps or over curbs or other obstacles. Parts of the vehicle close to the ground may be damaged (such as bumper covers, spoilers, and parts of the engine, suspension, and exhaust systems).**

Vehicle key set

Introduction

In this section you'll find information about:

Remote control vehicle keys
Indicator light in the remote control vehicle key
Replacing the remote control vehicle key battery
Synchronizing the remote control vehicle key

More information:

- Volkswagen Information System
- Power locking and closing system.
- Starting and stopping the engine.
- Consumer information.
- Emergency closing and opening.

WARNING

Improper use of vehicle keys can result in serious personal injury.

- **Always take the key with you when you leave the vehicle. It can be used to start the engine and operate vehicle systems such as the power windows, leading to serious personal injury. Children or other unauthorized persons could also lock the doors and the luggage compartment.**
- **Never leave children, disabled persons, or anyone who cannot help themselves in the vehicle. The doors can be locked with the remote control vehicle key. This could leave people trapped in the vehicle in an emergency. Depending on the time of year, people trapped in the vehicle can be exposed to very high or very low temperatures.**
- **A closed vehicle can become very hot or very cold, depending on the season. Particularly in the summer, heat build-up in the passenger and luggage compartment of a parked vehicle can result in temperatures in the vehicle that are much higher than the outside temperatures. Temperatures can quickly reach levels that can cause unconsciousness and death, particularly to small children.**
- **Never remove the key from the ignition switch while the vehicle is moving or rolling to a stop. The steering wheel will lock and you will not be able to steer or control the vehicle.**

Remote control vehicle keys

Fig. 17 Remote control vehicle key with panic button.

Please first read and note the introductory information and heed the WARNINGS ⚠.

Remote control vehicle key

The remote control vehicle key can unlock and lock the vehicle from a distance.

The remote transmitter and battery are inside the remote control vehicle key. The receiver is inside the passenger compartment. The operating range of the remote control vehicle key for a fresh battery is several yards (meters) around the vehicle.

If the remote control vehicle key will not lock or unlock your vehicle, you probably need to replace the battery in the remote control vehicle key. *Replacing the remote control vehicle key battery*. If this is not the problem, the key should be resynchronized by an authorized Volkswagen dealer, an authorized Volkswagen Service Facility, or another qualified workshop. See also. *Synchronizing the remote control vehicle key*.

Folding the key bit in or out

Pressing button ⇒ fig. 17 (1) releases the key bit and folds it out.

To *fold the key bit in* press button (1) while pressing the key bit back until it clicks.

Panic button

Press the panic button (2) only in emergencies! After pushing the panic button, the horn will sound and the turn signals will flash. Press the panic button again to switch off the panic feature.

Replacement vehicle keys

The vehicle identification number is required to get a replacement key or an additional remote control vehicle key.

Up to 8 vehicle keys, each of which must be properly cut, coded, programmed, and synchronized, can be used with your vehicle.

Each new vehicle key contains a microchip and must be coded with the data from the vehicle's electronic immobilizer. A vehicle key will not work if it does not contain a microchip or contains a chip that is not coded, even if the key bit was cut correctly.

You can obtain additional or duplicate remote control vehicle keys from authorized Volkswagen dealers, authorized Volkswagen Service Facilities, and from certain independent repair facilities and locksmiths which are qualified to make remote control vehicle keys.

Each vehicle key must be programmed by an authorized Volkswagen dealer or an authorized Volkswagen Service Facility in order for it to work with your vehicle.

To find the nearest qualified independent repair facility, locksmith, or Volkswagen dealer which can cut and code replacement vehicle keys, call the VW Customer Care Hotline at 1-800-822-8987 or visit http://www.vw.com and search for “replacement keys.”

Canadian customers can contact an authorized Volkswagen dealer or Volkswagen Service Facility or call the Volkswagen Canada Customer CARE Center at 1-800-822-8987.

NOTICE

The remote control vehicle keys contain electrical components. Protect them from damage, moisture and rough handling.

Do not press the buttons on the remote control vehicle key unless you actually want to use the function in question. Since terrain and conditions vary, pressing a button on the remote control vehicle key when it is not necessary may unlock the vehicle or set off the panic alarm, even if you think you are out of range.

Remote control vehicle key functions can be temporarily disrupted by interference from transmitters near the vehicle that use the same frequency range (such as radio equipment or cellular phones).

Things between the remote control vehicle key and vehicle, bad weather, as well as a weak battery can reduce the operating range.

If the remote control vehicle key buttons.or the power locking buttons.are pushed repeatedly in quick succession, the power locking system is switched off for a brief period to help keep it from being overloaded. The vehicle is then unlocked for about 30 seconds. Unless a door or the rear hatch is opened in this span of time, the vehicle is automatically locked afterwards.

Indicator light in the remote control vehicle key

Fig. 18 Indicator light in the remote control vehicle key.

Please first read and note the introductory information and heed the WARNINGS ⚠.

If a button in the remote control vehicle key is pressed briefly, the indicator light ⇒ fig. 18 (arrow) will flash once briefly. If you push and hold a button, it flashes repeatedly.

If the indicator light in the remote control vehicle key does not come on when the button is pressed, the battery inside the key must be replaced.

A Declaration of Compliance with United States FCC and Industry Canada regulations is found in the Consumer information section of this Manual..

Replacing the remote control vehicle key battery

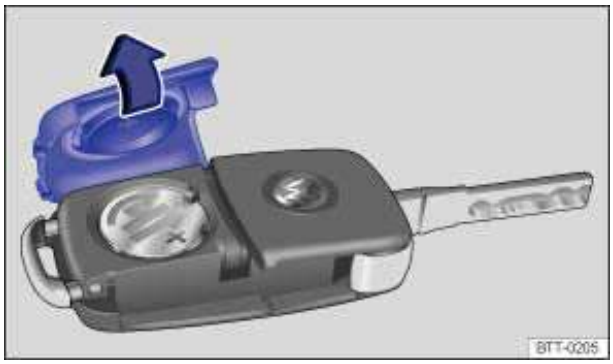

Fig. 19 Remote control vehicle key: Open battery compartment cover.

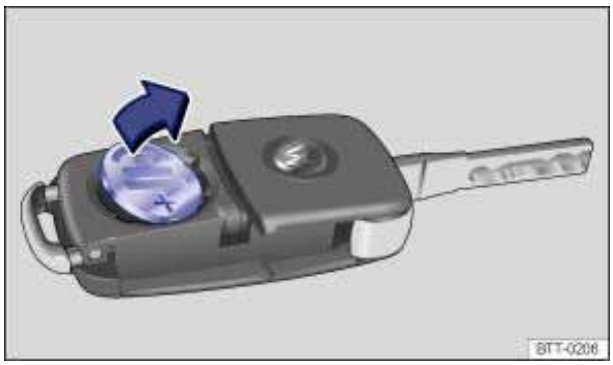

Fig. 20 Remote control vehicle key: Remove old battery.

Please first read and note the introductory information and heed the WARNINGS ⚠.

Volkswagen recommends having the battery in the remote control vehicle key changed by an authorized Volkswagen dealer or authorized Volkswagen Service Facility.

The battery is on the back of the remote control vehicle key under a cover ⇒ fig. 19.

When changing the battery, pay attention to the correct polarity and use the same type of battery ⇒ ⓘ.

Replacing the battery

- Unfold the key bit on the remote control vehicle key.
- Remove the cover on the back of the remote control vehicle key in the direction of the arrow ⇒ ⓘ.
- Use a thin object to pry the battery out of the battery compartment ⇒ fig. 20.
- Position the new battery in as shown and press it into the battery compartment (opposite to direction of the arrow) ⇒ ⓘ.
- Position the cover as shown and press it down (opposite to direction of the arrow) until you hear it click into place.

ⓘ NOTICE

- **Changing the battery improperly can damage the remote control vehicle key.**
- **Using the wrong battery can damage the remote control vehicle key. Replace a dead battery with a new one that has the same voltage, size, and specifications.**

- **Make sure the plus and minus poles of the battery are correctly positioned.**

Dispose of old batteries in an environmentally responsible manner and keep them out of the reach of children.

Batteries of the type used in your remote control vehicle key may contain **Perchlorate Material**. Special handling may apply – see http://www.dtsc.ca.gov/hazardouswaste/perchlorate. Obey all legal requirements regarding handling and disposal of these batteries. Authorized Volkswagen dealers and authorized Volkswagen Service Facilities are familiar with the requirements, and we recommend that you have them perform this service for you.

Synchronizing the remote control vehicle key

Please first read and note the introductory information and heed the WARNINGS ⚠.

If the button is pressed often while outside the operating range, it is possible that the vehicle cannot be locked or unlocked anymore with the remote control vehicle key. Synchronize the vehicle key as follows:

- Unfold the key bit on the remote control vehicle key.
- Remove the cap from the door handle on the driver door..
- Press the button on the remote control vehicle key. Stand immediately next to vehicle while doing so.
- Manually unlock the vehicle using the key bit within 1 minute. The synchronization is complete.
- Reinstall the cap.

Power locking and closing system

Introduction

In this section you'll find information about:

Description of the power locking system

Unlocking or locking the vehicle from the outside

Unlocking or locking the vehicle from the inside

Unlocking or locking vehicles with Keyless Access

Anti-theft alarm system

The power locking system works properly only when all doors and the rear hatch are completely closed. When the driver door is open, the vehicle *cannot* be locked with the remote control vehicle key.

For vehicles equipped with the Keyless Access locking and starting system, the vehicle can be locked *only* if the ignition is switched off and the driver door is closed.

Leaving the vehicle unlocked for longer periods of non-use (for example, in your garage) can cause the vehicle battery to drain so that the engine can no longer be started.

More information:

- Exterior views.
- Volkswagen Information System.
- Vehicle key set.
- Doors.
- Rear hatch
- Power windows.
- Power sunroof.
- Emergency closing and opening.

WARNING

Improper use of power locks can result in serious personal injury.

- **The power locking button locks all doors. Locking the doors from the inside can help prevent unintended door opening during a collision and can also prevent unwanted entry from the outside. Locked doors can, however, delay assistance to vehicle occupants and rescue from the outside in an accident or other emergency.**
- **Never leave children or anyone who cannot help themselves behind in the vehicle. All doors can be locked from the inside with the power lock button. This could leave people trapped in the vehicle in an emergency. Depending on the time of year, people trapped in the vehicle can be exposed to very high or very low temperatures.**
- **A closed vehicle can become very hot or very cold, depending on the season. Particularly in the summer, heat build-up in the passenger and luggage compartment of a parked vehicle can result in temperatures in the vehicle that are much higher than the outside temperatures. Temperatures can quickly reach levels that can cause unconsciousness and death, particularly to small children.**
- **Never allow passengers to remain in a locked vehicle. In an emergency any person still inside the vehicle might not be able to get out.**

Description of the power locking system

Please first read and note the introductory information and heed the WARNINGS ⚠.

The power locking system lets you unlock and lock all doors, the rear hatch, and the fuel filler flap:

- From the outside with the vehicle key.
- From the outside with Keyless Access.
- From the inside with the power locking button.

Special functions of the power locking system can be activated or deactivated by an authorized Volkswagen dealer or authorized Volkswagen Service Facility.

The doors and the rear hatch can be locked manually if the remote control vehicle key or the power locking system is not working..

Automatic locking (Auto Close)

The vehicle locks automatically when it reaches a speed of about 10 mph (15 km/h). When the vehicle is locked, the indicator light 🔒 comes on in the power locking button ⇒ fig. 22.

Automatic unlocking (Auto Open)

The vehicle unlocks automatically when the vehicle key is taken out of the ignition. On vehicles with Keyless Access, Auto Open is triggered by opening the driver door. Auto Open works only if the vehicle has been automatically locked with the Auto Close feature. The indicator light 🔒 goes out in the power locking button when the doors unlock ⇒ fig. 22.

Locking the vehicle after airbag inflation

If the airbags are activated during a collision, the entire vehicle is unlocked. Depending on the severity of the damage, the vehicle can be locked after a collision when the airbags have deployed as follows:

Function	Action
Locking the vehicle **with the power locking button**:	– Switch the ignition off. – Open and close a door once. – Press the power locking button 🔒.
Locking the vehicle **with the remote control vehicle key**:	– Switch the ignition off. **OR:** Remove the vehicle key from the ignition. – Open a door once. – Lock the vehicle with the remote control vehicle key.

Indicator light in the driver door

After the vehicle is locked:	Meaning
The red LED light flashes for about 2 seconds in short intervals, then slower.	The vehicle is locked.
Red LED light lights up continuously for about 30 seconds.	Locking system malfunction. See an authorized Volkswagen dealer or an authorized Volkswagen Service Facility.

ⓘ If the vehicle key buttons.or the power locking buttons.are pushed repeatedly in quick succession, the power locking system is switched off for a brief period to help keep it from being overloaded. The vehicle is then unlocked for about 30 seconds. Unless a door or the rear hatch is opened during this time, the vehicle is automatically locked afterwards.

Unlocking or locking the vehicle from the outside

Fig. 21 Remote control vehicle key with panic button.

Please first read and note the introductory information and heed the WARNINGS ⚠.

Function	Using the buttons on the remote control vehicle key ⇒ fig. 21
Unlock the vehicle.	Press the button.
Lock the vehicle.	Press the button.
Unlock the rear hatch.	Press the button.

Note: Depending on the central remote control settings, it may be necessary to press the button on the remote control vehicle key twice to unlock all doors and the rear hatch. If you would like to have these settings changed, please see your authorized Volkswagen dealer or authorized Volkswagen Service Facility.

The vehicle key unlocks or locks the vehicle only when the battery in the remote control vehicle key has enough power, and the remote control vehicle key is within a few yards/meters of the vehicle.

- All turn signals flash *once* and the horn beeps once to confirm that the vehicle has been locked. The horn beep can be disabled by deactivating the “ATA confirmation” feature. Please see your authorized Volkswagen dealer or authorized Volkswagen Service Facility to have this setting adjusted.
- All turn signals flash *twice* to confirm that the vehicle has been unlocked.

If the turn signals *do not* flash to confirm locking, one or more doors or the rear hatch is not locked.

If the driver door is open, the vehicle cannot be locked with the remote control vehicle key.

If the vehicle was unlocked with the remote control vehicle key and the door or the rear hatch has not been opened within a few seconds, the vehicle is automatically locked again. This feature helps prevent you from leaving the vehicle unlocked unintentionally.

NOTICE

Check to make sure that the windows go down slightly when you unlock the vehicle. Otherwise the windows and seals could be damaged when opening the door.

Unlocking or locking the vehicle from the inside

Fig. 22 In the driver and passenger doors: Power locking button.

Please first read and note the introductory information and heed the WARNINGS ⚠.

Press button ⇒ fig. 22:

v	Unlock the vehicle.
w	Lock the vehicle.

The power locking button works whether the ignition is switched on or off but only when *all* doors are closed.

If the vehicle is locked with the vehicle key, the power locking button is deactivated.

If the vehicle is locked with the power locking button:

- The yellow indicator light 🔒 in the power locking button comes on to indicate that all doors are locked.
- If the vehicle is equipped with an anti-theft alarm, the system is **not** turned on.
- Opening doors or the rear hatch from the *outside* is not possible, at a traffic light, for example.
- Doors can be unlocked and opened separately from inside the vehicle by pulling the door handle to open the door. The indicator light 🔒 goes out. The unopened doors and rear hatch remain locked and cannot be opened from the outside.
- An open driver door will not be locked. This helps keep the driver from being locked out of the vehicle.

The vehicle is unlocked if you push the 🔓 button while the vehicle is standing still. It may also be unlocked when you take the vehicle key out of the ignition or, on vehicles with Keyless Access, when you open the driver door (Auto Open). Please see your authorized Volkswagen dealer or authorized Volkswagen Service Facility to have these settings adjusted.

Unlocking or locking vehicles with Keyless Access

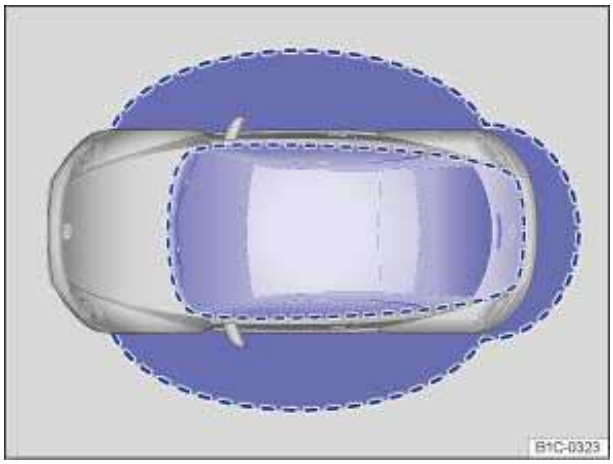

Fig. 23 Ranges of the Keyless Access locking and starting system. Outside the vehicle: Unlocking range. Inside the vehicle: Starting range.

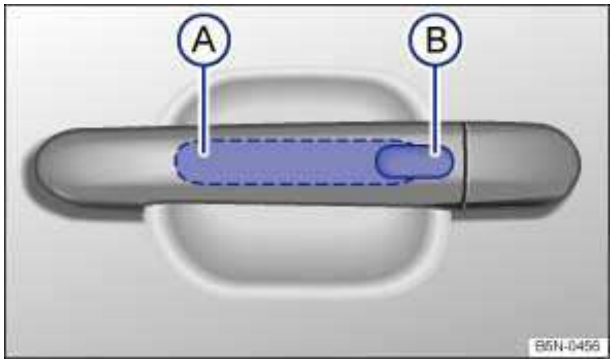

Fig. 24 Keyless Access locking and starting system: Sensor for unlocking A on the inside of the front door handles. Sensor for locking△on the outside of the front door handles.

🕮 Please first read and note the introductory information and heed the WARNINGS ⚠.

Keyless Access is a keyless starting and locking system that unlocks and locks the vehicle without active use of a remote control vehicle key. All you have to do is touch a sensor surface on one of the door handles ⇒fig. 24 or push the Volkswagen emblem on the rear hatch.when a valid remote control vehicle key is within range ⇒ⓘ.

General information

When a valid vehicle key comes within range ⇒fig. 23, the Keyless Access locking and starting system recognizes a valid vehicle entry request as soon as a door handle sensor is touched or the Volkswagen emblem on the rear hatch is pressed. The following functions are then enabled without active use of the remote control vehicle key:

- Keyless Entry: Unlocking the vehicle with the sensor surfaces on the door handles of the driver or passenger door ⇒fig. 24 (A) or by using the Volkswagen emblem on the rear hatch.
- Keyless Go: Start the engine and drive. For this, you just have to press the starter button and a valid remote control vehicle key must be inside the vehicle.
- Keyless Exit: Locking the vehicle via the door handle sensor on the driver or passenger door (B).

The power locks and the closing system work like the *standard* unlocking and locking system. Only the way that the systems are operated is different.

All turn signals flash *twice* to confirm that the vehicle has been unlocked and *once* to confirm that it has been locked.

If the vehicle was unlocked and within the next few seconds neither a door nor the rear hatch has been opened, the vehicle is automatically locked again.

Unlocking and opening doors (Keyless Entry)

- Grasp the door handle of the driver or front passenger door so that you touch the unlocking sensor surface (A).
- Open the door.

Closing and locking doors (Keyless Exit)

- Switch the ignition off.
- Close the driver door.
- Touch the sensor surface in the door handle on the driver or front passenger door (B). The vehicle is locked. The door being locked must be closed.

Unlocking and locking the rear hatch

If the vehicle is locked and a valid remote control vehicle key is within range ⇒ fig. 23 of the rear hatch, it unlocks automatically when opened.

- Open and close the rear hatch as you would a standard rear hatch.

The rear hatch locks automatically when it is closed *except* in the following situations:

- The vehicle is completely unlocked.
- When an authorized remote control vehicle key is inside the vehicle.

Locking with a second vehicle key

If a remote control vehicle key is inside the passenger compartment, the vehicle can be locked from the outside only if a second valid remote control vehicle key is within range.

When the vehicle is locked from the outside, the keyless go (starting) function of any keys left in the passenger compartment will be deactivated. All other functions (remote central locking and unlocking as well as emergency starting) remain active and unchanged.

A key that was inside the vehicle when it was locked from the outside is reactivated:

- by pressing a button on the deactivated key.
- by pressing a door handle sensor when the deactivated key is outside of the vehicle, but within range.
- by starting the engine with the starter button on the center console.

Automatic deactivation of sensors

If the vehicle has not been unlocked or locked for a longer period of time, the proximity sensors in the passenger door are automatically deactivated.

If a sensor on the door handle of a locked vehicle is activated too often, for instance by a bush or hedge that rubs against the vehicle, the sensors in the door handle on that side of the vehicle are switched off for a short time.

The door handle sensors become active again if one of the following events occurs:

- A short time has passed.
- **OR:** The vehicle is unlocked using the 🔓 button in the remote control vehicle key.
- **OR:** The rear hatch is opened.
- **OR:** The vehicle is mechanically unlocked with the vehicle key.

Convenience features

To use the convenience closing feature to close all power windows and the sunroof, hold your finger on the lock sensor surface on the outside of the door handle for a few seconds until the windows and sunroof close.

Remove your finger from the lock sensor surface ⇒fig. 24 (B) to stop the function. If you touch the unlock sensor surface (A) on the inside of the door handle immediately after releasing the lock sensor surface (B) (arrow), all of the windows will open (safety function).

Pinch protection is active during convenience closing of the windows and the power sunroof.

NOTICE

The door handle sensor surfaces can be activated by a strong stream of water or steam if a valid vehicle key is within range of the vehicle.

- **All windows may open if you turn the spray of water or steam away from and then back onto the door handle sensor surface in quick succession. If at least one power window is opened and the sensor is continuously activated, convenience closing is started.**

The door may not open if the outside and inside door handles are used at the same time.

If the vehicle battery or the battery in the remote control vehicle key is weak or dead, it might not be possible to unlock and lock the vehicle using Keyless Access. The vehicle can still be manually locked or unlocked with the key bit..

The driver message ***Key not in range*** appears in the instrument cluster display if there is no remote control vehicle key inside the vehicle or if the system does not recognize the remote control vehicle key. The key may not be recognized, for example, if it is covered by something that interferes with the signal (such as a briefcase), or if the remote control vehicle key battery is weak. Electronic devices such as cell phones can also interfere with the signal.

Dirt on the door handles that contains a lot of salt (especially in winter) can affect the way the door handle sensors work. Cleaning the door handles can help with this problem..

If the automatic transmission is not in Park **(P)** position, the electronic steering column lock will not lock and the vehicle will not lock via sensors in the front door handles or the remote control vehicle key.

Anti-theft alarm system

Please first read and note the introductory information and heed the WARNINGS ⚠.

Your vehicle is either equipped with an anti-theft alarm system or pre-equipped for anti-theft alarm system installation. If the vehicle is pre-equipped for installation of the anti-theft alarm system, the alarm system can be retrofitted by an authorized Volkswagen dealer or an authorized Volkswagen Service Facility.

The anti-theft alarm system makes it more difficult for someone to break into or steal the vehicle.

The anti-theft alarm system is automatically activated when the vehicle is locked by pressing the lock button on the remote control vehicle key.

When is the alarm triggered?

The anti-theft alarm system sounds for about 30 seconds and the turn signals flash for up to 5 minutes if the following occurs with respect to the locked vehicle:

- Opening a door that has been mechanically unlocked.
- Forcibly opening a door.
- Forcibly opening the engine hood.
- Forcibly opening the rear hatch.
- Switching on the ignition with an invalid key.
- Disconnecting the vehicle battery.

Deactivating the alarm

Unlock the vehicle with the unlock button on the remote control vehicle key or switch on the ignition with a valid vehicle key.

For vehicles with Keyless Access, the alarm can be deactivated by holding the remote control vehicle key to the right of the steering column trim and pressing the starter button..

After the alarm has stopped and the vehicle is opened again in the same or a different area that is protected by the alarm, the alarm is triggered again. For example, the alarm will sound again if the rear hatch is opened after one of the doors has been opened.

The anti-theft alarm system is **not** activated when the vehicle is locked with the power lock switch 🔒 on the inside of the driver or front passenger doors.

If the driver door is mechanically unlocked using the vehicle key bit, only the driver door is unlocked, not the entire vehicle. Switching on the ignition deactivates the anti-theft alarm system and activates the central locking button. To unlock the doors, use the central locking button or remote control vehicle key.

If the vehicle battery is dead or weak, the anti-theft alarm system will not work properly.

Doors

Introduction

More information:

- Exterior views.
- Vehicle key set.
- Power locking and closing system.
- Power windows.
- Emergency closing and opening.

WARNING

A door that is not closed properly may open suddenly when the vehicle is moving and cause severe injuries.

- **Stop immediately and close the door.**
- **Make sure that the door is safely and completely latched when closed. The closed door must be flush with the surrounding auto body parts.**
- **Open or close doors only if no one is in the way.**

WARNING

A door kept open with the door stop may close in strong winds or on inclines and cause injuries.

- **Always hold doors by the door handle while opening and closing.**

NOTICE

Check to make sure that the windows go down slightly when you unlock the vehicle. Otherwise the windows and seals could be damaged when opening the door.

Rear hatch

Introduction

In this section you'll find information about:

Warning light
Opening the rear hatch
Closing the rear hatch

More information:

- Exterior views.
- Power locking system.
- Transporting.
- Emergency closing and opening.

WARNING

Accidents and severe personal injuries can result if you unlock, open, or close the rear hatch when someone is in the way.

- **Only open or close the rear hatch if no one is in the way.**
- **Never close the rear hatch by pushing on the rear window with your hand. The rear window could break and cause injuries.**
- **After closing the rear hatch, always make sure that it is properly closed and locked so that it cannot open suddenly when the vehicle is moving. The closed rear hatch must be flush with the surrounding auto body parts.**
- **Always keep the rear hatch closed while driving to help keep poisonous exhaust gas from being drawn into the vehicle.**
- **Never open the rear hatch when a luggage rack is installed and loaded. If, for example, there are bicycles on a carrier on the rear hatch, it is possible that the rear hatch will be difficult to open. An open rear hatch may fall on its own because of the additional weight. If necessary, prop open the rear hatch. Remove the weight from the luggage rack first.**
- **Close and lock the rear hatch and all doors when the vehicle is not in use. First, make sure that no one is left inside the vehicle.**
- **Never leave your vehicle unattended or let children play around your vehicle, especially when the rear hatch is open. A child could crawl into the vehicle and pull the rear hatch shut, becoming trapped and unable to get out. A closed vehicle can become very hot or very cold, depending on the season. Particularly in the summer, heat build-up in the passenger and luggage compartment of a parked vehicle can result in temperatures in the vehicle that are much higher than the outside temperatures. Temperatures can quickly reach levels that can cause unconsciousness and death, particularly to small children.**
- **Never leave children or anyone who cannot help themselves behind in the vehicle. They may lock the vehicle with the vehicle key or the power locking button and lock themselves in.**

NOTICE

Before opening or closing the rear hatch, make sure there is enough room to do so, for example, when the vehicle is in a garage.

- **Do not place any objects on the rear spoiler. The rear spoiler could be damaged.**

- **If the vehicle must be pushed, do not push against the rear spoiler. The rear spoiler and the rear hatch could be damaged.**

Warning light

Please first read and note the introductory information and heed the WARNINGS ⚠.

Lights up	Possible cause	Proper response
OR icon appears in the display	Rear hatch open or improperly closed.	**Stop!** Open the rear hatch and then close it again.

When the ignition is switched on, several warning and indicator lights come on briefly for a function check. They go out after a few seconds.

If the rear hatch is not closed properly, the warning light comes on in the instrument cluster or the vehicle icon appears in the instrument cluster display showing an open rear hatch.

Depending on your vehicle's equipment and options, the red warning light or icon may still be displayed even after the ignition is switched off as long as the key has not been taken out of the ignition. The icon in the instrument cluster display goes out about 15 seconds after the vehicle has been locked.

WARNING

If the rear hatch is not closed properly, it may open suddenly when the vehicle is moving and cause severe injuries.

- **Stop immediately and close the rear hatch.**
- **Always make sure the rear hatch is securely latched after you close it.**

Opening the rear hatch

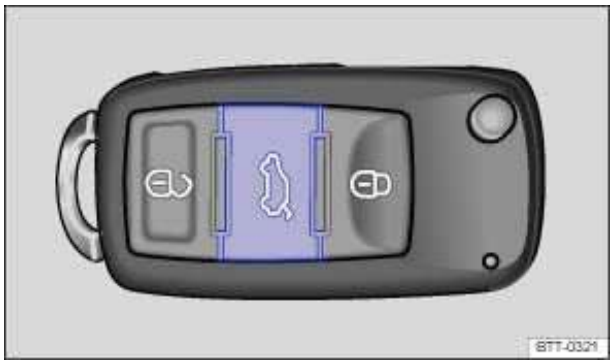

Fig. 25 In the remote control vehicle key: Button to unlock and open the rear hatch.

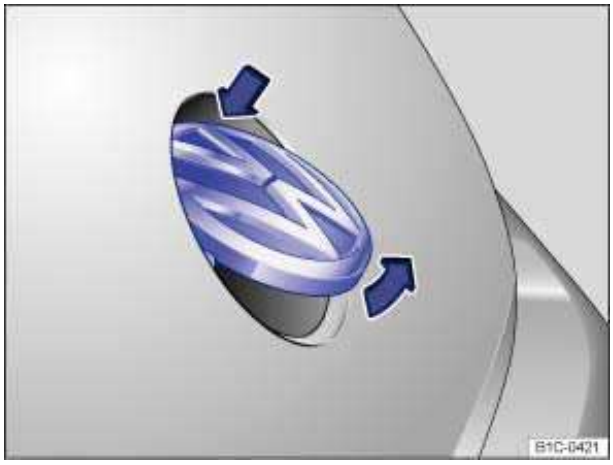

Fig. 26 Opening rear hatch from the outside.

Please first read and note the introductory information and heed the WARNINGS ⚠.

Always remove any item(s) being transported on the rear hatch before opening it ⇒ ⚠.

Unlocking with the vehicle key

- Briefly press the button on the remote control vehicle key ⇒ fig. 25 to *unlock* the rear hatch.
- Press and hold the button on the remote control vehicle key to *unlatch* the rear hatch. Then open the rear hatch using the Volkswagen emblem.

Opening with the Volkswagen emblem

- Unlock the vehicle or rear hatch, or open a door.
- Using your thumb, press the top of the Volkswagen emblem ⇒ fig. 26 and move the top of the emblem down. Grasp the bottom part of the emblem and pull to lift the rear hatch.

⚠ WARNING

Improper or unsupervised unlocking or opening of the rear hatch can cause severe injuries. Never open the rear hatch when someone is in the way.

- **If a bicycle or luggage rack is installed on the rear hatch, it may be hard to see that the rear hatch is unlatched. An unlatched rear hatch may open suddenly when the vehicle is moving.**

ⓘ At temperatures below +32 °F (0 °C), the rear hatch may be difficult to open after you unlock it.

Closing the rear hatch

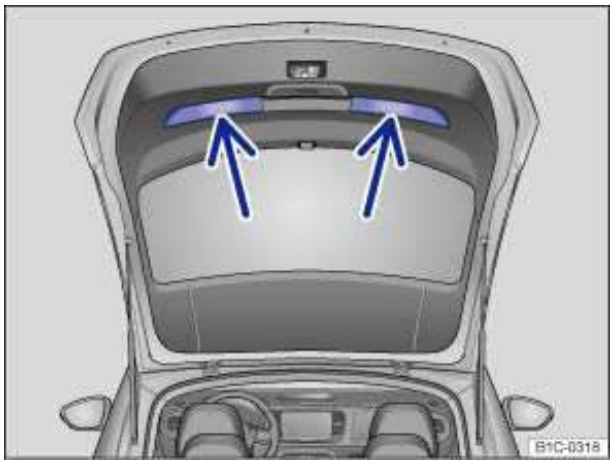

Fig. 27 Opened rear hatch: Recessed grips for closing.

Please first read and note the introductory information and heed the WARNINGS ⚠.

Closing the rear hatch

- Grasp one of the recessed grips in the rear hatch trim ⇒ fig. 27 (arrows).
- Pull the rear hatch down and close it securely so that the latch engages.
- Check the rear hatch to make sure it is securely latched.

Locking the rear hatch

If you unlock the vehicle with the vehicle key, but do not open either a door or the rear hatch in about the next 30 seconds, the vehicle is automatically locked again. This feature helps prevent you from leaving the vehicle unlocked unintentionally.

It is only possible to lock the rear hatch when it is securely closed and latched.

- The power locking system also locks the rear hatch.
- If the rear hatch of a locked vehicle is unlocked with the button on the remote control vehicle key, it will lock within about 20 seconds after it is closed. The anti-theft alarm system is activated after the vehicle is locked.
- A closed but unlocked rear hatch automatically locks at speeds above about 5 mph (10 km/h).

⚠ WARNING

Improper or unsupervised closing of the rear hatch can cause severe injuries. Never close the rear hatch when someone is in the way.

- **Never leave your vehicle unattended or let children play around your vehicle, especially with the rear hatch left open. A child could crawl into the vehicle and pull the rear hatch shut, becoming trapped and unable to get out. A closed vehicle can become very hot or very cold depending on the season. Temperatures can quickly reach levels that can cause unconsciousness or death, particularly to small children.**

ⓘ Make sure that the remote control vehicle key is not in the luggage compartment before closing the rear hatch.

Power windows

Introduction

In this section you'll find information about:

Opening and closing power windows
Power windows – features

More information:

- **Volkswagen Information System.**
- **Power locking and closing system.**

WARNING

Improper use of power windows can result in serious personal injury.

- **Never let anyone get in the way of a power window when closing it.**
- **When locking the vehicle from the outside, make sure that no one, especially children, remains in the vehicle. The windows will not open in case of an emergency.**
- **Always take the key with you when you leave the vehicle. You can still use the power windows for several minutes after the ignition is switched off as long as the driver or passenger door has not been opened.**

NOTICE

If you leave the windows open, rain or other precipitation may enter the vehicle from outside and can damage the vehicle interior.

Opening and closing power windows

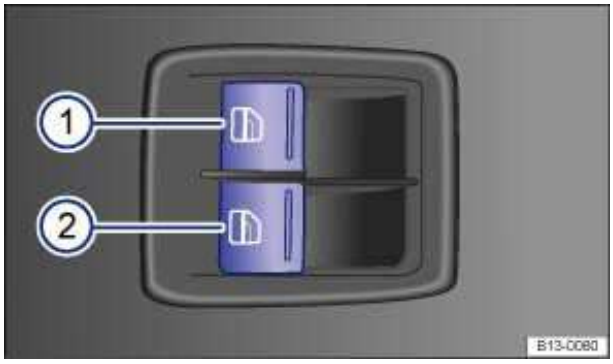

Fig. 28 In the driver door: Switches for the power windows.

Please first read and note the introductory information and heed the WARNINGS.

Switches in the driver door

Key to fig. 28:

(1) For the window in the driver door.
(2) For the window in the passenger door.

Opening or closing windows

Function	Action
Opening:	Press the switch.
Closing:	Pull the switch.
Stopping automatic movement:	Press/pull the respective switch again.

You can still use the power windows for several minutes after the ignition is switched off as long as the driver or passenger door has not been opened. When the vehicle key has been removed from the ignition and the driver door has been opened, the power windows cannot be opened or closed.

Power windows – features

Please first read and note the introductory information and heed the WARNINGS .

Automatic lowering of the windows

Closed windows in the doors will go down slightly when the vehicle is unlocked, the door handle is pulled, and after the vehicle key has been removed from the ignition ⇒.

For **vehicles with the single door unlocking function activated**, only the window in the driver door will go down slightly when the vehicle is unlocked from the outside. The window in the passenger door will also go down slightly if the vehicle is unlocked a second time.

If no doors are opened, the windows will close again after several seconds. The windows will also close if the door is closed or the vehicle is locked.

The windows can freeze to the seals at low outside temperatures and prevent the windows from going down when the vehicle is unlocked or the door is opened. **Do not open the door if the window does not go down slightly** ⇒.

- Lock the vehicle again.
- Remove the ice with deicing spray.
- Unlock the vehicle and retry the function.
- If necessary, repeat until the windows are fully operational.

One-touch opening and closing

The one-touch feature automatically opens/closes a power window all the way. The window switch does not have to be held down/up.

For one-touch opening: Press the switch for the window down briefly as far as it goes.

For one-touch closing: Pull the switch for the window up briefly as far as it goes.

Stopping automatic movement: Pull/press the switch again.

Reactivating the one-touch feature

If the vehicle battery is disconnected or dead and the windows are not completely closed, the one-touch feature will not work and must be reactivated:

- Switch on the ignition.
- Close all windows and doors.
- Pull the switch for the respective window up and hold it for at least 2 seconds in this position.
- Release the switch, pull up and hold again. The one-touch feature is now reactivated.

The one-touch feature can be reactivated for one or more windows at the same time.

Convenience closing

The convenience closing feature lets you close the windows and the power sunroof from outside the vehicle as follows:

- Manual locking: lock the vehicle with the vehicle key bit in the driver door and keep the key turned in the locking position to close all windows and the power sunroof..
- Vehicles with Keyless Access: hold your finger on the lock sensor surface on the outside of the door handle for a few seconds until the windows and power sunroof close.

Convenience closing first closes the windows and then the power sunroof.

WARNING

Improper use of power windows can result in serious personal injury.

- **Never let anyone get in the way of a power window when closing it.**
- **When locking the vehicle from the outside, make sure that no one, especially children, remains in the vehicle. The windows will not open in case of an emergency.**
- **Always take the key with you when you leave the vehicle. You can still use the power windows for several minutes after the ignition is switched off as long as the driver or passenger door has not been opened.**

NOTICE

The windows must go down slightly when you unlock the vehicle. Otherwise the windows and seals could be damaged when opening the doors.

If the power windows malfunction, the one-touch feature, as well as pinch protection may not work properly. See an authorized Volkswagen dealer or authorized Volkswagen Service Facility right away.

If convenience closing of the power windows from the outside requires removing the cover cap of the lock cylinder on the driver door, the cover cap must be reinstalled after the vehicle is locked..

Power sunroof

Introduction

In this section you'll find information about:

Opening and closing the power sunroof
Power sunroof – convenience closing feature
Initializing the power sunroof

Depending on equipment, the vehicle may be equipped with a Panoramic sliding and tilting sunroof.

More information:

- Volkswagen Information System
.• Power locking and closing system.
- Emergency closing and opening.

WARNING

Improper use of the power sunroof can result in serious personal injury.

- **Always make sure that no one is in the way of the power sunroof when it is closing.**
- **Always take the key with you when you leave the vehicle.**
- **Never leave children or disabled persons in the vehicle – particularly if they have access to the vehicle key. Unsupervised use of the remote control vehicle key makes it possible to lock the vehicle, start the engine, turn on the ignition and operate the sunroof.**
- **You can still open or close the power sunroof for several minutes after you switch off the ignition, as long as the driver or front passenger door has not been opened.**

NOTICE

- **To help prevent damage, remove ice and snow from the sunroof before opening or tilting it in winter weather.**
- **Always close the sunroof before leaving the vehicle or if it begins raining. If the sunroof is open or tilted, rain could enter the vehicle interior and cause extensive damage to the electrical system. This could result in further vehicle damage.**

Remove leaves and other objects from the sunroof guiderails regularly either by hand or using a vacuum cleaner.

If the power sunroof malfunctions, pinch protection may not function properly. See an authorized Volkswagen dealer or an authorized Volkswagen Service Facility.

Opening and closing the power sunroof

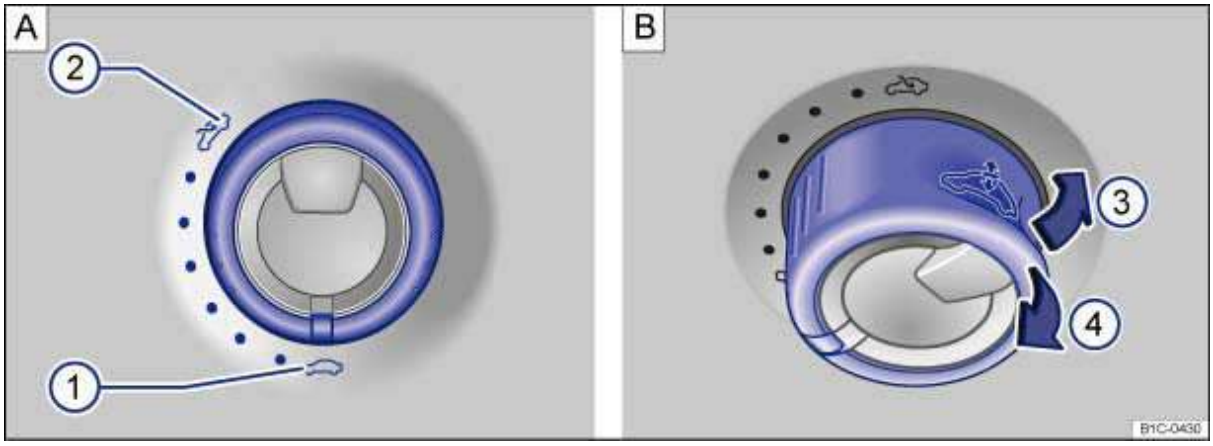

Fig. 29 In the headliner: Rotary switch for the power sunroof. A: Turn the rotary switch to slide the sunroof open or closed. B: Press or pull the switch to tilt open or to close.

Please first read and note the introductory information and heed the WARNINGS ⚠.

The rotary switch must be turned to its home position ⇒ fig. 29 (1) to tilt the power sunroof.

Function	Switch position	Action
	A	
To open the sliding sunroof to the comfort position:	(2)	Turn the switch to the desired position.
To set an intermediate position:	(1) to (2)	
To close the sliding sunroof fully:	(1)	
	B	
To tilt open the tilting roof fully:	(3)	Push the rear part of the switch briefly (arrow).
To stop the one-touch feature:	(3) or (4)	Push or pull the rear part of the switch again briefly.
To set an intermediate position:	(3) or (4)	Pull or push the rear part of the switch briefly until the desired position is reached.
To close fully:	(4)	Pull the rear part of the switch briefly (arrow).

You must switch on the ignition to operate the power sunroof. After switching off the ignition, you can still open or close the power sunroof for several minutes as long as the driver or front passenger door has not been opened.

Sliding headliner

The sliding headliner must be manually opened and closed.

Power sunroof – convenience closing feature

Please first read and note the introductory information and heed the WARNINGS ⚠.

Convenience closing

The convenience closing feature lets you close the power sunroof as follows:

- Remove the cover cap from the concealed lock cylinder on the driver door..
- Turn the vehicle key bit in the lock of the driver door to the closing position and hold it there. The power sunroof closes. Release the vehicle key to stop the process.
- Vehicles with Keyless Access: hold your finger on the lock sensor surface on the outside of the door handle for a few seconds until the windows and power sunroof close.

Convenience closing first closes the windows and then the power sunroof.

ⓘ Convenience closing of the power sunroof from the outside leaves the rotary switch in the last selected position. The switch must be newly positioned when starting to drive again.

ⓘ If convenience closing of the power sunroof requires removing the cover cap of the lock cylinder on the driver door, the cover cap must be reinstalled after the vehicle is locked..

Initializing the power sunroof

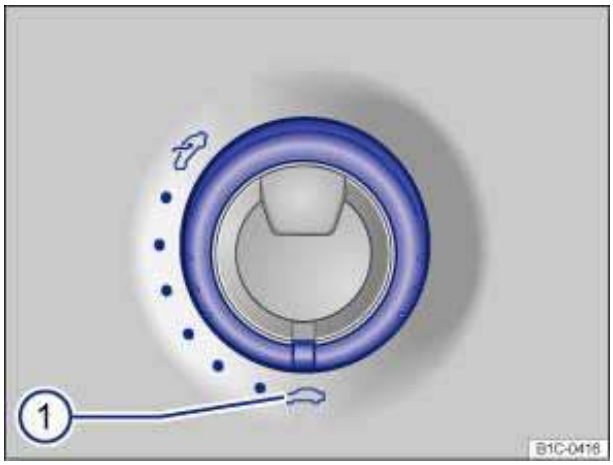

Fig. 30 In the headliner: Sunroof rotary switch.

Please first read and note the introductory information and heed the WARNINGS ⚠.

Initializing the sunroof

If the vehicle battery has been disconnected or is dead, the sunroof must be initialized.

- The switch must be rotated to the “Closed” position ⇒ fig. 30 (1).
- Pull the switch at the rear until the sunroof is fully closed.
- **The sunroof will now close without pinch protection!**
- Release the switch.
- Pull and hold the switch at the rear. The sunroof will open and close on its own.
- When the sunroof is closed once again, release the switch.

- If the sunroof still will not close, contact an authorized Volkswagen dealer or an authorized Volkswagen Service Facility.

WARNING

Careless or unsupervised use of the sunroof can cause serious injuries.

- **Always make sure that no one is in the way of the power sunroof when it is closing.**
- **Always take all vehicle keys with you when leaving the vehicle.**
- **Never leave children or persons requiring assistance unattended in the vehicle, especially if they have access to the vehicle key. Unsupervised use of the remote control vehicle key can lock the vehicle, start the engine, switch on the ignition and operate the sunroof.**
- **The sunroof can still be opened or closed for a short period after the ignition has been switched off, as long as the driver or passenger door is not opened.**

WARNING

Closing the sunroof without pinch protection can cause severe injuries.

- **Always be careful when closing the sunroof.**
- **Always make sure that no one is in the way when overriding pinch protection to close the sunroof.**
- **Pinch protection does not prevent fingers or other body parts from being pressed against the roof frame, thereby causing injury.**

If the power sunroof malfunctions, pinch protection may not function properly. See an authorized Volkswagen dealer or an authorized Volkswagen Service Facility for assistance.

Adjusting the seating position

Introduction

In this section you'll find information about:

Examples of improper seating positions
Proper seating position
Manual controls on the driver and passenger seat
Adjusting the front and rear head restraints
Removing and reinstalling the head restraints
Adjusting the steering wheel position
Center armrest

Number of seats

The vehicle has a total of **4** seating positions: 2 in front and 2 in the rear. Each seating position has a safety belt.

More information:

- Seat functions.
- Safety belts.
- Airbag system.
- Child safety and child restraints.**or! Bookmark not defined.**

WARNING

Improper seating positions increase the risk of severe or fatal injuries in a crash or other accidents, especially when the airbag deploys.

- **All occupants must sit properly and be properly restrained at all times.**
- **Never let more people ride in the vehicle than there are seating positions with safety belts available.**
- **Always secure children in the vehicle with an approved and suitable restraint system appropriate for their age, weight, and height.**or! Bookmark not defined.**,.**
- **Always keep your feet on the floor in front of the seat. Never rest them on the seat, instrument panel, out of the window, etc. The airbag system and safety belt will not be able to protect you properly and can even increase the risk of injury in a crash.**

WARNING

Always adjust seat, safety belts, and head restraints properly before driving and make sure that all passengers are properly restrained.

- **Push the passenger seat as far back as possible. Always be sure that there are at least 10 inches (25 cm) between the front passenger's breastbone and the instrument panel.**
- **Always adjust the driver's seat and the steering wheel so that there are at least 10 inches (25 cm) between your breastbone and the steering wheel.**
- **Adjust the driver's seat so that you can easily push the pedals all the way to the floor while keeping your knee(s) slightly bent. The distance to the instrument panel in the knee area must be at least 4 inches (10 cm).**
- **If these requirements cannot be met for physical reasons, contact an authorized Volkswagen dealer or an authorized Volkswagen Service Facility to see whether adaptive equipment is available.**
- **Always hold the steering wheel on the outside of the steering wheel rim with your hands at the 9 o'clock and 3 o'clock positions to help reduce the risk of personal injury if the driver's airbag inflates.**
- **Never hold the steering wheel at the 12 o'clock position or with your hands at other places inside the steering wheel rim or on the steering wheel hub. Holding the steering wheel the wrong way can cause serious injuries to the hands, arms, and head if the driver's airbag inflates.**
- **Pointing the steering wheel toward your face decreases the ability of the driver's airbag to help protect you in a collision.**
- **Never drive with backrests reclined or tilted back farther than necessary to drive comfortably. The farther back the backrests are tilted, the greater the risk of injury caused by incorrect positioning of the safety belts and improper seating position.**
- **Never drive with the front seat passenger backrest tilted forward. If the front airbag deploys, the front backrest can be forced backward and injure passengers on the rear seat.**
- **Sit as far back as possible from the steering wheel and the instrument panel.**
- **Always sit upright with your back against the backrest with the front seats properly adjusted. Never lean against or place any part of your body too close to the area where the airbags are located.**
- **Rear seat passengers who are not properly seated and restrained are more likely to be seriously injured in a crash.**

WARNING

Improper adjustment of the seats can cause accidents and severe injuries.

- **Never adjust the seats while the vehicle is moving. Your seat may move unexpectedly and you could lose control of the vehicle. In addition, you will not be in the correct seating position while adjusting the seats.**
- **Adjust the front seat height, angle and longitudinal direction only if the seat adjustment area is clear.**
- **The adjustment of the front seats must not be restricted by things in the footwell in front or behind the seats.**

Examples of improper seating positions

Please first read and note the introductory information and heed the WARNINGS ⚠.

Not wearing or improperly fastening safety belts increases the risk of severe or fatal injuries. Safety belts can work only when they are properly positioned on the body. An improper seating position significantly impairs the protection provided by safety belts. This can cause severe or even fatal injuries. Improper seating positions also increase the risk of serious injury or death when an airbag deploys and strikes an occupant who is not in the proper seating position. The driver is responsible for all passengers and especially children riding in the vehicle.

The following are only some examples of seating positions that will increase the risk of serious injury or death.

Therefore, whenever the vehicle is moving:

- Never stand up in the vehicle.
- Never stand on the seats.
- Never kneel on the seats.
- Never ride with the seat backrest reclined.
- Never lean up against the instrument panel.
- Never lie down on the rear seat.
- Never sit on the edge of the seat.
- Never sit sideways.
- Never lean out the window.
- Never put your feet out the window.
- Never put feet on the instrument panel.
- Never rest your feet on the seat cushion or back of the seat.
- Never ride in the footwell.
- Never sit on the front or rear center armrest.
- Never ride without your safety belt properly fastened.
- Never ride in the luggage compartment.

WARNING

Contact with parts of the vehicle interior can cause serious personal injury in a crash.

- **Always make sure that all vehicle occupants stay in a proper seating position and are properly restrained whenever the vehicle is moving.**
- **Improper seating positions increase the risk of serious and fatal injury, especially when an airbag deploys and strikes a passenger in an improper seating position.**

Proper seating position

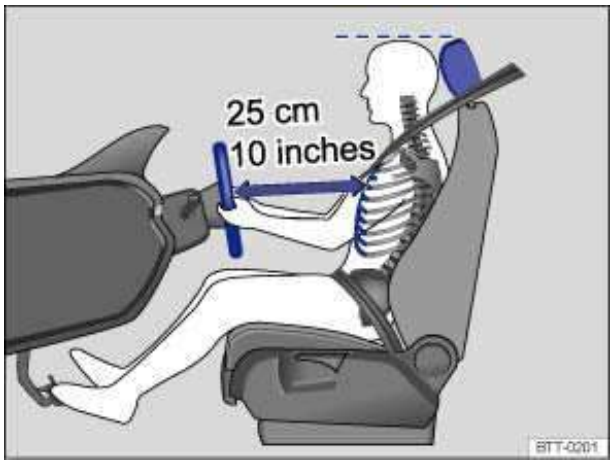

Fig. 31 The driver should never sit closer than 10 inches (25 cm) of the steering wheel.

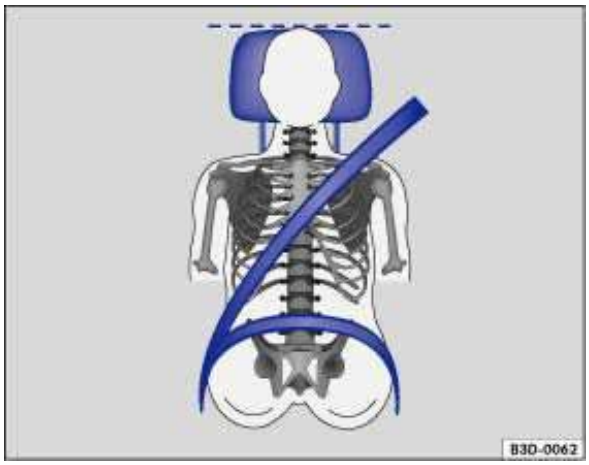

Fig. 32 Proper safety belt positioning and head restraint adjustment.

Please first read and note the introductory information and heed the WARNINGS ⚠.

The following describes the proper seating positions for the driver and front seat passenger.

If you have a physical impairment or condition that prevents you from sitting properly on the driver seat with the safety belt properly fastened and reaching the pedals, special modifications to your vehicle may be necessary. Only the proper seating position ensures optimum protection by the safety belt and airbag.

Contact your authorized Volkswagen dealer or authorized Volkswagen Service Facility or call the Volkswagen Customer CARE Center at 1-800-822-8987 for information about possible modifications to your vehicle.

For your own safety and to reduce injuries in the event of sudden braking maneuvers or accidents, Volkswagen recommends the following seating positions:

Applies to all vehicle occupants:

- Adjust head restraints so that the upper edge of the head restraint is at least at eye level or higher.

Position the back of your head as close as possible to the head restraint ⇒ fig. 31 and ⇒ fig. 32.

- Push the head restraint completely down for short people, even if the top of the head is then below the upper edge of the head restraint.
- Tall people should pull the head restraint all the way up.

- Adjust the seat backrest angle to an upright position so that your back is in full contact with it when the vehicle is moving.
- Always keep both feet on the floor and in the footwell whenever the vehicle is moving.
- Always adjust and fasten safety belts properly.

Driver–seat and steering wheel adjustment:

- Adjust the steering wheel so that there are at least 10 inches (25 cm) between the steering wheel and your breast bone ⇒fig. 31. When adjusting the proper distance to the steering wheel, grasp the top of the steering wheel with your elbows slightly bent.
- Always hold the steering wheel on the outside of the steering wheel rim with your hands at the 9 o'clock and 3 o'clock positions to help reduce the risk of personal injury if the driver's airbag inflates.
- Never hold the steering wheel at the 12 o'clock position or with your hands at other places inside the steering wheel rim or on the steering wheel hub. Holding the steering wheel the wrong way can cause serious injuries to the hands, arms, and head if the driver's airbag inflates.
- Adjust the steering wheel so that the steering wheel cover points at your chest and not at your face. Pointing the steering wheel toward your face decreases the ability of the driver's airbag to help protect you in a collision.
- Adjust the driver's seat so that you can easily push the pedals all the way to the floor while keeping your knee(s) slightly bent.
- Adjust the seat height so that the top point of the steering wheel can be reached.
- Always keep both feet in the footwell so that you are in control of the vehicle at all times.

Passenger–front seat adjustment:

- Push the passenger seat as far back as possible in order to ensure optimum protection if the airbag is deployed.

Manual controls on the driver and passenger seat

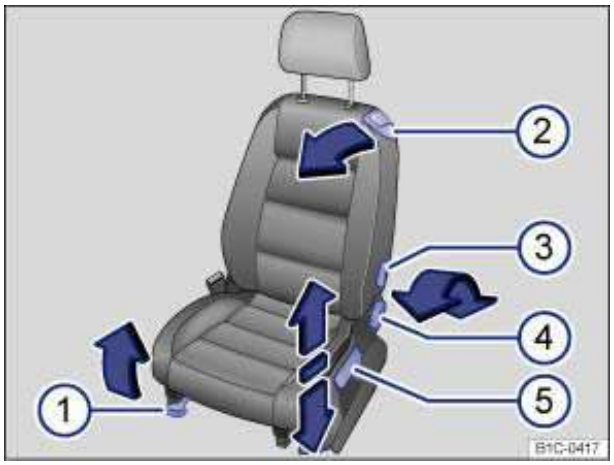

Fig. 33 Controls on the left front seat.

🕮 Please first read and note the introductory information and heed the WARNINGS ⚠.

The controls on the front passenger seat mirror those on the driver seat.

fig. 33	Function	Action
(1)	Move the front seat forward or back.	Pull the lever up and move the front seat. The front seat must lock in place after the lever is released!

fig. 33	Function	Action
(2)	Fold the backrest forward and back into the upright position	*Folding forward:* Pull the handle and fold the backrest forward while pushing the seat forward.
		Folding back into the upright position: Push the seat all the way back, and fold the backrest back into the upright position. The backrest must lock in place!
(3)	Lumbar support control.	Pull the lever up or push it down.
(4)	Adjust the backrest angle.	Lean forward and turn the adjuster wheel forward or backward.
(5)	Adjust the seat height.	Move the lever several times up or down.

Adjusting the front and rear head restraints

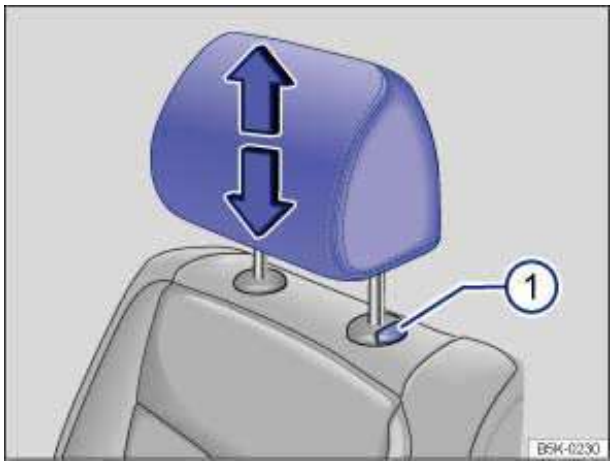

Fig. 34 Adjusting the head restraints.

Please first read and note the introductory information and heed the WARNINGS ⚠.

All seats are equipped with head restraints.

There are notches in the head restraint guide rods so that the head restraint can lock into place. Only properly installed head restraints can lock into place at the adjustment range notches. In order to prevent inadvertent removal of the head restraints after installation, there are stops at the top and bottom of the adjustment range.

Adjusting the height

- Push the head restraint up in the direction of the arrow or down when the button ⇒ fig. 34 (1) is pressed ⇒ ⚠.
- The head restraint must lock securely in the position selected.

Proper head restraint adjustment

Adjust head restraints so that the upper edge of the head restraint is at least at eye level or higher. Position the back of the head as close as possible to the head restraint.

Adjusting the head restraint for short people

Push the head restraint down as far as it will go, even if this means the person's head is still below the top edge of the head restraint. A small gap may remain between the head restraint and the backrest when the head restraint is all the way down.

Adjusting the head restraint for tall people

Pull the head restraint up as far as it will go.

WARNING

Driving without head restraints or with improperly adjusted head restraints increases the risk of serious injuries in a collision.

- **Always drive with the head restraints in place and properly adjusted to help minimize the risk of neck injury in crash.**
- **Every person in the vehicle must have a properly adjusted head restraint to minimize the risk of neck injury in a crash. Each head restraint must be adjusted according to the occupants' size so that the upper edge is even with the top of the person's head, but no lower than eye level. Always sit so that the back of your head is as close as possible to the head restraint.**
- **Never adjust head restraint while driving.**

Removing and reinstalling the head restraints

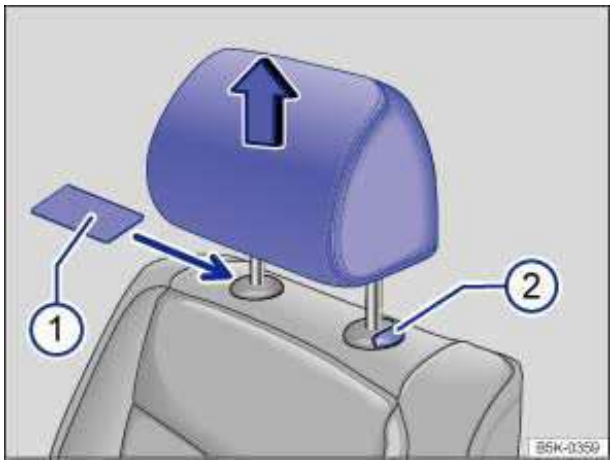

Fig. 35 Removing the head restraints.

Please first read and note the introductory information and heed the WARNINGS ⚠.

All seats are equipped with head restraints.

Removing the front head restraints

- Sit in the back seat behind the head restraint you want to remove.
- Pull the head restraint all the way up ⇒ ⚠ in *Adjusting the front and rear head restraints*. Recline the backrest with the head restraint so that there is enough overhead clearance to remove it.
- Slide a flat object, such as a plastic credit card, underneath the right side of the cap on the right-hand seat guide rod ⇒ fig. 35 (1) to unlock the head restraint.
- Push the flat object (plastic card) in against the guide rod to depress a release button located under the cap (not visible).

- Use one hand to hold the release button in with the flat object. With your other hand, lift the same guide rod slightly to expose a notch in the rod at the bottom (can be seen and felt with fingers). The right-hand guide rod is now released.
- To release the left-hand guide rod, press button (2) in (towards guide rod) and hold.
- Pull the head restraint out completely while holding button (2).

Installing the front head restraints

- Position head restraint properly over the head restraint guides of the respective seat backrest and insert the head restraint into the guides.
- Push the head restraint down while pressing button (2).
- Move the seat backrest into an upright position using the adjusting wheel.
- Adjust the head restraint according to the occupant's size.

Removing the rear head restraint

- Unlock the backrest of the rear seat bench and fold it forward.
- Pull the head restraint all the way up ⇒ ⚠.
- If necessary, slide a flat object such as a plastic card between the backrest cover and the cover cap of the head restraint guide rod (1) to unlock the head restraint.
- At the same time press button (2) while a second person pulls out the head restraint completely.
- Fold the backrest of the rear seat bench back so that it locks securely.

Reinstalling the rear head restraint

- Unlock the backrest of the rear seat bench and fold it forward.
- Position head restraint properly over the head restraint guides of the respective seat backrest and insert the head restraint into the guides.
- Push the head restraint down while pressing button (2).
- Fold the backrest of the rear seat bench back so that it locks securely.
- Adjust the head restraint according to the occupant's size.

⚠ WARNING

Driving without head restraints or with improperly adjusted head restraints increases the risk of serious injuries in a collision.

- **Always drive with the head restraints in place and properly adjusted to help minimize the risk of neck injury in crash.**
- **Always reinstall head restraints as soon as possible so that vehicle occupants are properly protected.**

NOTICE

When removing or reinstalling the head restraint, take care that the head restraint does not strike the headliner or other parts of the vehicle. The headliner or other parts of the vehicle could otherwise be damaged.

Adjusting the steering wheel position

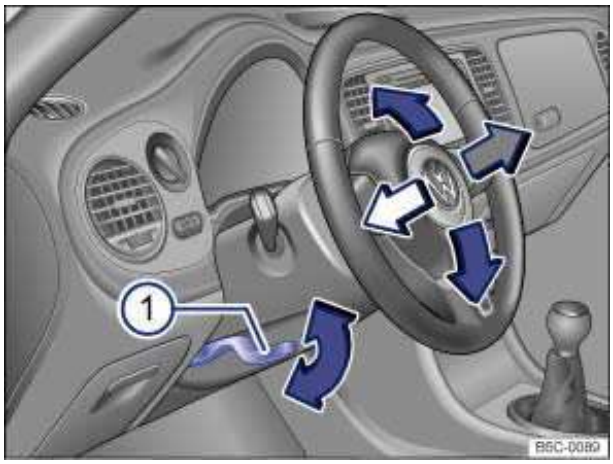

Fig. 36 Manual adjustment for the steering wheel position.

Please first read and note the introductory information and heed the WARNINGS ⚠.

Adjust the steering wheel only when the vehicle is not moving.

- Push down on the lever ⇒ fig. 36 (1).
- Adjust the steering wheel so that it can be held with hands at the 9 o'clock and 3 o'clock positions on the outside of the steering wheel rim and with the arms slightly bent at the elbow.
- Pull the lever up firmly until it is flush with the steering column ⇒ ⚠.

⚠ WARNING

Improper use of the steering column adjustment feature can result in serious personal injury and even death.

- **Always pull the lever (1) firmly upward after adjusting the steering column so that the steering wheel does not change position suddenly while the vehicle is moving.**
- **Never adjust the steering column while the vehicle is moving. If you find that you need to adjust the steering wheel while driving, stop the vehicle in a safe place and make the proper adjustment.**
- **Never adjust the steering wheel so that it points toward your face. Always make sure that the steering wheel points toward your chest. Otherwise, the airbag system cannot protect you properly in the event of a crash.**
- **Always hold the steering wheel on the outside of the steering wheel rim with your hands at the 9 o'clock and 3 o'clock positions to help reduce the risk of serious personal injury if the driver's airbag inflates.**
- **Never hold the steering wheel at the 12 o'clock position or with your hands anywhere inside the steering wheel or on the steering wheel hub. Holding the steering wheel the wrong way increases the risk of severe injury to the arms, hands, and head if the driver airbag deploys.**

Center armrest

Fig. 37 Front center armrest.

Please first read and note the introductory information and heed the WARNINGS ⚠.

Your vehicle may be equipped with a front center armrest.

Front center armrest

There is a storage compartment in the center armrest..

To *raise* the center armrest, pull the armrest upward in the direction of the arrow ⇒ fig. 37.

To *lower* the center armrest, first lift it all the way up. Then you can push the center armrest down until it latches in place.

⚠ WARNING

The center armrest can restrict the driver's arm movement and cause crashes and serious personal injury.

- **Always keep storage compartments in the center armrest closed while driving.**
- **Never let a passenger, especially a child, ride on the center armrest. Improper seating position can increase the risk of serious personal injury in a crash.**
- **Never put hot drinks or other liquids in the cup holder. Hot liquids can spill when the vehicle is moving as well as during braking or other sudden maneuvers.**

Seat functions

Introduction

In this section you'll find information about:

Seat heating

More information:

- Adjusting the seating position.
- Safety belts.
- Airbag system.
- Child safety and child restraints.**or! Bookmark not defined.**

• Outside mirrors. ⚠ WARNING
Improper use of seat adjustment controls can cause severe personal injuries. • **Always sit properly at all times before starting to drive and while the vehicle is moving. Make sure all passengers, especially children, are properly seated whenever the vehicle is moving.** • **Keep hands, fingers, feet and other body parts away from moving parts and adjustment areas of the seats.**

Seat heating

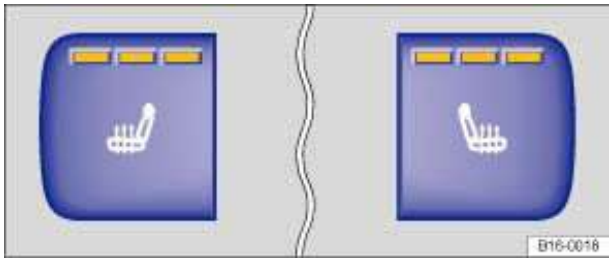

Fig. 38 In the center console: Seat heating buttons for the front seats.

Please first read and note the introductory information and heed the WARNINGS ⚠.

When the ignition is switched on, the front seats can be electrically heated by heating elements that warm the seat backrest and cushion.

Do not use the seat heating if any of the following conditions apply:

- If the seat is not being used.
- If there is a child restraint installed on the front passenger seat.
- If there is a blanket or seat cover on the front passenger seat.
- If the seat is damp or wet.
- If the outside temperature or the temperature inside the passenger compartment is 77 °F (25 °C) or more.

Function	Action for seat heating ⇒ fig. 38
Switch on:	Press the ⌟ or ⌞ button. Seat heating is switched on to maximum.
Adjust the heating level:	Press the ⌟ or ⌞ button repeatedly until the desired heating level is set.
Switch off:	Press the ⌟ or ⌞ button repeatedly until all indicator lights in the button are off.

Special seat heating features

On the driver and the passenger side, the seat heating will resume at the setting that was set when the ignition was switched off. However, this feature only works if the key is not taken out of the ignition switch, or, for vehicles with Keyless Access, the driver door is not opened or the vehicle is not locked.

People suffering from a low level of perceived pain or a lowered awareness of pain as from medication, paralysis, or chronic illness (e.g. diabetes) should NEVER use the seat heating feature ⇒ ⚠!

The use of seat heating by persons with these conditions could result in burns to the back, buttocks, and legs that may take a long time to heal and may never heal completely. If you have any of these conditions, you should take regular breaks and get out of the vehicle, particularly on long trips. Consult your doctor for advice regarding your specific condition.

⚠ WARNING

Certain medical conditions, such as paralysis and diabetes, and certain medications can increase the risk of serious burns when the seat heating feature is switched on.

- **Vehicle occupants who have a low level of perceived pain or a lowered awareness of pain can receive serious burns to the back, buttocks, and legs that take a long time to heal or may never heal completely.**
- **Never use the seat heating feature if you or your passengers are at risk of being burned because of a medical condition. Take regular breaks and get out of the vehicle, particularly on long trips. Consult your doctor for advice regarding your specific condition.**
- **Never let exposed skin remain in contact with the seat upholstery when the seat heating is being used.**

⚠ WARNING

A wet seat can cause the seat heating to malfunction and increase the risk of serious burns.

- **Always make sure the seats are dry before using the seat heating.**
- **Never sit on the seat with wet clothes.**
- **Never put damp or wet things including clothes on the seat.**
- **Never spill liquids on the seats.**

NOTICE

- **To help prevent damage to electrical and other parts in the seat, do not kneel on the front seats or apply concentrated pressure to a small area of the seat or backrest.**
- **Liquids, sharp objects and things that do not let the heat in the seat escape into the air, including, for example, a child restraint, a blanket, or seat covers on the seat can damage seat heating.**

- **If you smell an odor, immediately shut off seat heating and have it checked by an authorized Volkswagen dealer or authorized Volkswagen Service Facility.**
- **Never install leather upholstery on a vehicle with seat heating that originally had cloth upholstery. The seat heating elements for seats with cloth seats will overheat if the cloth upholstery is replaced with leather upholstery.**

Switch off seat heating when it is not needed to help reduce unnecessary fuel consumption.

Lights

Introduction

In this section you'll find information about:

Indicator lights
Turn signal lever and high beam switch
Switching lights on and off
Lights and vision features
Lights and vision features
Instrument panel lighting and headlight range adjustment
Interior and reading lights

Always obey local vehicle lighting laws.

The driver is always responsible for the correct headlight settings.

More information:

- Exterior views.
- Volkswagen Information System.
- Changing a light bulb.

WARNING

Crashes and other accidents can happen when you cannot see the road ahead and when you cannot be seen by other motorists.

- **Always switch on the low beam headlights at dusk or when it is dark and whenever the weather is bad or visibility is poor.**

WARNING

Headlights that are aimed too high and improper use of the headlight flasher or high beams can blind and distract other drivers. This can lead to a crash and serious personal injuries.

- **Always make sure that headlights are properly adjusted.**
- **Never use the headlight flasher or high beams when they can blind or distract other drivers.**

Indicator lights

Please first read and note the introductory information and heed the WARNINGS ⚠.

Lights up	Possible cause	Proper response
	One or more driving lights not working.	Replace burned out bulb., or If all light bulbs are OK, see an authorized Volkswagen dealer or authorized Volkswagen Service Facility.

Lights up	Possible cause	Proper response
	Fog lights switched on (indicator light on the headlight switch or the instrument cluster).	⇒page 74.
	Left or right turn signal. The indicator light blinks twice as fast if a turn signal is not working on the vehicle.	Check the turn signals on the vehicle.
	High beams switched on or headlight flashers in use.	⇒page 73.

When the ignition is switched on, several warning and indicator lights come on briefly for a function check. They go out after a few seconds.

WARNING

Failure to heed warning lights and instrument cluster text messages can cause the vehicle to break down in traffic and result in a collision and serious personal injury.

- **Never ignore warning lights or text WARNINGS.**
- **Always stop the vehicle as soon as it is safe to do so.**
- **Whenever stalled or stopped for repair, move the vehicle a safe distance off the road, stop the engine, turn on the emergency flashers, and use other warning devices to warn approaching traffic.**
- **Never park the vehicle in areas where the hot catalytic converter and exhaust system can come into contact with dry grass, brush, spilled fuel, oil, or other material that can catch fire.**
- **A broken down vehicle presents a high accident risk for itself and others. Switch on emergency flashers and set up a warning triangle to warn oncoming traffic.**

NOTICE

Failure to heed warning lights or text WARNINGS can result in vehicle damage.

High Intensity Discharge (HID) headlights provide bright, uniform lighting to help you see and be seen. The light comes from an electric arc between two electrodes in the gas-filled bulb. Over time, the electrodes can wear down and the gap between them will get wider. The HID lamp's control unit then increases the voltage to keep the arc's brightness constant. However, the commonly called "Xenon" bulbs will also ultimately burn out. Before they burn out, HID lamps can flicker. A message will then appear in the MFI. This is your reminder to see an authorized Volkswagen dealer or an authorized Volkswagen Service facility to check the headlights.

Turn signal lever and high beam switch

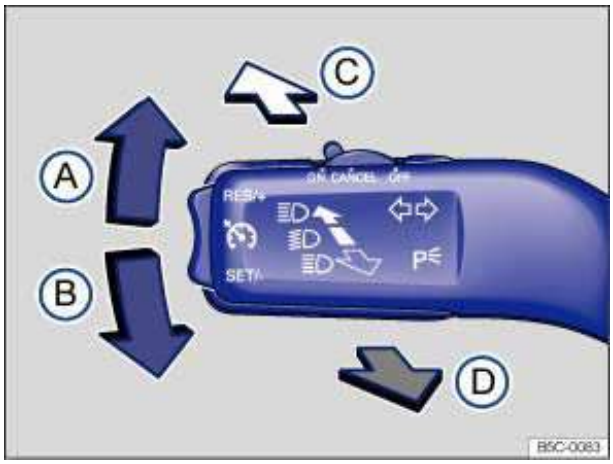

Fig. 64 Turn signal lever and high beam switch.

Please first read and note the introductory information and heed the WARNINGS ⚠.

Move the lever to the desired position.

(A) Right turn signal.

(B) Left turn signal.

(C) Switching high beams on ⇒⚠. An indicator light $ comes on in the instrument cluster when the high beams are switched on.

(D) Switching the high beams off and operating the headlight flasher. The *headlight flasher* turns on the high beams as long as the lever is pulled and manually held in the pulled position. The indicator light $ lights up. When released, the lever moves back to the home position and turns off the high beams. The indicator light $ goes out.

Move the lever back to the home position to turn the selected feature off.

Lane change signaling feature (convenience turn signal)

To use the lane change signaling feature, move the lever up or down slightly, just to the point of resistance and then release it. The turn signals and the turn signal indicator flash 3 times. If it is switched off, they flash as long as you hold the lever up or down, and go out when you release the lever.

The lane change flash feature can be deactivated by an authorized Volkswagen dealer or authorized Volkswagen Service Facility.

⚠ WARNING

Improper use of high beams can distract and blind others, causing accidents and serious injuries.

ⓘ The turn signal light works only when the ignition is switched on. The emergency flasher works even when the ignition is switched off..

ⓘ The indicator light flashes twice as fast if a turn signal bulb is burned out.

ⓘ *High beams* can only be switched on when the low beams are on.

Switching lights on and off

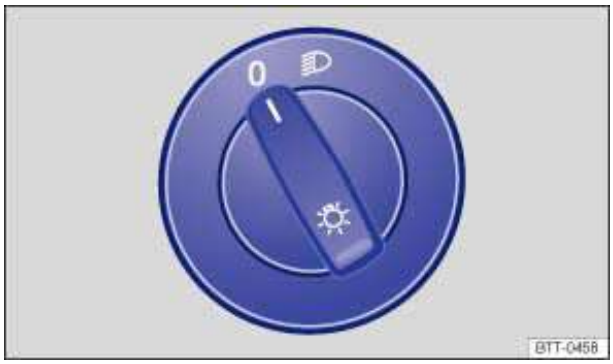

Fig. 65 Headlight switch next to the steering wheel.

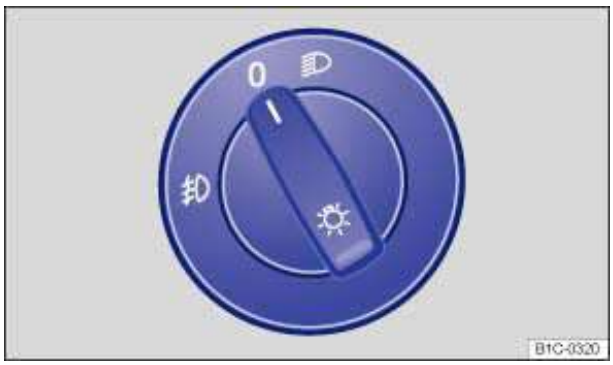

Fig. 66 Headlight switch next to the steering wheel (with fog lights).

Please first read and note the introductory information and heed the WARNINGS ⚠.

Adjust the light switch to the desired position ⇒ fig. 65 or ⇒ fig. 66:

Symbol	When the ignition is switched off	When the ignition is switched on
0	Fog lights and low beams switched off.	Headlights off, daytime running lights (DRL) on.
≣D	Low beams switched off. The DRL may stay on. The length of time they stay on depends on the vehicle battery charge.	Low beams switched on.
≣D	Fog lights switched off. The DRL may stay on for some time.	Headlights and fog lights switched on.

Fog lights

The indicator light ≣D in the headlight switch or the instrument cluster shows that the fog lights are switched on.

- To switch on the fog lights ≣D: first turn the light switch to position ≣D then pull the light switch out to the first detent.
- To switch off the fog lights, push the switch back in from the first detent. To then turn off the headlights, turn the switch to position **0**.

Acoustic warning when lights are not switched off

In the following situation, a warning chime will sound if you take the key out of the ignition and open the driver door. This is to remind you that lights are still on.

- Light switch in position ≡D.

WARNING

Daytime running lights are not bright enough to let you see ahead or be seen by others when it is dark.

- **Always switch on the low-beam headlights at dusk or when it is dark and whenever the weather is bad or visibility is poor.**
- **Never use the daytime running lights to see where you are going. They are not bright enough and will not let you see far enough ahead for safety, especially at dusk or when it is dark. Always switch on the low-beam headlights at dusk or when it is dark.**
- **The taillights do not come on with the daytime running lights. Unless the taillights are on, a vehicle cannot be seen by others in bad weather, at dusk, or when it is dark.**

In cool or humid weather, the insides of the headlights, the rear lights, and turn signals can temporarily fog up. This is normal and does not affect the service life of the vehicle's lighting system.

Applicable only in the United States

Lights and vision features

Please first read and note the introductory information and heed the WARNINGS ⚠.

Daytime running lights (DRL)

Separate lamps are installed in the headlights or in the front bumper for the daytime running lights (DRL).

When the daytime running lights are switched on, only these separate lamps come on ⇒ ⚠.

The daytime running lights are switched on whenever the ignition is switched on and the light switch is in position ○.

Daytime running lights (DRL) parking feature

Some models are equipped with a daytime running lights (DRL) parking feature that switches the daytime running lights off when the vehicle is parked and the ignition is switched on.

Function	Action
Switching the DRL off:	– Switch the ignition on. – Turn the light switch to the ○ position. – Set the parking brake.
Switching the DRL back on:	– Release the parking brake.

Static cornering lights

Your vehicle may have fog lights under the front bumper, which on some models are also static cornering lights. On some models the static cornering lights may be integrated in the headlights. At speeds below about 25 mph (40 km/h), the light on one side of the vehicle will come on automatically when you turn a corner. If you turn to the right, the right fog light comes on; turn left and the left fog light comes on. The light dims and goes out when the steering wheel is straightened out again.

When you move the selector lever to Reverse **(R)**, the static cornering lights on both sides of the vehicle may come on so that you can see the area around the vehicle better when backing up.

The static cornering lights work only when the headlights are on. The static cornering lights do not come on when the headlight switch is in the ○ position or when the fog lights themselves have been switched on.

WARNING

Crashes and other accidents can happen when you cannot see the road ahead and when you cannot be seen by other motorists.

- **Never use daytime running lights (DRL) to see where you are going. DRL are not bright enough to light up the roadway and be seen by other motorists. You will not be able to see far enough ahead for safety, especially at dusk or when it is dark. Always switch on the low-beam headlights at dusk or when it is dark.**
- **The taillights do not come on when the daytime running lights are switched on. A vehicle without taillights on cannot be seen by others in bad weather, at dusk, or when it is dark.**

In cool or humid weather, the insides of the headlights, the rear lights, and turn signals can temporarily fog up. This is normal and does not affect the service life of the vehicle's lighting system.

Applicable only in Canada

Lights and vision features

Please first read and note the introductory information and heed the WARNINGS ⚠.

Daytime running lights (DRL)

Separate lamps are installed in the headlights or in the front bumper for the daytime running lights (DRL).

When the daytime running lights are switched on, only these separate lamps come on ⇒ ⚠.

The daytime running lights are switched on whenever the ignition is switched on and the light switch is in position ○.

Static cornering lights

Your vehicle may have fog lights under the front bumper, which on some models are also static cornering lights. On some models the static cornering lights may be integrated in the headlights. At speeds below about 25 mph (40 km/h), the light on one side of the vehicle will come on automatically when you turn a corner. If you turn to the right, the right fog light comes on; turn left and the left fog light comes on. The light dims and goes out when the steering wheel is straightened out again.

When you move the selector lever to Reverse **(R)**, the static cornering lights on both sides of the vehicle may come on so that you can see the area around the vehicle better when backing up.

The static cornering lights work only when the headlights are on. The static cornering lights do not come on when the headlight switch is in the ○ position or when the fog lights themselves have been switched on.

WARNING

Crashes and other accidents can happen when you cannot see the road ahead and when you cannot be seen by other motorists.

- **Never use daytime running lights (DRL) to see where you are going. DRL are not bright enough to light up the roadway and be seen by other motorists. You will not be able to see far enough ahead for safety, especially at dusk or when it is dark. Always switch on the low-beam headlights at dusk or when it is dark.**
- **The taillights do not come on when the daytime running lights are switched on. A vehicle without taillights on cannot be seen by others in bad weather, at dusk, or when it is dark.**

In cool or humid weather, the insides of the headlights, the rear lights, and turn signals can temporarily fog up. This is normal and does not affect the service life of the vehicle's lighting system.

Instrument panel lighting and headlight range adjustment

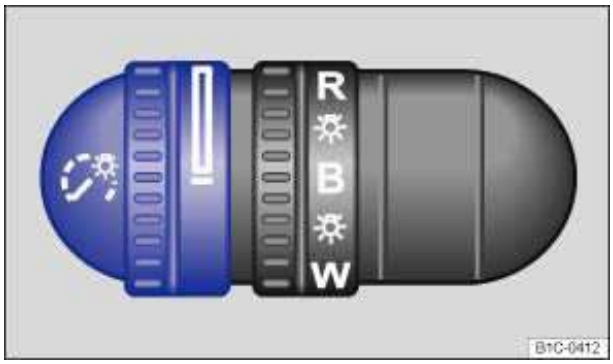

Fig. 67 To the left of the steering wheel: Thumbwheel to adjust instrument panel lighting.

Please first read and note the introductory information and heed the WARNINGS ⚠.

Instrument panel lighting

When the lights are on, the brightness of the instrument panel lighting is adjusted by turning the thumbwheel ⇒ fig. 67.

Instrument cluster brightness

When the lights are on, the brightness of the instrument cluster lighting is adjusted by turning the thumbwheel .

In some vehicles with daytime running lights (DRL), the instrument cluster lighting switches on automatically when it is dark outside or when driving through tunnels, for example. You will need to switch the headlights on manually when this happens, so that the vehicle's taillights will turn on..

Dynamic headlight range adjustment

In some vehicles with HID (Xenon) headlights, the headlight range is automatically adjusted to the vehicle loading condition once the low beams are switched on ⇒ ⚠.

WARNING

Headlights that are aimed too high because of the way the vehicle is loaded can blind and distract other drivers. This can lead to a crash and serious personal injuries.

- **Always make sure the headlights are adjusted to loading conditions so that they do not blind others.**

WARNING

If dynamic headlight range adjustment does not work properly or at all, the headlights could blind and distract other drivers. This can lead to a crash and serious personal injuries.

- **Have headlight range adjustment checked immediately by an authorized Volkswagen dealer or an authorized Volkswagen Service Facility.**

Interior and reading lights

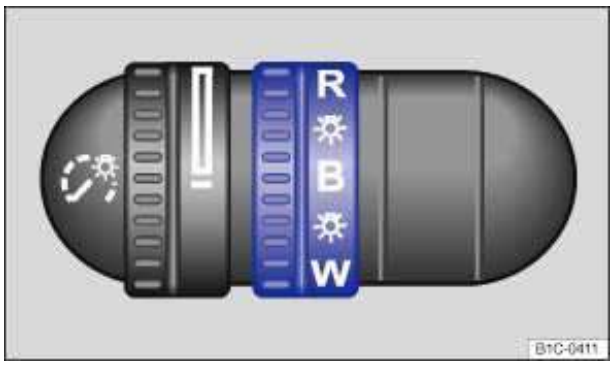

Fig. 68 Thumbwheel next to the steering wheel.

Please first read and note the introductory information and heed the WARNINGS ⚠.

Button	Function
0	Interior lights off.
	Interior lights on.
Switch in the center position	Door contact switch on. Interior lights go on automatically when the vehicle is unlocked, a door is opened, or the vehicle key is removed from the ignition. The lights go out about 20 seconds after you close the doors. They also go out when you lock the vehicle or switch on the ignition.
	Reading light on or off.

Glove and luggage compartment lights

The glove and luggage compartments may have lights that come on automatically when they are opened and go off when they are closed.

Background lighting

When the ignition and headlights are switched on, the background lighting in the roof console lights up.

There may also be footwell lighting.

Background lighting in the doors

The background lighting in the doors comes on when the ignition or headlights are switched on.

Turn the thumbwheel to the desired position ⇒ fig. 68:

Position	Background lighting color
R	Red
B	Blue
W	White
–	Background lighting switched off

The interior and reading lights go out when you lock the vehicle or a few minutes after you remove the vehicle key from the ignition. This helps to prevent unnecessary drain on the vehicle battery.

Sun protection

Introduction

In this section you'll find information about:

Sun visors
Windshield made of heat-insulating glass

WARNING

Sun visors can reduce visibility.

- **Always stow sun visors when not needed to block sun glare.**

Sun visors

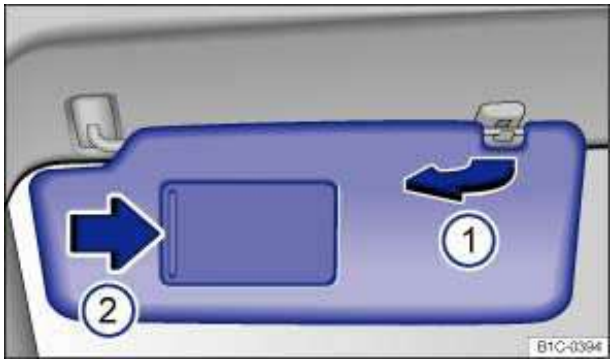

Fig. 69 Sun visor.

Please first read and note the introductory information and heed the WARNINGS ⚠.

Sun visor adjustment:

- Flip the sun visor down toward the windshield.
- Lift it out of the retaining clip ⇒ fig. 69 (1) and swivel it over toward the door.

Additional sun visor positions:

- On some vehicles, you can slide the sun visor towards the rear of the vehicle after swiveling it over to the door.

Vanity mirror

A vanity mirror is behind a cover in the sun visor. To open, slide the cover in direction of the arrow (2).

Windshield made of heat-insulating glass

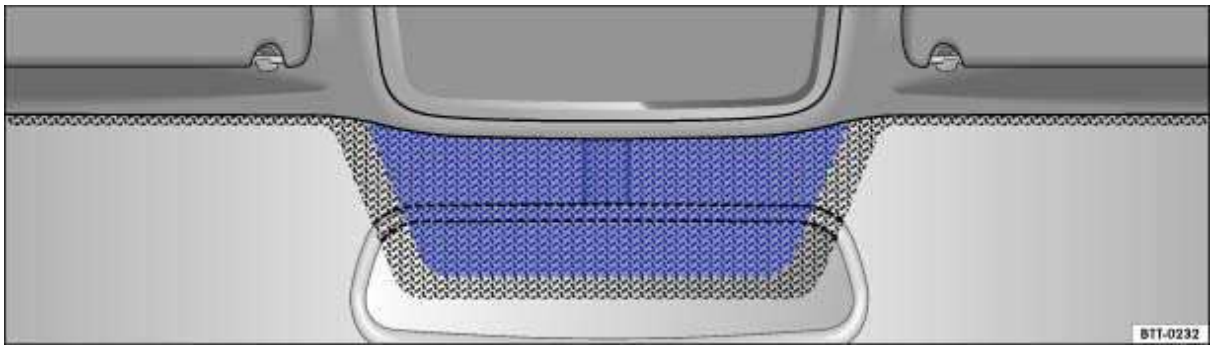

Fig. 70 Heat-reflective windshield with communications window (blue shaded area).

Please first read and note the introductory information and heed the WARNINGS ⚠.

Windshields made of insulating glass have a transparent metallic infrared-reflecting coating. There is an uncoated area (communications window) just above the inside rearview mirror ⇒ fig. 70. This serves as a communications window for transmitting signals to and from electronic components and accessories.

The uncoated area must not be blocked on the inside or outside or covered with stickers because this can cause the electronic components to malfunction.

Windshield wiper and washer

Introduction

In this section you'll find information about:

Indicator light
Windshield wiper lever
Windshield wiper functions
Windshield wiper service position
Checking and refilling windshield washer fluid

More information:

- Exterior views.
- Climate control.
- Preparations for working in the engine compartment.
- Exterior care and cleaning.

WARNING

Windshield washer fluid without enough frost protection can freeze on the windshield and reduce visibility.

- **Use the windshield washer system with enough frost protection for winter temperatures.**
- **Never use the windshield wipers/washers when it is freezing without first defrosting the windshield. The washer solution may freeze on the windshield and reduce visibility.**

WARNING

Worn or dirty wiper blades reduce visibility and increase the risk of accidents and severe injuries.

- **Always replace wiper blades that are worn, damaged, or do not keep the windshield clear.**

NOTICE

To help prevent damage to the wiper blades and the wiper motor when it is cold outside, always make sure that blades are not frozen to the windshield before operating the wipers. Using the windshield wiper service position can be helpful in cold weather so the wipers do not freeze to the windshield.

Indicator light

Please first read and note the introductory information and heed the WARNINGS.

Lights up	Possible cause	Proper response
	Not enough windshield washer fluid.	Refill windshield washer reservoir at the next opportunity.

When the ignition is switched on, several warning and indicator lights come on briefly for a function check. They go out after a few seconds.

NOTICE

Failure to heed warning lights or text WARNINGS can result in vehicle damage.

Windshield wiper lever

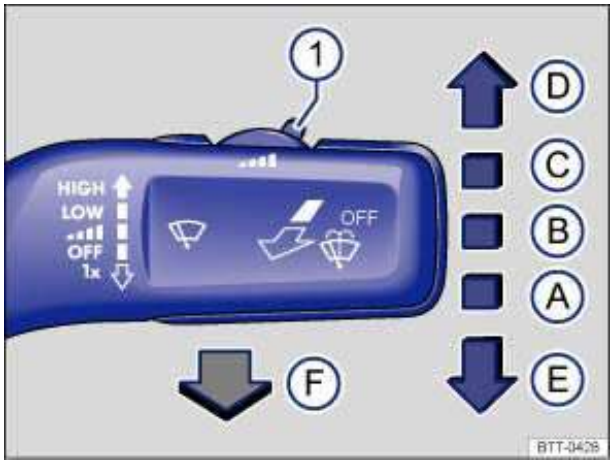

Fig. 71 Operating the front windshield wiper.

Please first read and note the introductory information and heed the WARNINGS ⚠.

Move the lever to the desired position ⇒ ⓘ:

(A)	OFF	Wiper switched off.
(B)		Intermittent wiping for the windshield. Adjust the interval settings with switch ⇒ fig. 71 (1).
(C)	LOW	Slow wiper speed.
(D)	HIGH	Fast wiper speed.
(E)	1x	One-tap wiping – brief wiping. Hold the lever pressed down longer to wipe more often.
(F)		Pull the lever toward the steering wheel to activate the windshield washers, then release.

NOTICE

To help prevent damage to the wiper blades and the wiper motor when it is cold outside, always make sure that blades are not frozen to the windshield before operating the wipers. Using the service position can be helpful in cold weather so the wipers do not freeze to the windshield.

- **If the ignition is switched off while the wipers are running, the wipers will continue at the same wiping speed when the ignition is switched on again. Frost, ice, snow, leaves, and other objects on the windshield can damage the wipers and the wiper motor.**
- **Remove snow and ice from the wipers before you begin driving.**
- **If the wiper blades freeze to the windshield, loosen them carefully. Volkswagen recommends using a deicing spray.**

NOTICE

Never switch on the windshield wipers when the windshield is dry because the windshield can be scratched.

The windshield wipers work only if the ignition is switched on.

The intermittent wiping for the front windshield depends on the driving speed. The higher the speed, the faster the wipers move.

If the wiper blades freeze to the windshield, loosen them carefully. Volkswagen recommends using a deicing spray.

Windshield wiper functions

Please first read and note the introductory information and heed the WARNINGS.

Wiper performance in different situations:

When the vehicle is not moving:	The wiper speed changes temporarily to the next lower speed.
During intermittent wiping:	Speed-dependent interval control: The higher the vehicle speed, the faster the wipers move.

Heated washer nozzles

The heating thaws frozen washer nozzles, but not the fluid supply hoses. When the ignition is switched on, the heat applied to the washer nozzles is automatically regulated depending on the outside air temperature.

If there is something on the windshield, the wiper will try to wipe it away. If it continues to block the wiper, the wiper will stop moving. Remove the obstacle and switch the wiper on again.

Windshield wiper service position

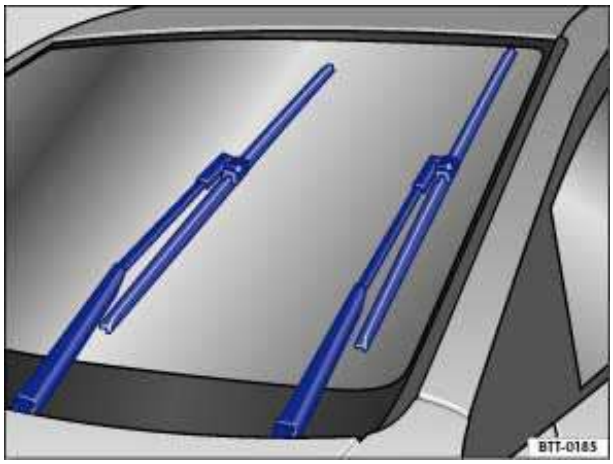

Fig. 72 Windshield wiper in service position.

Please first read and note the introductory information and heed the WARNINGS ⚠.

In the service position, the wiper arms can be lifted away from the windshield ⇒ fig. 72. The wipers are moved to the service position as follows:

- On some vehicles, the engine hood must be closed..
- Switch the ignition off, turn it on briefly, and then off again.
- Press the windshield wiper lever down briefly ⇒ fig. 71 (E) when the ignition is off.
- Wipers move into service position.

Carefully fold the wiper arms back onto the windshield before driving! Switch the ignition on and press the windshield wiper lever down briefly ⇒ fig. 71 (E). The wiper arms move back to their original position.

Lifting the wiper blades and tilting them away from the windshield

- Put the wiper arms in service position ⇒ ⓘ.
- Do not handle the wiper blades, handle the wiper arms only at the attachment above the wiper blades.

ⓘ NOTICE

- **To help prevent damage to the engine hood and the windshield wiper arms, lift the wiper arms away from the windshield only when they are in the service position.**
- **Always carefully fold the windshield wiper arms down against the windshield before driving the vehicle.**

Checking and refilling windshield washer fluid

Fig. 73 In the engine compartment: Cap of the windshield washer fluid reservoir.

Please first read and note the introductory information and heed the WARNINGS ⚠.

Check the windshield washer fluid level regularly and refill as necessary.

- Open the engine hood ⚠..
- The windshield washer fluid reservoir can be identified by the symbol on its cap ⇒ fig. 73.
- Check if there is still enough windshield washer fluid in the reservoir.
- Refill with an appropriate windshield washer fluid that is recommended by Volkswagen ⇒ ⓘ.

Follow the directions on the container.

- In cold weather, always use a special windshield washer antifreeze solution that will help keep the water from freezing ⇒ ⚠.

Recommended cleaners

- For the warmer months, Windscreen Clear SummerG 052 184 A1 or equivalent. Mixing ratio 1:100 (1 part concentrate to 100 parts water) in the windshield washer reservoir.
- All-season Windscreen ClearG 052 164 A2 or equivalent. Mixing ratio in winter to 0 °F (-18 °C) about 1:2 (1 part concentrate to 2 parts water), otherwise, mixing ratio 1:4 in the windshield washer reservoir.

Filling capacity

The windshield washer fluid reservoir holds 3.8 – 4.7 quarts (about 3.6 – 4.5 liters).

⚠ WARNING

Never mix antifreeze or similar additives into the windshield washer reservoir. This could produce an oily film on the windshield, which would considerably reduce visibility.

- **Use clear water with a cleaning solution recommended by Volkswagen.**
- **If necessary, blend with a suitable windshield washer fluid antifreeze agent.**

ⓘ NOTICE

- **Never mix cleaning solutions recommended by Volkswagen with other cleaning agents. If you do, this could cause sediments or other by-products that can clog the windshield wiper nozzles.**

- **When refilling, do not confuse one type of operating liquid with another! Otherwise serious malfunctions and engine damage can occur!**

Mirrors

Introduction

In this section you'll find information about:

Inside mirror
Outside mirrors

For your driving safety, it is important that you properly adjust the outside mirrors and the inside mirror before you start driving ⇒ ⚠.

The outside mirrors and the inside mirror help you see and adapt your driving to traffic behind you. Remember that the inside and outside rearview mirrors will not show everything behind you. There can be blind spots. Blind spots can be significantly larger if the mirrors are not properly adjusted.

More information:

- Exterior views.
- Volkswagen Information System.
- Adjusting the seating position.
- Shifting gears.
- Braking, stopping and parking.

⚠ WARNING

Adjusting mirrors when the vehicle is moving can cause driver distraction, accidents, and serious personal injury.

- **Always adjust the rearview mirrors when the vehicle is not moving.**
- **Always be aware of what is happening around the vehicle when changing lanes, passing, turning, or parking. Another vehicle, pedestrian, or object could be in your blind spot.**
- **Always make sure mirrors are properly adjusted and the view to the rear is not reduced by moisture, ice, snow, or other things.**

Inside mirror

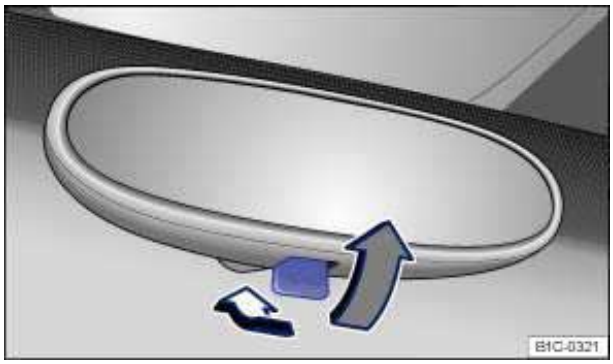

Fig. 74 Manually adjustable inside mirror.

Please first read and note the introductory information and heed the WARNINGS ⚠.

Adjust the inside mirror to make sure that there is good visibility through the rear window.

For example, visibility through the rear window could be impaired if there is a sunshade on the rear window or clothing on the luggage compartment cover, or if the rear window is covered with ice, snow, or dirt.

Manually adjustable inside mirror

- Home position: Lever on the bottom edge of the mirror points forward.
- To adjust to non-glare visibility, move the lever so that it points backward ⇒ fig. 74.

Outside mirrors

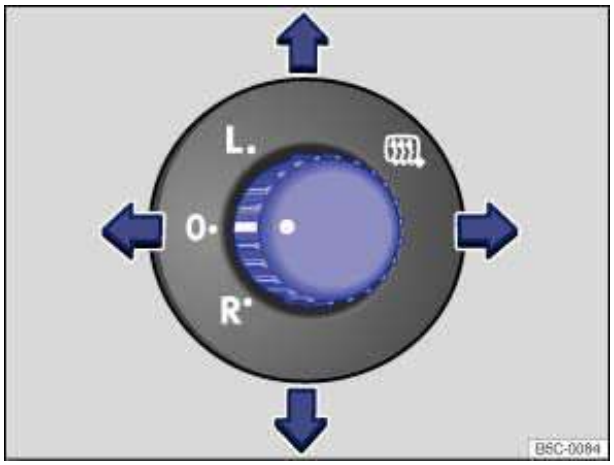

Fig. 75 In the driver door: Adjusting knob for the outside mirrors.

🕮 Please first read and note the introductory information and heed the WARNINGS ⚠.

Turn the knob ⇒ fig. 75 to adjust the outside mirrors.

Turn the rotary knob to the desired position:	
	Switch on outside mirror heating.
L	Adjust the left outside mirror by pressing the knob to left/right and up/down.
R	Adjust the right outside mirror by pressing the knob to left/right and up/down.
0	Neutral position. Outside mirror folded out, no heating or adjustment possible.

⚠ WARNING

Improper use of the folding outside mirrors can cause personal injury.

- **Always make sure that nobody is in the way when folding the mirrors in or out.**
- **Make sure that you do not get your finger caught between the mirror and the mirror base when moving the mirrors.**

WARNING

Incorrectly estimating distances with the right outside mirror can cause collisions and serious injury.

- **The right outside mirror has a convex (curved) surface. This widens your field of vision. But vehicles or other objects seen in a convex mirror will look smaller and farther away than they really are.**
- **If you use the right outside mirror to judge distances from vehicles behind you when changing lanes, you could estimate incorrectly and cause a crash and serious injuries.**
- **Whenever possible, use the inside mirror to more accurately judge distance and size of vehicles or other objects seen in the convex mirror.**
- **Always make sure you have a clear view to the rear of the vehicle.**

NOTICE

Always fold in the outside mirrors when taking the vehicle through an automatic car wash.

To reduce fuel consumption, use outside mirror heating only when needed.

If power mirror adjustment does not work, the outside mirrors can be adjusted by hand by pressing on the edges of the mirror surface.

Driving tips

Introduction

In this section you'll find information about:

Stowing luggage
Driving with an open rear hatch
Driving a loaded vehicle
Weights and axle weights

Always stow heavy objects in the luggage compartment and make sure that the rear seat backrests are securely latched. Never overload the vehicle. Remember that the vehicle load, as well as how it is distributed, can affect vehicle handling and braking ⇒ ⚠.

More information:

- Rear hatch.
- Folding the passenger seat backrest forward.
- Lights.
- Luggage compartment.
- Roof rack.
- Tires and wheels.

WARNING

Unsecured or incorrectly stowed items can fly through the vehicle, causing serious personal injury during hard braking or sharp steering or in an accident. Loose items can also be struck and thrown through the passenger compartment by the front airbags if they inflate. To help reduce the risk of serious personal injury:

- **Always stow all objects securely in the vehicle.**
- **Always keep storage compartments closed while driving.**
- **Do not stow hard, heavy, or sharp objects in open bins in the vehicle or on top of the instrument panel.**
- **Remove hard, heavy, and sharp objects from clothing and bags in the vehicle interior and stow securely. Always put heavy items in the luggage compartment.**
- **Always secure objects in the passenger compartment properly with suitable straps so that they cannot move into the deployment area of a side or front airbag during braking, in a sudden maneuver, or in a collision.**
- **Always make sure that there is nothing on the front passenger seat when the backrest is folded forward.**
- **Passengers must never ride in an incorrect seating position because objects are being transported in the vehicle.**
- **Never let anybody sit in a seat that is blocked by objects being carried in the vehicle.**

WARNING

Heavy loads will influence the way your vehicle handles and increase stopping distances. Heavy loads that are not properly stowed or secured can cause loss of control and serious injury.

- **Secure the load properly to keep it from shifting.**
- **Always remember when transporting heavy objects that a change in the center of gravity also changes the way your vehicle handles:**
  - **Always distribute the load as evenly as possible.**
  - **Secure heavy objects properly as far forward in the luggage compartment as possible.**
  - **Always tie down heavy items securely with suitable straps.**
- **Securely latch the rear seat backrest in the upright position.**
- **Never exceed the Gross Axle Weight Rating or the Gross Vehicle Weight Rating on the safety compliance sticker on the left door jamb. Exceeding permissible weight can cause the vehicle to skid and handle differently.**
- **Always adapt your speed and driving to the heavier load and the weight distribution in the vehicle. Take road, weather, traffic, and visibility conditions into account as well.**
- **Always accelerate gently and avoid sudden braking and driving maneuvers.**
- **Always brake earlier than you would if you were not driving a loaded vehicle.**

Stowing luggage

Please first read and note the introductory information and heed the WARNINGS.

Always stow all luggage securely in the vehicle

- Distribute the load in the vehicle and on the roof as evenly as possible.
- Put heavy objects as far forward as possible in the luggage compartment and securely latch the rear seat backrest in the upright position.
- Secure luggage in the luggage compartment.
- Have the headlight range adjusted, if necessary.
- Check the pressure in all 4 tires when the tires are still cold. Never reduce air pressure in warm tires to match cold tire inflation pressure. Heed the information on the tire pressure label..
- Pay especially close attention to your vehicle's Tire Pressure Monitoring System when driving with a heavy load..

NOTICE

The defroster heating wires or antenna in the rear window can be damaged by objects that rub against them.

Please review the information on loading a roof rack.

Driving with an open rear hatch

Please first read and note the introductory information and heed the WARNINGS.

Driving with an open rear hatch can lead to serious personal injury. If you have to drive with an open rear hatch, make sure that all objects and the hatch itself are properly secured and take appropriate measures to keep toxic exhaust fumes from entering the vehicle.

WARNING

Driving with an unlatched or open rear hatch can lead to serious personal injury.

- **Never transport objects larger than those that fit completely in the luggage compartment, because the rear hatch cannot be fully closed properly.**
- **After closing the rear hatch, always pull up on it to make sure that it is properly closed and cannot open suddenly when the vehicle is moving.**
- **Always stow all objects securely in the luggage compartment. Loose objects can fall out of the luggage compartment and injure others on the road behind you.**
- **Drive carefully; anticipate what other drivers will do.**
- **Avoid abrupt or sudden acceleration, steering, or braking, because the unlatched rear hatch can move suddenly.**
- **Always mark objects sticking out from the luggage compartment clearly for others to see. Obey all applicable legal requirements.**
- **Never use the rear hatch to “clamp” or “hold” objects that stick out of the luggage compartment.**
- **Always remove any luggage rack or other rack mounted on the rear hatch (along with any luggage on the rack) before driving with an open rear hatch.**

WARNING

Driving with an open rear hatch can cause poisonous carbon monoxide in the engine exhaust to get into the passenger compartment.

- **Carbon monoxide causes drowsiness, inattentiveness, poisoning, and loss of consciousness. It can lead to accidents and severe personal injuries.**
- **Always keep the rear hatch closed while driving to help keep poisonous exhaust fumes from being drawn into the vehicle.**
- **Never transport objects that are too large to fit completely into the luggage area, because then the rear hatch cannot be fully closed.**
- **If you absolutely must drive with an open rear hatch, do the following to reduce the risk of carbon monoxide poisoning:**
  - **Close all windows and the power sunroof.**
  - **Switch off the climate control system's air recirculation feature.**
  - **Open all air vents in the instrument panel.**
  - **Set the fresh air fan to the highest speed.**

NOTICE

The open rear hatch changes the vehicle length and height.

Driving a loaded vehicle

Please first read and note the introductory information and heed the WARNINGS ⚠.

For good handling when driving a loaded vehicle, please observe the following:

- Securely stow all luggage.
- Drive especially carefully and accelerate gently.
- Avoid sudden braking and driving maneuvers.
- Brake earlier than you would if you were not driving a loaded vehicle.
- If applicable, observe information about driving with a roof rack.

⚠ WARNING

Heavy loads can change the way your vehicle handles and increase stopping distances. Heavy loads that are not properly stowed or secured can shift suddenly, causing loss of control and serious injury.

- **Secure the load properly to keep it from shifting.**
- **Always remember when transporting heavy objects that they change the vehicle's center of gravity and also the way it handles.**
  - **Always distribute the load as evenly as possible.**
  - **Secure heavy objects as far forward in the luggage compartment as possible.**
- **Securely latch the rear seat backrest in the upright position.**
- **Never exceed the Gross Axle Weight Rating or the Gross Vehicle Weight Rating on the safety compliance sticker on the left door jamb. Exceeding permissible weight can cause the vehicle to skid and handle differently.**
- **Always adapt speed and driving to the heavier load and the weight distribution in the vehicle. Take road, weather, traffic, and visibility conditions into account as well.**
- **Always accelerate gently and avoid sudden braking and driving maneuvers.**
- **Always brake earlier than you would if you were not driving a loaded vehicle.**

Weights and axle weights

🕮 Please first read and note the introductory information and heed the WARNINGS ⚠.

The actual gross weight of any vehicle depends on the engine, basic equipment, any factory-installed optional equipment for the given model, and any accessories that have been installed. The Gross Vehicle Weight Rating (GVWR) and the Gross front and Rear Axle Weight Ratings (GAWR) for a given vehicle are printed on the vehicle's Safety Compliance Certification Label on the driver door jamb.

The **Gross Vehicle Weight Rating** includes the weight of the vehicle itself with all of its factory-installed equipment, plus a full tank of gasoline, the engine oil and coolant, all vehicle occupants (150 lbs/68 kg per seating position) and cargo.

The **Gross Axle Weight Ratings** specify the maximum allowable load for each axle.

The cargo payload may not be increased by using a roof rack without commensurately reducing the weight from vehicle occupants ⇒⚠. Determining the Gross Vehicle Weight Rating., *Tires and wheels*.

Vehicle payload consists of the combined weight of the following:

- Passengers.
- Total luggage and other cargo.
- Roof load including the roof rack system.
- Factory-installed or retrofitted accessories.

Please refer to the Gross Vehicle Weight Rating (GVWR) and the Gross front and rear Axle Weight Ratings (GAWR) for your vehicle, which are printed on the vehicle's Safety Compliance Certification Label on the driver door jamb.

WARNING

Exceeding maximum permissible weight ratings can result in vehicle damage, accidents, and serious personal injury.

- **Never let the actual weights at the front and rear axles exceed the permissible Gross Axle Weight Rating. Also, never let the total of these actual weights exceed the Gross Vehicle Weight Rating.**
- **Always remember that the vehicle's handling and braking will be affected by extra load and the distribution of this load. Adjust your speed accordingly.**

NOTICE

- **Always distribute the load evenly and as low as possible in the vehicle. The vehicle capacity weight figures apply when the load is distributed evenly in the vehicle (passengers and luggage).**
- **When transporting a heavy load in the luggage compartment, carry the load as close to the rear axle (as far forward) as possible so that the vehicle's handling and braking are affected as little as possible.**

Luggage compartment

Introduction

In this section you'll find information about:

Folding the rear seat backrest forward and back into place

Luggage compartment cover

Shopping bag hooks

Always stow heavy objects in the luggage compartment and make sure that the rear seat backrests are securely latched in their upright position. Never overload the vehicle. Remember that the vehicle load, as well as how it is distributed, can affect vehicle handling and braking ⇒ ⚠.

More information:

- Safety belts.
- Airbag system.
- Lights.
- Transporting.
- Tires and wheels.

⚠ WARNING

An open or unlocked luggage compartment poses special risks for children.

- **Close and lock the rear hatch and all doors when the vehicle is not in use. First, make certain that no one is left inside.**
- **Never leave your vehicle unattended or let children play around the vehicle, especially with the rear hatch left open. A child could crawl into the vehicle and pull the hatch shut, becoming trapped and unable to get out. This could cause severe or fatal injuries.**
- **A closed vehicle can become very hot or very cold, depending on the season. Temperatures can quickly reach levels that can cause unconsciousness or death, particularly to small children.**
- **Never let children play in or around the vehicle.**
- **Never let anyone ride in the luggage compartment.**

WARNING

Unsecured or incorrectly stowed items can fly through the vehicle, causing serious personal injury during hard braking or sharp steering or in an accident. Loose items can also be struck and thrown through the passenger compartment by the front airbags if they inflate. To help reduce the risk of serious personal injury:

- **Always stow all objects securely in the vehicle. Always put luggage and heavy items in the luggage compartment.**
- **Always secure objects in the passenger compartment properly with suitable straps so that they cannot move into the deployment zone of a side or front airbag during sudden braking, in a sudden maneuver, or in a collision.**
- **Always keep storage compartments closed while driving.**
- **Never stow hard, heavy, or sharp objects in the vehicle's open storage compartments, on the luggage compartment cover, or on the top of the instrument panel.**
- **Always remove hard, heavy, or sharp objects from clothing and bags in the vehicle interior and stow them securely in the luggage compartment.**

WARNING

Transporting heavy objects causes the handling characteristics of the vehicle to change and increases braking distances. Heavy loads which are not properly stowed or secured in the vehicle can lead to a loss of vehicle control and cause serious personal injury.

- **Transporting heavy items causes the handling characteristics of the vehicle to change by shifting the vehicle's center of gravity.**
- **Always distribute luggage evenly and as low as possible within the vehicle. The vehicle capacity weight figures apply when the load is distributed evenly in the vehicle (passengers and luggage).**
- **Always stow luggage and heavy items in the luggage compartment as far forward of the rear axle as possible.**
- **Never exceed the vehicle's Gross Vehicle Weight Rating or Gross Axle Weight Ratings, which are printed on the Safety Compliance Certification Label located on the door jamb of the driver door. Exceeding the permissible weight can cause the vehicle to skid and behave differently.**
- **Always adapt your speed and driving style to accommodate your payload and its weight distribution within your vehicle.**
- **Be especially cautious and gentle when stepping on the accelerator pedal and avoid sudden braking and other maneuvers.**
- **Brake earlier than you would if you were not driving a loaded vehicle.**

NOTICE

The defroster heating wires or antenna in the rear window can be damaged by objects that rub against them.

Folding the rear seat backrest forward and back into place

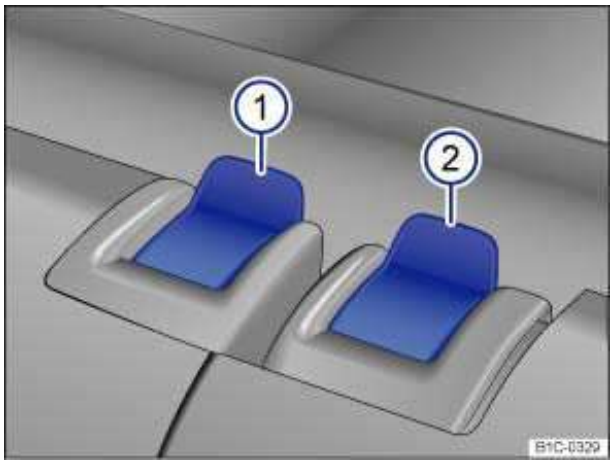

Fig. 76 Rear seat: release button right backrest 1, left backrest 2.

Please first read and note the introductory information and heed the WARNINGS ⚠.

The rear seat backrest is divided into 2 sections. Each section of the rear seat backrest can be folded down individually to increase luggage space.

Folding the rear seat backrest forward

- Push the head restraint all the way down.
- Pull the release button ⇒ fig. 76 (1) or (2) forward while folding the rear backrest forward.
- If the rear seat backrest is folded down, no one, including children, may ride on the rear seat.

Folding the rear seat backrest back into place

- Fold the rear seat backrest back until it engages securely ⇒ ⚠.
- The rear seat backrest must be securely latched into place for the safety belts on the rear seats to provide optimal protection.

⚠ WARNING

Improper folding and improper latching of the rear seat backrest can cause serious personal injury.

- **Always make sure there are no people or animals in the area around the rear seat backrest when folding it forward.**
- **Never fold the rear seat backrest forward or back while the vehicle is moving.**
- **When folding the rear seat backrest back up, make sure that the safety belt does not get caught or damaged.**
- **Keep hands, fingers, feet and other body parts out of the way when folding the rear seat backrest forward or back.**
- **Each rear seat backrest must be securely latched in the upright position so that the safety belts on the rear seats can provide protection.**
- **If a seat is used with an unsecured backrest, the passenger will move forward together with the backrest during sudden braking, driving maneuvers, or in a collision.**
- **No one, including children, may ride on the rear seats if the rear seat backrest is folded down or not correctly latched.**

NOTICE

Before folding the rear seat backrest forward, adjust the front seats so that the rear seat's head restraint or backrest cushion will not touch the front seats.

Luggage compartment cover

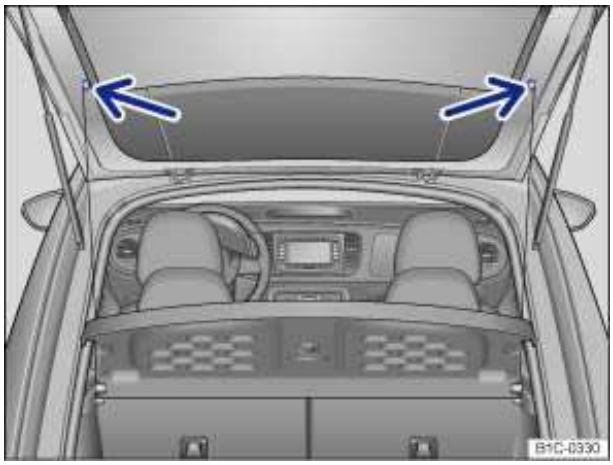

Fig. 77 On the rear hatch: Installing and removing the supporting cords.

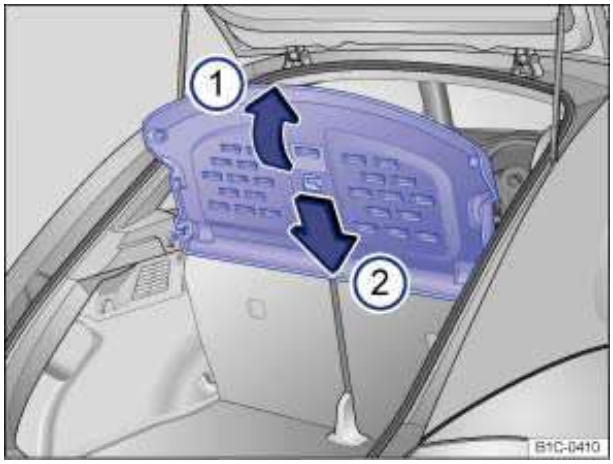

Fig. 78 In the luggage compartment: Installing and removing the luggage compartment cover.

Please first read and note the introductory information and heed the WARNINGS ⚠.

When you open or close the rear hatch, the supporting cords, when attached, will automatically raise or lower the luggage compartment cover.

You can put light articles of clothing on the luggage compartment cover. But remember that your view through the rear window must not be obstructed.

Removing the luggage compartment cover

- Unhook the supporting cords from each side of the rear hatch ⇒ fig. 77 (arrows).
- Fold the luggage compartment cover upward ⇒ fig. 78 (arrow (1)), until the luggage compartment cover releases from the side brackets.

Storing the luggage compartment cover

- Slide the luggage compartment cover between the rear seat backrest and the side mounts (arrow (2)).

Installing the luggage compartment cover

- Position the luggage compartment cover on the side brackets.
- Slide the luggage compartment cover forward into the side brackets.
- Ho**OK** the supporting straps onto the rear hatch ⇒ fig. 77 (arrows).

WARNING

In a sudden braking or other maneuver, or in a collision, unsecured or improperly secured objects or animals on the luggage compartment cover can cause serious personal injury.

- **Never leave hard, heavy or sharp objects in bags or loose on the luggage compartment cover.**
- **Never let animals ride on the luggage compartment cover.**

NOTICE

To help prevent damage to the luggage compartment cover, the luggage compartment may only be loaded to a height at which the luggage compartment cover will not press on the cargo when the rear hatch is closed.

NOTICE

Things on the luggage compartment cover can damage it.

- **The defroster heating wires or antenna in the rear window can be damaged by objects that rub against them.**

Shopping bag hooks

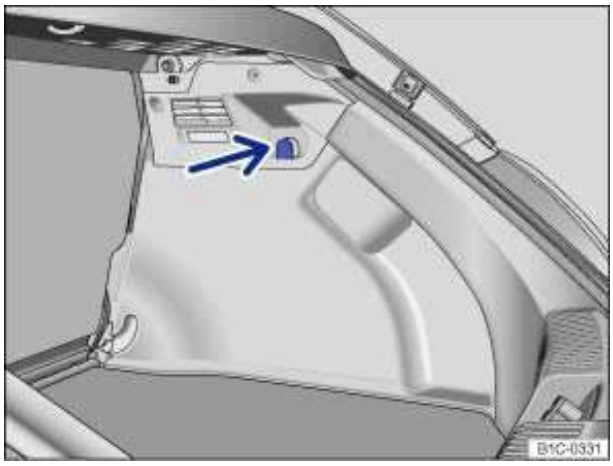

Fig. 79 In the luggage compartment: Shopping bag hook.

Please first read and note the introductory information and heed the WARNINGS ⚠.

Shopping bag hooks may be located on the upper left and right of the luggage compartment ⇒ fig. 79 (arrow).

WARNING

Never use the shopping bag hooks as tie-downs. The hooks could break off during sudden braking maneuvers or in a collision.

NOTICE

The maximum load for each shopping bag hook is 5 lbs. (2.5 kg).

Roof rack

Introduction

In this section you'll find information about:

Securing a load on the roof rack

The roof of your vehicle has been designed to optimize aerodynamics and does not have traditional rain gutters that are used to attach many kinds of roof racks.

Since the rain gutters are molded into the roof to provide efficient aerodynamics, only base carrier mounts and roof racks can be used that have been specifically designed and approved by their manufacturer for your vehicle.

When should the roof rack be removed?

- When it is no longer needed.
- Before driving through an automatic car wash.
- When the vehicle would otherwise be too high for minimum clearance to enter, for example, a garage.

More information:

- Lights.
- Transporting.
- Saving fuel and helping the environment.
- Tires and wheels.
- Parts, accessories, repairs and modifications.

WARNING

Transporting heavy or bulky loads on the roof rack will change the way the vehicle handles by shifting the vehicle's center of gravity and increasing the wind drag.

- **Always secure the load properly with suitable and undamaged straps so that the load will not shift.**
- **Cargo that is large, heavy, bulky, long or flat will have a negative effect on the vehicle's aerodynamics, center of gravity and overall handling.**
- **Always avoid sudden maneuvers and hard braking.**
- **Always adapt your speed and driving to the heavier load and the weight distribution in the vehicle. Take road, weather, traffic, and visibility conditions into account as well.**

NOTICE

- **Always remove the roof rack before driving through an automatic car wash.**
- **Your vehicle is higher when the roof rack is installed, especially when it is loaded. Compare the vehicle height with existing clearance heights, such as underpasses and garage doors.**
- **Always make sure that the roof rack system and anything being carried on it does not interfere with the roof antenna, the power sunroof, or the rear hatch.**
- **Make sure that the rear hatch does not touch items on the roof rack when opened.**

If a roof rack is installed, fuel consumption increases due to increased air resistance.

Securing a load on the roof rack

🕮 Please first read and note the introductory information and heed the WARNINGS ⚠.

It is not possible to secure a load unless the roof rack system has been properly installed ⇒⚠.

Maximum permissible roof load

The maximum permissible roof load is **110 lbs. (50 kg)**. The roof load is the combined weight of the roof rack and the items being carried on the roof ⇒⚠.

Be sure you know the weight of the roof rack and the items you want to transport on the roof. Weigh them if necessary. Never carry a total of more than the maximum permissible roof load.

When using a roof rack with a lower load limit, do not load the rack to the maximum weight mentioned above. In this case, you may only load the roof rack to the weight limit specified in the system's installation instructions.

Distributing the load

Distribute the load evenly and secure it properly ⇒⚠.

Checking the mountings

After the base carrier and roOK rack have been installed, check all bolts and fasteners after driving a short time and at regular intervals thereafter.

⚠ WARNING

If the maximum permissible roof load is exceeded, accidents and substantial vehicle damage may occur.

- **Never exceed the specified roof load, the maximum Gross Axle Weight Rating, or the Gross Vehicle Weight Rating.**
- **Do not exceed the loading capacity of the roof rack, even if the permissible roof load is not fully utilized.**
- **Always make sure that loads are evenly distributed and that heavier items are, as far as possible, toward the front.**

⚠ WARNING

Loose or improperly secured items can fall off the roof rack and cause accidents and injuries.

- **Always use suitable, undamaged tie-down ropes and ratchet straps.**
- **Secure the load properly.**

Trailer towing

Important information

For technical reasons, the vehicle body structure is **not** designed for the installation of a trailer hitch.

Never install a trailer hitch on your vehicle. Installing a trailer hitch will do considerable damage to the vehicle ⇒ ⚠.

WARNING

Installing a trailer hitch on the vehicle can cause an accident and serious personal injuries.

- **Never install a trailer hitch on the vehicle.**
- **A trailer hitch can fall off while driving or rip loose or while pulling a trailer causing the trailer to separate from the vehicle.**

NOTICE

Installing a trailer hitch of any kind will cause expensive damage to your vehicle that will not be covered by any Volkswagen Limited Warranty.

Storage areas

Introduction

In this section you'll find information about:

Storage compartment on the driver side
Storage compartment in the front center console
Storage compartment in the center console
Storage compartment in the front center armrest
Glove compartments
Other storage compartments

Store only lightweight or small objects in storage compartments.

Depending on options, there may be a factory-installed **AUX-IN jack** in the storage compartment in the front center console or a **Media Device Interface (MDI)/(MEDIA-IN)** in the glove compartment.

More information:

- Passenger compartment.
- Power locking and closing system.
- Driver assistance systems.
- Interior care and cleaning.
- ⇒ Booklet *Radio* or ⇒ Booklet *Navigation system*

WARNING

Loose objects can be thrown around the inside of the vehicle when the vehicle is moving, especially during sudden maneuvers and hard braking. This can cause serious personal injuries and even make the driver lose control of the vehicle.

- **Never let animals ride in the vehicle's open storage compartments, on top of the instrument panel, or on the luggage compartment cover behind the rear seat backrests.**
- **Never put hard, heavy or sharp objects in these places or in articles of clothing or bags in the passenger compartment.**
- **Always keep storage compartments closed while driving.**

WARNING

Objects in the driver footwell can prevent the pedals from moving freely. This can cause loss of vehicle control and increase the risk of serious personal injuries.

- **Always make sure that nothing can interfere with the pedals.**
- **Always fasten floor mats securely to the floor.**
- **Never put floor mats or other floor coverings on top of already installed floor mats.**
- **Always make sure that nothing can fall into the driver footwell while the vehicle is moving.**

NOTICE

- **The defroster heating wires or antenna in the rear window can be damaged by hard or sharp things on the shelf below the rear window.**
- **Do not keep any food, medicine, or other items sensitive to heat or cold in the vehicle. They can be damaged or made unusable by heat or cold.**
- **Things that are made of transparent materials (such as eyeglasses, magnifying glasses, or transparent suction cups on the windows) can magnify sunlight and damage the vehicle.**

Storage compartment on the driver side

Fig. 81 On the driver side: Storage compartment.

Please first read and note the introductory information and heed the WARNINGS ⚠..

To *open* the compartment, pull the handle ⇒ fig. 81 (1) in the direction of the arrow.

To *close*, push the lid up until it latches.

Storage compartment in the front center console

Fig. 82 In the front center console: Storage compartment.

Please first read and note the introductory information and heed the WARNINGS ⚠..

There may be an AUX-IN jack in the storage compartment ⇒ fig. 82 (arrow) ⇒ Booklet *Radio* or ⇒ Booklet *Navigation System*.

Storage compartment in the center console

Fig. 83 Storage compartment in the center console.

Please first read and note the introductory information and heed the WARNINGS ⚠..

There may be a storage compartment in the center console.

Storage compartment in the front center armrest

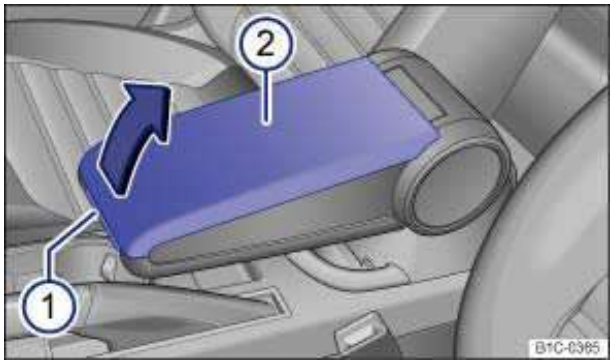

Fig. 84 Storage compartment in the front center armrest.

Please first read and note the introductory information and heed the WARNINGS ⚠..

To *open*, push the release button ⇒ fig. 84 (1) and raise the cover (2) of the center armrest in the direction of the arrow.

To *close*, lower the cover (2) of the center armrest down.

⚠ WARNING

The center armrest can restrict the driver's arm movement and cause crashes and serious personal injury.

- **Always keep storage compartments in the center armrest closed while driving.**

⚠ WARNING

Never let a passenger, especially a child, ride on the center armrest.

Glove compartments

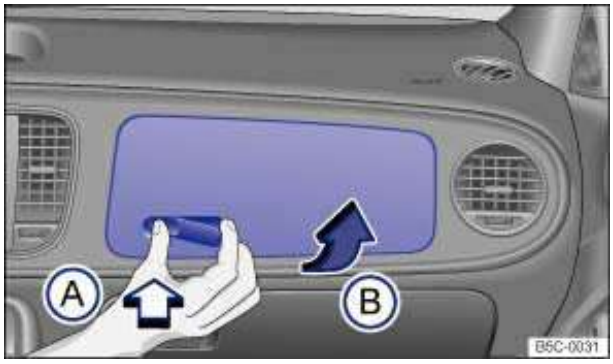

Fig. 85 On the passenger side: Opening the upper glove compartment.

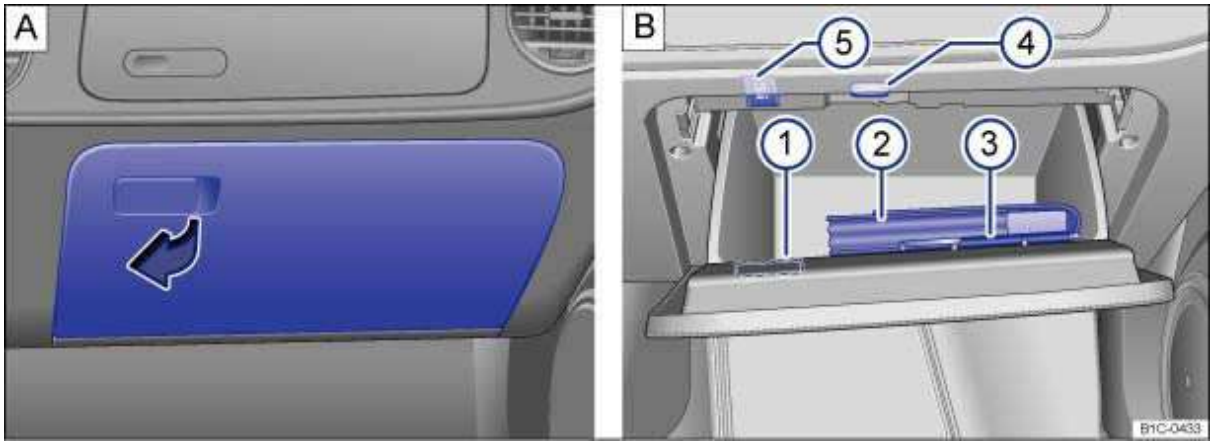

Fig. 86 A: On the passenger side: Lower glove compartment. B: Open glove compartment.

Please first read and note the introductory information and heed the WARNINGS ⚠..

Key to fig. 86 **B**:

(1) Note holder
(2) Owner's Manual
(3) Pen holder
(4) Factory-installed Media Device Interface (MDI)/(MEDIA-IN)
(5) SET button for Tire Pressure Monitoring System (TPMS).**or! Bookmark not defined.**

Opening and closing the upper glove compartment (if equipped)

- To *open*, press on the depression in the opening handle ⇒ fig. 85 (arrow (A)). Then lift the glove compartment lid upward using the handle (arrow (B)).
- To *close*, press down on the lid.

Opening and closing the lower glove compartment

If necessary, unlock the glove compartment. It is locked when the key slot is vertical.

To *open*, pull the handle **A** in the direction of the arrow.

To *close*, push the lid up.

Owner's Manual

The lower glove compartment is designed to hold the Owner's Manual ⇒ fig. 86△(2).

Always keep the Owner's Manual in the lower glove compartment.

Holder for pen and notepad

There are holders for a pen and a notepad in the lower glove compartment lid (1) and (3).

Button in the glove compartment

The Tire Pressure Monitoring System (TPMS) SET button is also located in the glove compartment (5).

WARNING

An open glove compartment door can increase the risk of serious injury during sudden braking or driving maneuvers or in a crash.

- **Always keep the glove compartment closed while the vehicle is moving.**

NOTICE

In some vehicle models, design considerations have made it necessary to have openings in the glove compartment behind the Owner's Manual slot, for example. Small items may fall through these openings and get behind the instrument panel. This can cause unusual noises and damage the vehicle. Never put any small objects in the glove compartment for this reason.

Applicable only in Canada

Glove compartments

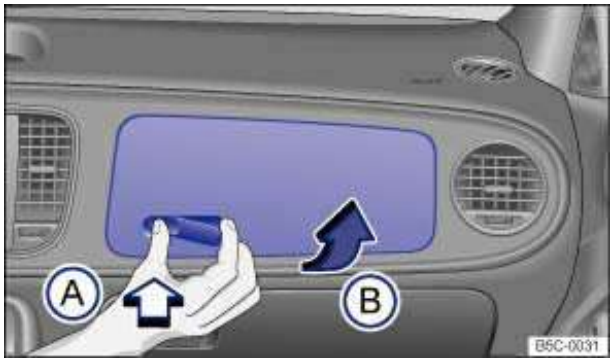

Fig. 87 On the passenger side: Opening the upper glove compartment.

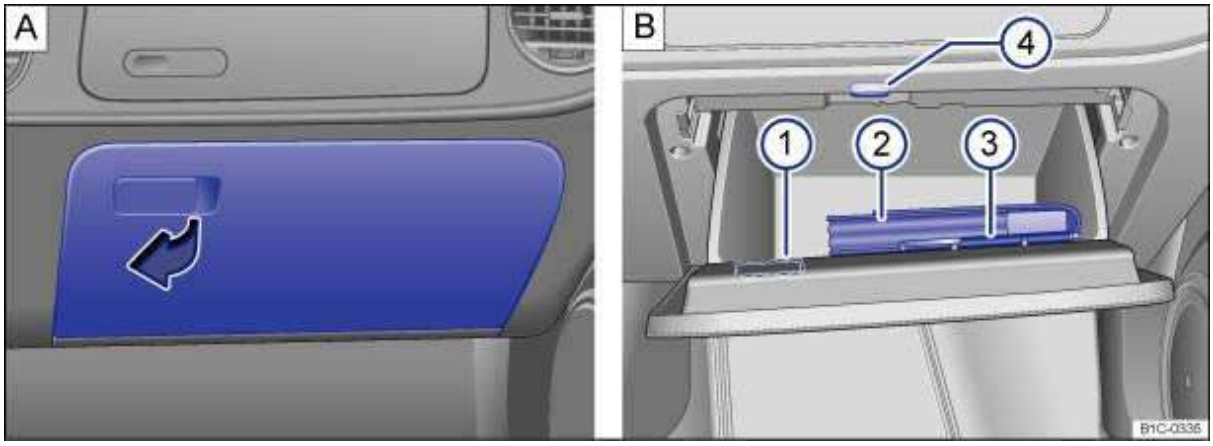

Fig. 88 A: On the passenger side: Lower glove compartment. B: Open glove compartment.

Please first read and note the introductory information and heed the WARNINGS ⚠..

Key to ⇒ fig. 88 **B**:

(1) Note holder
(2) Owner's Manual
(3) Pen holder
(4) Factory-installed Media Device Interface (MDI)/(MEDIA-IN)

Opening and closing the upper glove compartment (if equipped)

- To *open*, press on the depression in the opening handle ⇒ fig. 87 (arrow (A)). Then lift the glove compartment lid upward using the handle (arrow (B)).
- To *close*, press down on the lid.

Opening and closing the lower glove compartment

If necessary, unlock the glove compartment. It is locked when the key slot is vertical.

To *open*, pull the handle ⇒ fig. 88 **A** in the direction of the arrow.

To *close*, push the lid up.

Owner's Manual

The lower glove compartment is designed to hold the Owner's Manual△(2).

Always keep the Owner's Manual in the lower glove compartment.

Holder for pen and notepad

There are holders for a pen and a notepad in the lower glove compartment lid (1) and (3).

⚠ WARNING

An open glove compartment door can increase the risk of serious injury during sudden braking or driving maneuvers or in a crash.

- **Always keep the glove compartment closed while the vehicle is moving.**

NOTICE

In some vehicle models, design considerations have made it necessary to have openings in the glove compartment behind the Owner's Manual slot, for example. Small items may fall through

these openings and get behind the instrument panel. This can cause unusual noises and damage the vehicle. Never put any small objects in the glove compartment for this reason.

Other storage compartments

Please first read and note the introductory information and heed the WARNINGS ⚠..

Additional storage:

- In the door trim panels.
- In the instrument panel.
- In the overhead console.
- Pockets in the backrests of the front seats.
- Luggage compartment cover behind the rear seat backrest – only for light clothing or similar objects that do not interfere with visibility to the rear!
- **Coat hooks** on the center door pillars.

⚠ WARNING

Clothes or other items on the luggage compartment cover behind the rear seat backrest may limit visibility and cause accidents and severe personal injuries.

- **Always hang clothes so that they do not limit visibility.**
- **Always use the built-in coat hooks only for lightweight clothing. Never leave any heavy or sharp-edged items in the pockets that may interfere with airbag deployment and can cause personal injury in a collision.**

Cup holders

Introduction

In this section you'll find information about:

Cup holders in the front center console
Cup holder in the rear center console

Beverage bottle holders

There is a place for bottles in the open compartments in the driver and passenger doors. The bottle volume must not exceed 24 oz (0.5 liter) ⇒ ⚠.

More information:

- Interior care and cleaning.

WARNING

Improper use of beverage holders can cause injuries.

- **Never put hot drinks in the cup holders. During normal or sudden maneuvers, sudden braking or in a collision, hot liquid can be spilled and cause burns!**
- **Make certain that bottles or other items cannot fall into the driver's footwell while the vehicle is moving and interfere with the movement of the pedals.**
- **Never put heavy cups, food or other heavy items in the cup holders. Heavy items can fly through the passenger compartment in a crash and cause serious injury.**
- **Use the bottle holders only for standard beverage bottles holding no more than 24 oz (0.5 liter).**

WARNING

Hot or freezing temperatures in the passenger compartment can cause closed bottles to explode or break.

- **Never leave closed bottles in a very hot or cold vehicle.**

WARNING

Bottles and other things can fall into the driver's footwell and interfere with the pedals while driving.

- **Make sure that bottles cannot fall into the driver's footwell during driving to avoid obstructing the pedals.**
- **Use the bottle holders only for standard beverage bottles holding no more than 24 oz (0.5 liter).**

NOTICE

Never put open drinks in the cup holder when the vehicle is moving. The drinks can spill and damage the vehicle, including the electrical system.

The cup holder inserts can be removed for cleaning.

Cup holders in the front center console

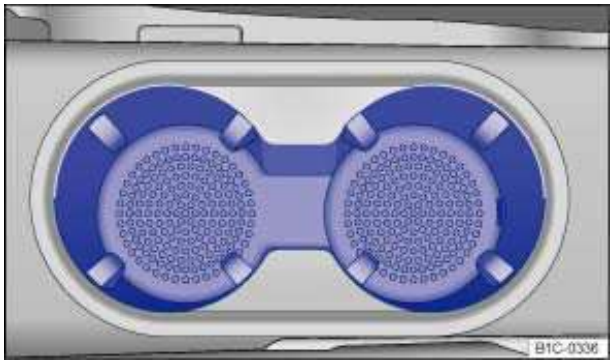

Fig. 89 In the front center console: Cup holders.

Please first read and note the introductory information and heed the WARNINGS ⚠..

Place the drink in the cup holder ⇒ fig. 89.

Cup holder in the rear center console

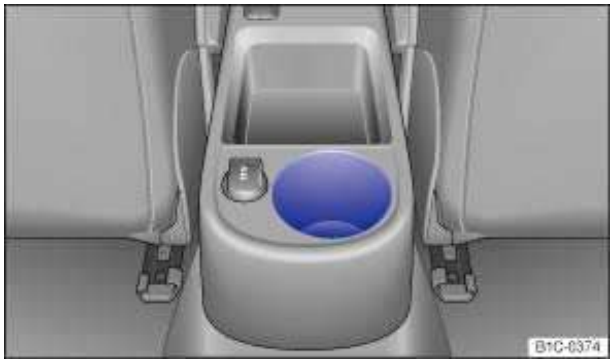

Fig. 90 In the rear center console: Cup holder.

Please first read and note the introductory information and heed the WARNINGS ⚠..

Place the drink in the cup holder ⇒ fig. 90.

12 Volt sockets

Introduction

In this section you'll find information about:

12 Volt sockets in the vehicle

Electrical devices can be connected to the vehicle 12 Volt sockets.

The connected devices must be in good working order.

More information:

- Parts, accessories, repairs and modifications.
- Consumer information.

WARNING

Improper use of electrical sockets and electrical devices may start a fire and cause severe personal injury.

- **Never leave children unattended in the vehicle. Sockets and connected devices can be used when the ignition is switched on.**
- **If the connected device gets warm, immediately switch it off and disconnect the power supply.**

NOTICE

- **To help prevent damage to the electrical system, never connect any accessories such as a solar panel or vehicle battery charger to a 12 Volt socket.**
- **Only use accessories which have been tested for electromagnetic compatibility with a motor vehicle.**
- **To help prevent damage from voltage fluctuations, switch off all electrical consumers connected to the 12 Volt socket before switching the ignition on or off or starting the engine.**
- **Never connect devices to a 12 Volt socket that draw more than the maximum wattage the socket can supply. Drawing too much power can damage the vehicle electrical system.**

Please turn off the engine when you stop for any length of time.

The vehicle battery will drain if you use electrical equipment when the engine is not running.

Unshielded devices may interfere with radio reception or the vehicle's electrical system.

Operating electrical devices near the windshield-integrated antenna may interfere with AM radio reception.

12 Volt sockets in the vehicle

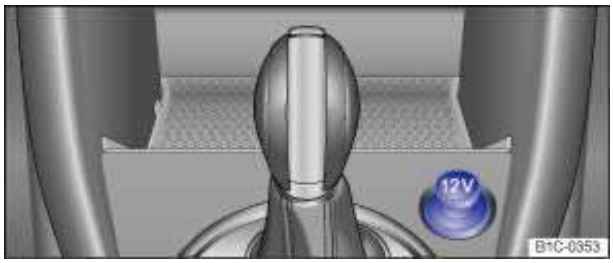

Fig. 91 Front center console: 12 volt socket.

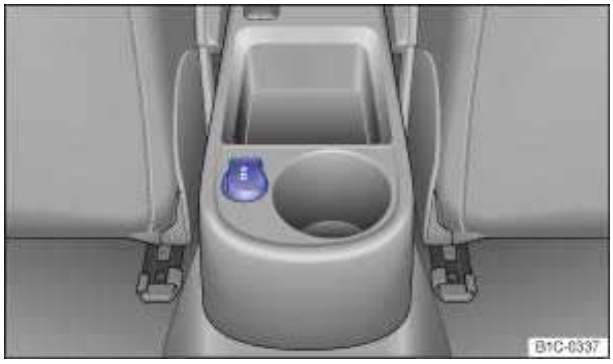

Fig. 92 Rear center console: 12 volt socket.

Please first read and note the introductory information and heed the WARNINGS ⚠..

Maximum power draw

Socket	Maximum power draw
12 volts	120 watts

The maximum power draw at any one socket must never be exceeded. Electrical devices should have information on them that says how much power they draw.

If 2 or more electrical devices are connected at the same time, the total power draw of all connected devices must never be more than 190 watts ⇒ ⓘ.

12 Volt socket

The 12 Volt socket works only when the ignition is switched on.

If the ignition is on but the engine is not running, the vehicle battery will be drained by any device that is plugged in and turned on. For this reason, never use the electrical sockets unless the engine is running.

To help prevent damage from voltage fluctuations, switch off all electrical devices connected to a 12 Volt socket before switching the ignition on or off or starting the engine.

The vehicle may have 12 Volt sockets at the following places:

- In the front and rear center console ⇒ fig. 91.

NOTICE

- **Follow the manufacturer's instructions for connected devices!**

- **Never exceed the maximum power consumption, or the entire vehicle electrical system may be damaged.**
- **12 Volt socket:**
  - **Only use equipment that has been tested for electromagnetic compatibility and complies with applicable guidelines.**
  - **Never feed current into the socket, with a solar panel, for example.**

Unshielded devices may interfere with radio reception or the vehicle's electrical system.

Starting and stopping the engine

Introduction

In this section you'll find information about:

Indicator lights
Vehicle key positions in the ignition switch
Starter button
Starting the engine
Stopping the engine
Electronic immobilizer

Explanatory notes in this section regarding automatic transmissions also apply to the DSG® Direct Shift Gearbox automatic transmission.

Immobilizer display

If an unauthorized vehicle key is used or the system malfunctions, ***Immobilizer active!*** may appear on the instrument cluster display. The engine cannot be started.

Push-starting and tow-starting

For technical reasons, **never** try to push-start or tow-start the vehicle. Jump-start the vehicle instead while following proper and safe procedures.

More information:

- Vehicle key set.
- Shifting gears.
- Braking, stopping and parking.
- Steering.
- Starting assistance systems.
- Refueling.
- Fuel.
- Emergency closing and opening.
- Jump-starting.
- Towing.

WARNING

Switching off the engine while the vehicle is moving can make the vehicle harder to stop and result in loss of vehicle control, leading to collisions and severe personal injuries.

- **Brake and steering assistance systems, the airbag system, safety belt pretensioners, and other vehicle safety features only work when the engine is running.**
- **Switch off the engine only when the vehicle is not moving.**

WARNING

To reduce the risk of serious personal injury when starting and running the vehicle's engine:

- **Never start the engine or let it run in a confined or enclosed area. Engine exhaust contains carbon monoxide, a poisonous, colorless, and odorless gas. Carbon monoxide can cause unconsciousness and death.**
- **Never leave the vehicle unattended with the engine running. The vehicle could move suddenly or some other unexpected event could occur, resulting in property damage or personal injury.**
- **Never use starting assist fluids. Starting fluids can explode and can cause a “run-away” vehicle condition.**

WARNING

The vehicle exhaust system and the catalytic converter or diesel particulate filter get very hot. They can cause fires and serious personal injury.

- **Never park the vehicle where the hot exhaust system or catalytic converter could ignite flammable materials, such as brush, leaves, dry grass, spilled fuel, etc.**
- **Never apply additional undercoating or rust proofing on or near the exhaust manifold, exhaust pipes, catalytic converter, diesel particulate filter, or heat shields.**

Indicator lights

Please first read and note the introductory information and heed the WARNINGS ..

Lights up	Possible cause	Proper response
	Brake pedal not depressed.	Apply the brake pedal to start the engine..

Flashes	Possible cause	Proper response
	The release button in the selector lever did not engage. Vehicle movement is prevented.	Engage the selector lever release button..

When the ignition is switched on, several warning and indicator lights come on briefly for a function check. They go out after a few seconds.

WARNING

Failure to heed warning lights and instrument cluster text messages can cause the vehicle to break down in traffic and result in a collision and serious personal injury.

- **Never ignore warning lights or text WARNINGS.**
- **Always stop the vehicle as soon as it is safe to do so.**
- **Whenever stalled or stopped for repair, move the vehicle a safe distance off the road, turn on the emergency flashers, stop the engine, and use other warning devices to warn approaching traffic.**

NOTICE

Failure to heed warning lights or text WARNINGS can result in vehicle damage.

Vehicle key positions in the ignition switch

Fig. 93 In the ignition switch: Vehicle key positions.

Please first read and note the introductory information and heed the WARNINGS ⚠..

If there is no vehicle key in the ignition, the steering column is locked.

Vehicle key position ⇒ fig. 93

(0) Ignition switched off. Steering column lock engaged. The vehicle key can be removed.

(1) Ignition is switched on. Diesel engine is preheated (if applicable). Steering column lock can be released.

(2) Start the engine. When the engine starts, release the vehicle key. When released, the vehicle key returns to position (1).

If you use the wrong key

If an unauthorized vehicle key has been inserted into the ignition switch, it can be removed as follows:

- *Automatic transmission*: The vehicle key cannot be removed from the ignition unless both the key and the selector lever have been moved to the correct position. Press the release button on the transmission selector lever, move the selector lever to the Park **(P)** position, and release the button. The vehicle key can now be removed.
- *Manual transmission*: Pull out the vehicle key.

WARNING

Improper use of vehicle keys can result in serious personal injury.

- **Always take the key with you when you leave the vehicle. The engine can be started and vehicle systems such as the power windows can be operated, leading to serious personal injury.**
- **Never leave children, disabled persons, or anyone who cannot help themselves in the vehicle. The doors can be locked with the remote control vehicle key. This could result in people being trapped in the vehicle in an emergency. For example, depending on the time of year, people trapped in the vehicle can be exposed to very high or very low temperatures.**
- **Heat build-up in the passenger and luggage compartment of a parked vehicle can result in temperatures in the vehicle that are much higher than the outside temperatures, particularly in summer. Temperatures can quickly reach levels that can cause unconsciousness and death, particularly to small children.**
- **Never remove the key from the ignition switch while the vehicle is moving or rolling to a stop. The steering wheel will lock and you will not be able to steer or control the vehicle.**

Leaving the key in the ignition for a long time when the engine is not running will drain the vehicle battery.

Leaving the selector lever for a long period of time in any position other than Park **(P)** when the ignition is switched off can drain the vehicle battery.

On **automatic transmission vehicles**, the vehicle key can be removed from the ignition switch only when the transmission is in Park **(P)**. You may have to press the release button on the transmission selector lever to put the lever into Park **(P)**.

Starter button

Fig. 94 In the center console: Starter button of the Keyless Access locking and starting system.

Fig. 95 Emergency starting feature on vehicles with Keyless Access.

Please first read and note the introductory information and heed the WARNINGS ⚠..

The starter button can only be used when an authorized vehicle key is in the vehicle.

When leaving the vehicle, the electronic steering column lock is activated when the ignition is switched off and the driver door is opened..

Switching the ignition on and off

- Briefly press the starter button once without operating the brake or clutch pedals ⇒⚠.

Emergency start feature

If an authorized remote control vehicle key is in the passenger compartment but the instrument cluster displays ***Key not in Range*** when you push the starter button, the remote control vehicle key battery is weak or dead. You can still start the engine using the Emergency start feature.

- Make sure the selector lever is in the Park **(P)** position.
- Hold the remote control vehicle key to the right of the steering column trim immediately after

pressing the starter button ⇒fig. 95.

- The ignition automatically switches on and the engine starts.

Emergency shut-off

If the engine does not switch off by briefly pressing the starter button, emergency shut-off is necessary:

- Press the starter button twice within 3 seconds or press and hold the button longer than 1 second

⇒⚠ in *Stopping the engine*..

- The engine switches off automatically.

Engine restart feature

If no authorized remote control vehicle key is identified in the passenger compartment after the engine has been switched off, the engine can be restarted within about 5 seconds. A related message is shown in the instrument cluster display.

After the 5 seconds have passed, the engine can no longer be started without an authorized vehicle key in the passenger compartment.

WARNING

Unintended vehicle movement can cause serious personal injury.

- **Do *not* depress the brake or clutch pedals when switching on the ignition, as the engine could otherwise start immediately.**

WARNING

Improper use of vehicle keys can result in serious personal injury.

- **Always take the key with you when you leave the vehicle. Children or unauthorized persons may use it to lock the vehicle, start the engine, and operate vehicle systems such as the power windows, leading to serious personal injury.**
- **Never leave children, disabled persons, or anyone who cannot help themselves in the vehicle. The doors can be locked using the remote control vehicle key. This could result in people being trapped in the vehicle in an emergency. For example, depending on the time of year, people trapped in the vehicle can be exposed to very high or very low temperatures.**
- **Heat build-up in the passenger and luggage compartment of a parked vehicle can result in temperatures in the vehicle that are much higher than the outside temperatures, particularly in summer. Temperatures can quickly reach levels that can cause unconsciousness and death, particularly to small children.**

In vehicles with a diesel engine and Keyless Access, the engine start may be delayed if the engine has to be preheated.

If the ignition is switched on or the engine is running and the driver door is opened, a chime sounds. The chime is also a reminder to switch off the engine and turn off the ignition before leaving and locking the vehicle from the outside.

Starting the engine

Please first read and note the introductory information and heed the WARNINGS ⚠..

Please perform these steps only in the order listed.

Step	Vehicles without Keyless Access	Vehicles with Keyless Access
1.	**Automatic transmission:** Depress the brake pedal and hold it down until step 5 is completed.	
1 a.	**Manual transmission:** Depress clutch pedal fully and hold until the engine has started.	
2.	Shift the transmission into Neutral **(N)** or Park **(P)** (automatic), or into Neutral (manual only).	
3.	**Only for vehicles with a diesel engine:** To preheat the glow plug, turn the vehicle key to position ⇒ fig. 93 (1). The indicator light d will come on in the instrument cluster.	–
4.	Turn the vehicle key to position ⇒ fig. 93 (2) – do not depress the accelerator pedal.	Briefly press the starter button ⇒ fig. 94 – do not depress the accelerator pedal. An authorized vehicle key must be inside the vehicle in order to start the engine.

Please perform these steps only in the order listed.		
Step	**Vehicles without Keyless Access**	**Vehicles with Keyless Access**
5.	When the engine starts, release the vehicle key.	When the engine starts, release the starter button.
6.	If the engine does not start, switch off the ignition and start again after about 1 minute.	If the engine does not start, switch off the ignition and start again after about 1 minute. Use the emergency start feature if necessary..
7.	Release the parking brake when you are ready to start driving..	

WARNING

Never leave the vehicle unattended while the engine is running. The vehicle could move suddenly, especially when the vehicle is in gear, resulting in accidents and personal injury.

WARNING

“Starting fluids” can explode and can cause a “run-away” vehicle condition.

- **Never use starting assist fluids.**

NOTICE

- **You can damage the starter or the engine if you try to start the engine when the vehicle is still moving, or if you try to restart the engine right after switching it off.**
- **Avoid high engine speeds, full throttle acceleration, and heavy engine loads when the engine is cold.**
- **Do not try to start the engine by pushing or towing the vehicle. Unburned fuel can get into the catalytic converter and damage it. The steering column may also be locked.**

Do not let your vehicle warm up while standing; instead, start driving right away after making sure that you have good visibility through all windows. This will help the engine reach operating temperature faster and keep down emissions.

Major consumers of electricity are temporarily switched off when the engine is being started.

After starting a cold engine, there may be increased operating noises for a few seconds. This is normal and harmless.

When outside temperatures are below +41 °F (+5 °C) and the diesel fueled preheater is activated, minor fume build-up may occur underneath the vehicle.

Stopping the engine

Please first read and note the introductory information and heed the WARNINGS ..

Please perform these steps only in the order listed.		
Step	**Vehicles without Keyless Access**	**Vehicles with Keyless Access**
1.	Bring the vehicle to a complete stop ⇒⚠.	
2.	Depress and hold down the brake pedal until step 4 is completed.	
3.	Automatic transmission: Shift the transmission into Park **(P)**.	
4.	Apply the parking brake to help prevent the vehicle from moving..	
5.	Turn the vehicle key to position ⇒fig. 93 (0) in the ignition switch.	Briefly press the starter button ⇒fig. 94. If the engine will not switch off, carry out the emergency shut-off procedure..
6.	With a manual transmission, shift into 1st gear (vehicle on flat surface or pointing uphill) or reverse (vehicle pointing downhill).	
7.	Removing the vehicle key from the ignition switches off electrical equipment and activates the steering column lock.	Opening the doors switches off electrical equipment and activates the steering column lock.

WARNING

Never stop the engine before the vehicle has come to a complete stop. You can lose control of the vehicle, crash, and be seriously injured.

- **The airbags and safety belt pretensioners will not work when the ignition is switched off.**
- **The brake booster does not work when the engine is not running. More brake pedal pressure will be needed to stop the vehicle.**
- **The power steering system does not work when the engine is not running, and you will need more force to steer the vehicle.**
- **When the key is removed from the ignition switch, the steering will lock and you will not be able to steer the vehicle.**

NOTICE

If the vehicle has been driven hard for a long time, the engine could overheat when it is stopped. To reduce the risk of engine damage, let the engine idle in Neutral for about 2 minutes before you switch off the ignition.

If the ignition is switched on or the engine is running and the driver door is opened, a chime sounds. The chime is also a reminder to switch off the engine and turn off the ignition before leaving and locking the vehicle from the outside.

On vehicles with automatic transmissions, the vehicle key can only be removed from the ignition when the transmission is in Park **(P)**.

After the engine has been switched off, the radiator fan in the engine compartment may keep running for several minutes, or may start running after the vehicle has been parked for a while, even if the ignition is switched off and the vehicle key has been removed. The radiator fan shuts off automatically when the engine has cooled down enough.

Shifting

Introduction

In this section you'll find information about:

Warning and indicator lights
Pedals
Manual transmission: Gearshift lever
Automatic transmission: Selector lever
Shifting with Tiptronic®
Driving with automatic transmission
Automatic transmission malfunction
Gear recommendation

Explanatory notes in this section regarding automatic transmissions also apply to the DSG® Direct Shift Gearbox automatic transmission.

When the ignition is switched on and the transmission is in Reverse (R):

- The backup lights come on.

More information:

- Lower center console.
- Instruments.
- Braking, stopping and parking.
- Engine control and emission control system.
- Emergency closing and opening.

WARNING

Rapid acceleration can cause skidding and loss of traction, especially on slippery roads, resulting in a loss of vehicle control, collisions, and serious personal injury.

- **Only use the kick-down feature or fast acceleration if visibility, weather, road, and traffic conditions permit and other drivers will not be endangered by your driving and the vehicle's acceleration.**

WARNING

Constant braking causes the brakes to overheat and even to fail leading to collisions and serious personal injury.

- **Never "ride" the brakes or apply the brake pedal too often or too long.**
- **Riding the brakes will substantially reduce braking performance, increase stopping distance, and can cause complete brake system failure.**

NOTICE

- **Never "ride" the brakes by keeping your foot on the brake pedal when you do not want to brake. This will make the brakes wear faster.**

- **Before driving downhill, especially on hills that are long or steep, always reduce speed and shift into lower gear (manual or automatic transmission). This will let the vehicle use engine braking and reduce the load on the brakes. Otherwise, the brake system could overheat and even fail. Only use the brakes when you need them to slow the vehicle down more or to stop.**

Warning and indicator lights

Please first read and note the introductory information and heed the WARNINGS ..

Lights up	Possible cause	Proper response
	DSG® transmission too hot.	**Do not continue driving!** Allow the transmission to cool with the selector lever in the **P** position. If the warning does not turn off, do not continue driving. See your authorized Volkswagen dealer for assistance. Otherwise, serious transmission damage could result..
	Brake pedal not depressed.	Apply the brake pedal to select a drive gear..

Flashes	Possible cause	Proper response
	The release button in the selector lever did not engage. Vehicle movement is prevented.	Engage selector lever release button..
	Automatic transmission malfunction. blinks, alternating with the selector lever indicator, for example **D**.	Drive at low engine speed (rpm) to the nearest authorized Volkswagen dealer or authorized Volkswagen Service Facility to have the system checked.

When the ignition is switched on, several warning and indicator lights come on briefly for a function check. They go out after a few seconds.

WARNING

Failure to heed warning lights and instrument cluster text messages can cause the vehicle to break down in traffic and result in a collision and serious personal injury.

- **Never ignore warning lights or text WARNINGS.**
- **Always stop the vehicle as soon as it is safe to do so.**
- **Whenever stalled or stopped for repair, move the vehicle a safe distance off the road, turn on the emergency flashers, stop the engine, and use other warning devices to warn approaching traffic.**

NOTICE

Failure to heed warning lights or text WARNINGS can result in vehicle damage.

Pedals

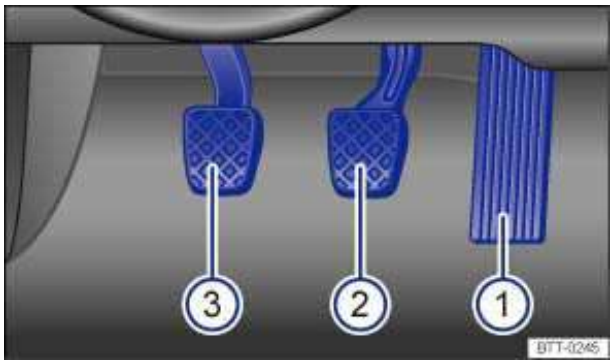

Fig. 96 Pedals in vehicles with manual transmission: 1 Accelerator pedal, 2 Brake pedal, 3 Clutch pedal.

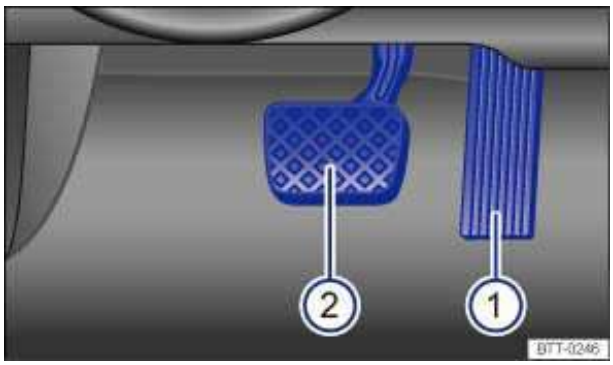

Fig. 97 Pedals in vehicles with automatic transmission: 1 Accelerator pedal, 2 Brake pedal.

Please first read and note the introductory information and heed the WARNINGS ⚠..

All pedals must always be able to move freely in and out without interference from floor mats or other things.

Only use floor mats that leave the pedal area free and are held securely in place with floor mat fasteners to help prevent sliding.

If a brake circuit malfunctions, more brake pedal travel is needed to bring the vehicle to a full stop, and it is important that nothing is in the way when you have to depress the brake pedal harder and farther than normal.

⚠ WARNING

Objects in the driver footwell can prevent the pedals from moving freely. This can cause loss of vehicle control and increase the risk of serious personal injuries.

- **Always make sure that nothing can interfere with the pedals.**
- **Always fasten floor mats securely to the floor.**
- **Never put floor mats or other floor coverings on top of already installed floor mats.**
- **Always make sure that nothing can fall into the driver footwell while the vehicle is moving.**

NOTICE

Always make sure that the pedals are able to move freely and that nothing can interfere with them. If a brake circuit fails, more brake pedal travel will be needed to bring the vehicle to a stop. The brake pedal must be pressed farther and harder than normal.

Manual transmission: Gearshift lever

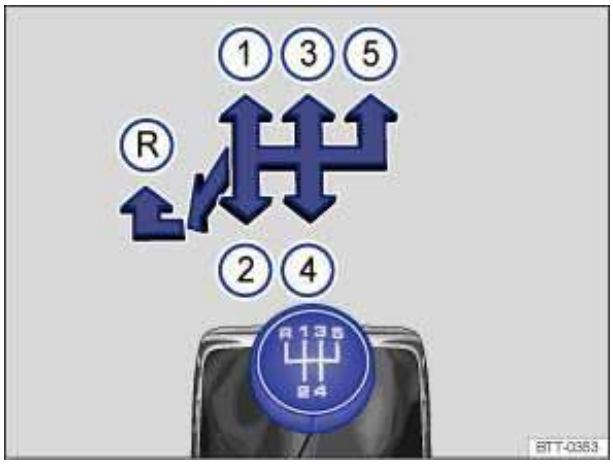

Fig. 98 Gearshift pattern of a 5-speed manual transmission.

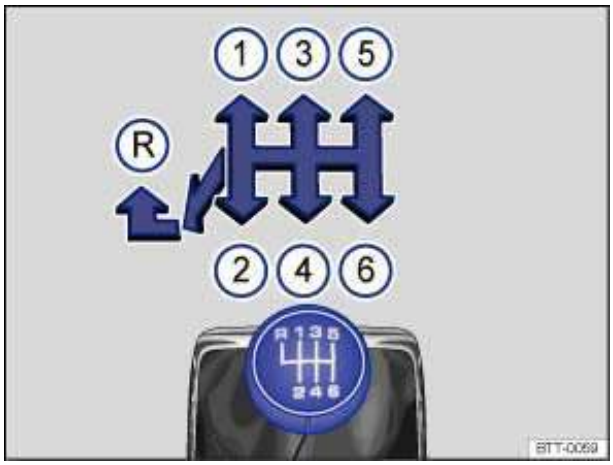

Fig. 99 Gearshift pattern of a 6-speed manual transmission.

Please first read and note the introductory information and heed the WARNINGS ⚠..

The positions of the individual gears are shown on the gearshift lever ⇒fig. 98 or ⇒fig. 99.

- Depress the clutch pedal all the way and hold.
- Move the gearshift lever into the desired position ⇒⚠.
- Release the clutch pedal to engage the gear.

The clutch pedal must be fully depressed to start the engine.

Shifting into reverse

- Only shift to the reverse gear when the vehicle is not moving.
- Depress the clutch pedal fully and hold ⇒⚠.
- Move the gearshift lever to neutral and press down.
- Move the shift lever to the left and then push forward into the reverse gear position ⇒fig. 98 (R) or ⇒fig. 99 (R).
- Release the clutch pedal to engage the gear.

Downshifting

You should always downshift gear by gear when driving, meaning always into the next lowest gear. Do not downshift when the engine rpm (revolutions per minute) is too high ⇒⚠. At fast speeds or high engine rpm, skipping over one or more gears when downshifting can cause damage to the clutch and transmission, even if a gear is not engaged ⇒ⓘ.

⚠ WARNING

Downshifting to a lower gear incorrectly can result in loss of vehicle control and can cause accidents and serious personal injuries.

⚠ WARNING

When the engine is running and a gear is engaged, the vehicle will start to move as soon as the clutch pedal is released, even when the parking brake is applied. This also applies when the parking brake is engaged.

- **Never shift into reverse when the vehicle is moving.**

ⓘ NOTICE

Shifting down to a gear that is too low when driving at fast speeds or high engine rpm can cause extensive damage to the clutch and transmission. That is true even if the clutch pedal is pressed so that the clutch is not engaged.

ⓘ NOTICE

To help prevent damage and premature wear:

- **Do not rest your hand on the gearshift lever while driving. Over time, the pressure will cause premature wear in the transmission.**
- **Make sure that the vehicle has come to a complete stop before shifting into reverse.**
- **Always depress the clutch pedal all the way when changing gears.**
- **Do not hold the vehicle on a hill using engine power with the clutch pedal partially engaged and the engine running.**

Automatic transmission: Selector lever

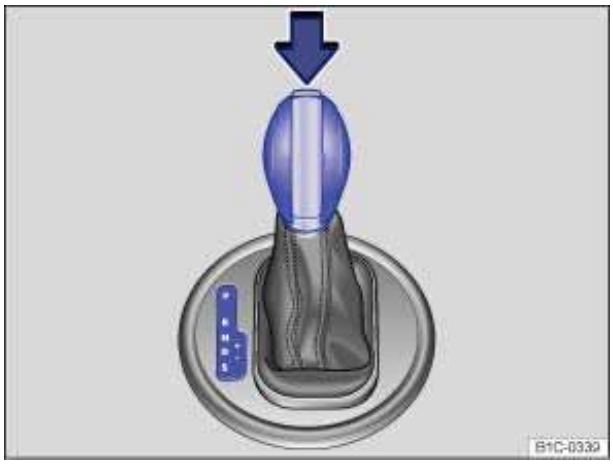

Fig. 100 Automatic transmission selector lever with shift lever release button (arrow).

🕮 Please first read and note the introductory information and heed the WARNINGS ⚠..

Automatic transmission vehicles have an Automatic Shift Lock (ASL). With ASL, you must depress the brake pedal and hold it down while pressing the release button on the selector lever handle in the direction of the arrow ⇒ fig. 100 in order to move the selector lever out of Park **(P)** and into a drive gear. When the selector lever is in Neutral **(N)**, you also have to depress the brake pedal before you can move the selector lever to Drive **(D)**, Sport Drive **(S)**, or Reverse **(R)**.

If the ignition is switched on, either the current selector lever setting or the current gear is shown in the instrument cluster display.

Selector lever position	Designation	Meaning ⇒ ⚠
P	**Park**	The drive wheels are mechanically locked. Select only when the vehicle is *not moving*. To change the selector lever position, switch on the ignition (if it is off) and then press the selector lever release button while holding down the brake pedal.
R	**Reverse**	The reverse gear is engaged. Shift into Reverse only when the vehicle is *not moving*.
N	**Neutral**	Transmission is in Neutral position. No power is transmitted to the wheels and no engine braking is available.
D	**Drive** (standard driving position)	All forward gears shift up and down automatically. The transmission shifts as needed depending on engine load, individual driving style, and vehicle speed.
S	**Sport Drive** (Sport driving position)	All forward gears automatically upshift *later* and downshift *earlier* than in the **D** (Drive) position, to take full advantage of the engine's power reserves. The transmission shifts as needed depending on engine load, individual driving style, and vehicle speed.

Automatic Shift Lock (ASL)

The Automatic Shift Lock (ASL) in Park **(P)** and Neutral **(N)** prevents drive positions from being engaged inadvertently, which would cause the vehicle to move.

To release the ASL, depress and hold the brake pedal with the ignition switched on. Press the release button on the selector lever at the same time.

The ASL is not engaged if the selector lever is moved quickly through Neutral **(N)** (e.g., when shifting from Reverse **(R)** to Drive **(D)**). This makes it possible to “rock” the vehicle backwards and forwards if it is stuck in snow or mud. The ASL engages automatically if the brake pedal is not depressed and the lever is in Neutral **(N)** for more than about 1 second and the vehicle is traveling no faster than about 3 mph (5 km/h).

In rare cases, the ASL may not engage on vehicles with DSG® Direct Shift Gearbox. If this happens, power to the drive wheels will be interrupted to prevent the vehicle from moving unexpectedly. The green indicator light k will blink and a text message will be displayed. To engage the Automatic Shift Lock (ASL):

- Depress and then release the brake pedal. Try to engage the ASL again.

WARNING

Moving the selector lever to the wrong position can cause loss of vehicle control, a collision, and serious personal injury.

- **Never accelerate when moving the selector lever.**
- **When the engine is running and a drive position is engaged, the vehicle will start to move as soon as the brake pedal is released.**
- **Never shift into Reverse or Park when the vehicle is moving.**

WARNING

Unintended vehicle movement can cause serious personal injury.

- **Never get out of the driver's seat while the engine is running, especially when the transmission is in a drive gear. If you must leave your vehicle while the engine is running, always set the parking brake and shift the transmission into Park (P).**
- **Never leave the vehicle in Neutral (N). It will roll down hills, whether the engine is running or not.**
- **When the engine is running and a drive gear - Drive (D), Sport Drive (S), or Reverse (R) - has been selected, press and hold the brake pedal to keep the vehicle from moving. The vehicle may “creep” and move forward or backward even if the engine is idling slowly.**
- **Never shift into Reverse (R) or Park (P) when the vehicle is moving.**

NOTICE

Even though the transmission is in Park (P), the vehicle may move a couple of inches (a few centimeters) forwards or backwards if you take your foot off the brake pedal after stopping the vehicle without first setting the parking brake.

If the selector lever is moved into Neutral **(N)** by mistake when the vehicle is moving, take your foot off the accelerator pedal. Wait until the engine speed has dropped to idle speed before moving the selector lever into a drive gear.

Leaving the selector lever for a long period of time in any position other than Park **(P)** when the ignition is switched off can drain the vehicle battery.

Shifting with Tiptronic®

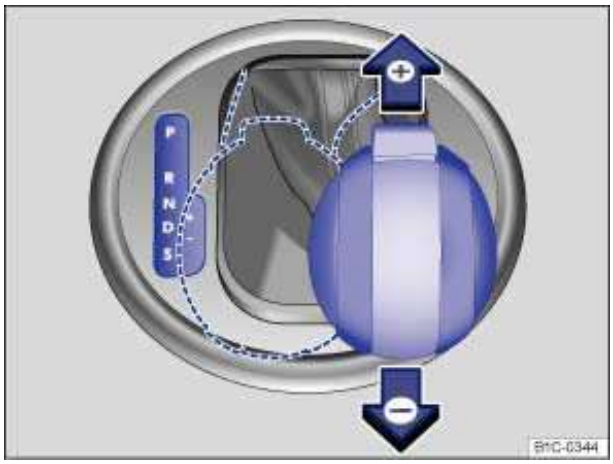

Fig. 101 Selector lever in Tiptronic position.

Fig. 102 Steering wheel with optional Tiptronic shift paddles.

Please first read and note the introductory information and heed the WARNINGS ⚠..

Tiptronic lets you upshift and downshift manually with the automatic transmission. When Tiptronic mode is used, the transmission stays in the current gear and does not upshift or downshift automatically unless the transmission senses a situation where upshifting or downshifting is necessary to keep the engine from over- or under-revving.

Using Tiptronic with the selector lever

- Push the selector lever sideways to the right from Drive **(D)** position into the Tiptronic position ⇒ ⚠ in *Automatic transmission: Selector lever.*.
- Briefly push the selector lever forward (+) to upshift into a higher gear or backward (–) to downshift into a lower gear ⇒ fig. 101.

Using Tiptronic with the shift paddles behind the steering wheel

- The paddles ⇒ fig. 102 work when the selector lever is in the Tiptronic position or when the selector lever is in Drive **(D)** or Sport Drive **(S)**. You do not have to move the selector lever over to the right into the Tiptronic position.
- To upshift, pull the paddle + OFF on the right toward you.
- To downshift, pull the paddle – on the left toward you.

- To switch off Tiptronic mode, pull the paddle + OFF on the right toward you and hold it there for about 1 second.

Tiptronic will switch off automatically if the shift paddles have not been used for a while and the selector lever is not in the Tiptronic position.

NOTICE

- **During acceleration, the transmission will shift automatically into the next higher gear before reaching maximum engine speed (rpm).**
- **If you use Tiptronic to shift into a lower gear, the transmission will downshift only when doing so will not over-rev the engine.**

Driving with automatic transmission

Please first read and note the introductory information and heed the WARNINGS ..

All forward gears shift up and down automatically.

Driving on hills

The steeper the grade, the lower the gear that must be selected. Lower gears increase the braking effect of the engine. Never coast downhill in Neutral **(N)**.

- Reduce speed.
- Switch to Tiptronic mode by moving the selector lever from Drive **(D)** to the right into the Tiptronic position..
- Downshift by pulling the selector lever back briefly (-).
- **OR:** Downshift using the paddles on the steering wheel..

If you stop and start up again when going uphill, you should use Hill Hold. as long as the engine is running.

Vehicles without Hill Hold: If you stop on a hill with the vehicle in gear, you must depress the brake pedal or engage the parking brake to keep the vehicle from rolling. Do not release the brake pedal or the parking brake until the vehicle has started to move forward ⇒.

Kick-down acceleration

The kick-down feature permits maximum acceleration when the selector lever is in the Drive **(D)**, Sport Drive **(S)** or Tiptronic mode.

If you push the accelerator all the way down, the vehicle will automatically downshift, depending on vehicle speed and engine speed (rpm). This feature lets you take advantage of the full acceleration capacity of the vehicle ⇒.

With kick-down actuated, the transmission will stay in the current gear longer and not upshift until the engine reaches maximum rpm.

WARNING

Rapid acceleration can cause skidding and loss of traction, especially on slippery roads, resulting in a loss of vehicle control, collisions, and serious personal injury.

- **Only use the kick-down feature or fast acceleration if visibility, weather, road, and traffic conditions permit and other drivers will not be endangered by your driving and the vehicle's acceleration.**
- **Always adapt your driving to the traffic flow.**

NOTICE

- **When stopping on hills with the transmission in a drive gear, do not use the accelerator to help prevent the vehicle from rolling backwards. This can cause the automatic transmission to overheat and be damaged.**
- **Never let the vehicle coast or roll down a hill in Neutral (N), especially when the engine is not running. The transmission will not be lubricated and will be damaged.**

Automatic transmission malfunction

Please first read and note the introductory information and heed the WARNINGS ..

Emergency shift program

If all selector lever position indicators in the instrument cluster display are highlighted against a bright background, there is a system malfunction. The automatic transmission and the DSG automatic transmission will then operate in the emergency shift program. The emergency shift program lets you drive the vehicle, but at a reduced speed and without being able to use all of the forward gears.

In some cases, vehicles with a DSG® Direct Shift Gearbox automatic transmission may **not be able to shift into reverse**. It is then impossible to drive the vehicle backwards.

In any event, have the automatic transmission checked by an authorized Volkswagen dealer or authorized Volkswagen Service Facility.

Overheating of Direct Shift Gearbox (DSG®) automatic transmission

The DSG® automatic transmission may overheat, for example, due to frequent starts, extended "creeping," or stop-and-go traffic. Overheating is indicated by the warning light Á and, if applicable, by a text message in the instrument cluster. An additional warning chime may sound. Stop and let the transmission cool down ⇒.

The vehicle does not move forward or in reverse even though a drive position is selected with the selector lever

If the vehicle does not move in the desired direction, the system may not have engaged the drive position correctly. Press the brake pedal and select the drive position again.

If the vehicle still does not move in the desired direction, there is a system malfunction. See your authorized Volkswagen dealer or authorized Volkswagen Service Facility for assistance to have the system checked.

NOTICE

- **As soon as you get any of these warnings about transmission overheating, you must either park the vehicle in a safe place or drive faster than 12 mph (20 km/h).**
- **If the text message and acoustic warning repeat themselves every 10 seconds or so, you must park the vehicle in a safe place as soon as you can safely do so and stop the engine. Let the transmission cool down.**
- **To help prevent damage to the transmission, do not drive the vehicle again until the acoustic warning has stopped. As long as the engine is overheated, avoid stop and start driving and avoid low speeds ("walking pace").**

Gear recommendation

Please first read and note the introductory information and heed the WARNINGS ⚠..

If your vehicle has a manual transmission, it may also be equipped with a gear recommendation feature. The gear recommendation displays a gear in the instrument cluster display that can help reduce fuel consumption.

Display	Meaning
●	The selected gear is optimal.
↑	Recommendation to shift into a higher gear.
↓	Recommendation to shift into a lower gear.

⚠ WARNING

The gear recommendation is only intended to assist the driver to select a gear for optimum fuel economy. The gear recommendation cannot take road and traffic conditions into account.

- **The driver is responsible for selecting the correct gear for the current driving conditions, such as when passing, when driving on hills or when towing a trailer.**

Selecting the optimal gear helps to reduce fuel consumption.

The gear recommendation display turns off when you press the clutch pedal.

Braking, stopping, and parking

Introduction

In this section you'll find information about:

Warning and indicator lights
Parking brake
Parking
About the brakes
Braking assistance systems
Brake fluid

The **braking assistance systems** are the Anti-Lock Brake System (ABS), Brake Assist System (BAS), Electronic Differential Lock (EDL), Anti-Slip Regulation (ASR) and Electronic Stability Control (ESC).

More information:

- Starting assistance systems.
- Tires and wheels.
- Parts, accessories, repairs and modifications.

WARNING

Driving with bad brakes or worn brake pads can cause a collision and serious personal injury.

- **If the brake pads are worn or you notice changes in the way the vehicle brakes, immediately contact an authorized Volkswagen dealer or authorized Volkswagen Service Facility to have the brake pads checked and, if necessary, replaced.**

WARNING

Parking improperly can cause serious personal injury.

- **Never remove the key from the ignition switch while the vehicle is moving or rolling to a stop. The steering wheel will lock and you will not be able to steer or control the vehicle.**
- **Never park the vehicle where the hot exhaust system or catalytic converter could ignite flammable materials, such as brush, leaves, dry grass, spilled fuel, etc.**
- **Always apply the parking brake when parking your vehicle.**
- **Improper use of the parking brake can seriously injure you and your passengers.**
- **Never use the parking brake to slow down the vehicle when it is moving, except in an emergency. The stopping distance is much longer because only the rear wheels are braked. Always use the foot brake to stop the vehicle.**
- **Never activate the throttle manually from the engine compartment when the engine is running and the automatic transmission is in gear. The vehicle will start to move as soon as the engine speed increases even if the parking brake is on.**
- **Never leave children or anyone who cannot help themselves behind in the vehicle. They could release the parking brake and move the gear selector lever or gear shift, which could cause the vehicle to start moving. This can lead to a crash and serious personal injuries.**
- **Always take the key with you when you leave the vehicle. The engine can be started and vehicle systems such as the power windows can be operated, leading to serious personal injury.**
- **Never leave children, disabled persons, or anyone who cannot help themselves in the vehicle. The doors can be locked with the remote control vehicle key, trapping passengers in the vehicle in an emergency. For example, depending on the time of year, people trapped in the vehicle can be exposed to very high or very low temperatures.**
- **Heat build-up in the passenger and luggage compartment of a parked vehicle can result in temperatures in the vehicle that are much higher than the outside temperatures, particularly in summer. Temperatures can quickly reach levels that can cause unconsciousness and death, particularly to small children.**

NOTICE

- **Always be careful when you park in areas with parking barriers or high curbs. These vary in height and could damage your bumper and related parts if the front of your vehicle hits a barrier or curb that is too high while you are getting into or out of a parking spot. To help prevent damage, stop before the tires of your vehicle touch a parking barrier or curb.**
- **Always be careful when you enter a driveway or drive up or down steep ramps or over curbs or other obstacles. Parts of the vehicle close to the ground may be damaged (such as bumper covers, spoilers, and parts of the engine, suspension, and exhaust systems).**

Warning and indicator lights

Please first read and note the introductory information and heed the WARNINGS ⚠..

Lights up	Possible cause or meaning ⇒ ⚠	Proper response
(P) PARK	Parking brake engaged.	⇒page 136.

Lights up	Possible cause or meaning ⇒ ⚠	Proper response
/ BRAKE	Brake system malfunction.	**Stop!** Get professional assistance immediately..
	Brake fluid level too low.	**Stop!** Check brake fluid level..
	Together with ABS indicator light j or ABS: ABS failure.	See an authorized Volkswagen dealer or an authorized Volkswagen Service Facility. The vehicle brakes will work without ABS.
/ ESC	ESC switched off by the system.	Switch ignition off and on again. You may have to drive a short distance.
	ESC malfunction.	See an authorized Volkswagen dealer or an authorized Volkswagen Service Facility.
	Together with ABS indicator light j or ABS: ABS malfunction.	See an authorized Volkswagen dealer or an authorized Volkswagen Service Facility. The vehicle brakes will work without ABS.
	Vehicle battery has been reconnected.	Drive a short distance at a speed of 10–12 mph (15–20 km/h). If the indicator light stays on, see an authorized Volkswagen dealer or an authorized Volkswagen Service Facility..
/ ABS	Together with ESC indicator light ö or ESC: ABS malfunction.	See an authorized Volkswagen dealer or an authorized Volkswagen Service Facility. The vehicle brakes will work without ABS.
	Together with warning light h or BRAKE: ABS failure.	
	Brake pedal not depressed.	Depress the brake pedal to select a gear or drive position.

Flashes	Possible cause	Proper response
/ ESC	ESC or ASR is operating.	Take foot off accelerator pedal. Adapt driving to road conditions.
	The lock button in the selector lever is not engaged.	Engage the Automatic Shift Lock (ASL)..

When the ignition is switched on, several warning and indicator lights come on briefly for a function check. They go out after a few seconds.

⚠ WARNING

Failure to heed warning lights and instrument cluster text messages can cause the vehicle to break down in traffic and result in a collision and serious personal injury.

- **Never ignore warning lights or text WARNINGS.**
- **Always stop the vehicle as soon as it is safe to do so.**

WARNING

Driving with bad brakes can cause a collision and serious personal injury.

- **If the brake warning light BRAKE or h does not go out, or comes on when driving, either the brake fluid level in the reservoir is too low or there is a fault in the brake system. Stop the vehicle as soon as you can do so safely and get expert assistance., *Brake fluid*.**
- **If the brake warning light BRAKE or h comes on at the same time as the ABS warning light ABS or j , the ABS may not be working properly. This could cause the rear wheels to lock up relatively quickly during braking. Rear wheel brake lock-up can cause loss of vehicle control.**
- **If you believe the vehicle is safe to drive, drive slowly and very carefully to the nearest authorized Volkswagen dealer, authorized Volkswagen Service Facility, or other qualified workshop and have the brake system inspected. Avoid sudden hard braking and steering.**
- **If the ABS indicator light ABS or j does not go out, or if it comes on while driving, the ABS system is not working properly. The vehicle can then be stopped only with the standard brakes (without ABS). You will not have the protection ABS provides. Contact your authorized Volkswagen dealer or an authorized Volkswagen Service Facility as soon as possible.**
- **If the brake pads are worn or you notice changes in the way the vehicle brakes, immediately contact an authorized Volkswagen dealer or authorized Volkswagen Service Facility to have the brake pads checked and, if necessary, replaced.**

NOTICE

Failure to heed warning lights or text WARNINGS can result in vehicle damage.

Parking brake

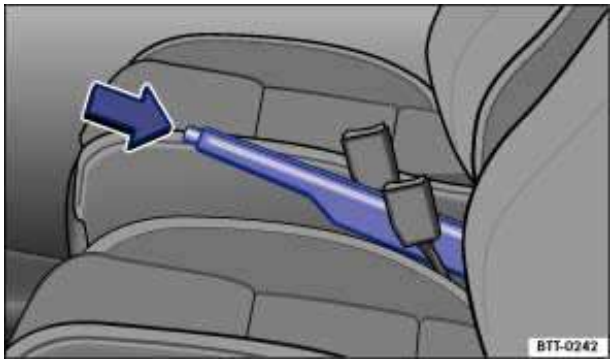

Fig. 103 Between the front seats: Parking brake.

Please first read and note the introductory information and heed the WARNINGS ..

Setting the parking brake

- Pull the parking brake lever up firmly.
- When the ignition is on, the indicator light Ⓟ or PARK appears in the instrument cluster display to show that the parking brake is engaged..

Releasing the parking brake

- Pull the lever up slightly and press the release button ⇒ fig. 103 (arrow).

- While holding the release button down, move the lever all the way down.

WARNING

Improper use of the parking brake can cause accidents and severe injuries.

- **Never use the parking brake to slow down the vehicle when it is moving, except in an emergency. Braking distance is much longer, since only the rear wheels are braked. Always use the foot brake.**
- **Never drive with the parking brake partially engaged. This can cause the brake to overheat and negatively affect the brake system. It will also cause the rear brake pads to wear prematurely.**
- **Never activate the throttle manually from the engine compartment when the engine is running and the automatic transmission is in gear. The vehicle will start to move even if the parking brake is engaged.**

NOTICE

Even though the transmission is in Park (P), the vehicle may move a couple of inches (a few centimeters) forwards or backwards if you take your foot off the brake pedal after stopping the vehicle without first firmly setting the parking brake.

A warning signal sounds if you drive faster than about 4 mph (6 km/h) with the parking brake engaged.

Parking

Please first read and note the introductory information and heed the WARNINGS ..

Please note legal regulations when stopping and parking your vehicle.

Parking the vehicle

Please perform these steps only in the order listed.

- Stop the vehicle on a suitable surface ⇒.
- Hold the brake pedal down until the engine is switched off.
- Apply the parking brake to help prevent the vehicle from moving..
- For automatic transmissions: Shift the transmission into Park **(P)**.
- Switch off the engine and then take your foot off the brake.
- Remove the vehicle key from the ignition.
- If necessary, turn the steering wheel slightly to engage the steering column lock.
- Shift manual transmission into 1st gear (on level ground or if pointed uphill) or reverse (if pointed downhill) and let the clutch out.
- Make sure all passengers and especially children leave the vehicle.
- Take all vehicle keys with you when leaving your vehicle.
- Lock the vehicle.

On hills

Before stopping the engine, turn the steering wheel so that, if the vehicle starts to roll, its front wheels will roll into the curb:

- Facing downhill, turn the front wheels so that they point toward the curb.
- Facing uphill, turn the front wheels so that they point away from the curb.

WARNING

The vehicle exhaust system and the catalytic converter or diesel particulate filter get very hot. They can cause fires and serious personal injury.

- **Never park where the hot exhaust system could ignite flammable materials, such as brush, leaves, dry grass, spilled fuel, etc.**

NOTICE

- **Always be careful when you park in areas with parking barriers or high curbs. These vary in height and could damage your bumper and related parts if the front of your vehicle hits a barrier or curb that is too high while you are getting into or out of a parking spot. To help prevent damage, stop before the tires of your vehicle touch a parking barrier or curb.**
- **Always be careful when you enter a driveway or drive up or down steep ramps or over curbs or other obstacles. Parts of the vehicle close to the ground may be damaged (such as bumper covers, spoilers, and parts of the engine, suspension, and exhaust systems).**

About the brakes

Please first read and note the introductory information and heed the WARNINGS ⚠..

New brake pads do not provide full performance during the first 100 to 200 miles (200 to 300 km) and must first be “broken” in ⇒⚠. To some extent, you can make up for the somewhat reduced performance by applying more pressure to the brake pedal. But, **during the break-in period**, the stopping distance for hard braking and emergency braking will be longer until the brakes are fully broken in. Avoid hard braking and situations that might require hard braking (such as following other vehicles too closely) – especially during the break-in period.

Brake pad wear depends mostly on operating conditions and the way the vehicle is driven. If you do a lot of city and short-distance driving and/or have a sporty driving style, you should have the brake pads checked by an authorized Volkswagen dealer or authorized Volkswagen Service Facility more often than the regular service intervals.

Wet brakes (for example, after driving through water or washing the vehicle or after heavy rainfall) will not brake as well. Stopping distances will be longer when brake discs are wet or, in winter, even icy. Wet or icy brakes must be dried as soon as possible by carefully applying the brakes a couple of times while traveling at a relatively high speed. Make sure nobody is behind you and that you do not endanger yourself or others ⇒⚠.

Brakes coated with road salt also react slower and need longer stopping distances. If there is salt on the roads and you are not braking regularly, brake carefully and gently from time to time to remove any salt coating from the brake discs and pads ⇒⚠.

Brake disc **corrosion** (rust) and **dirt** build-up on the brake pads are more likely to occur if the vehicle is not driven much or is driven only for short distances with little braking. If the brakes have not been used and there is some rust on the discs, clean the brake discs and pads once in a while by carefully braking a couple of times while driving at relatively high speed to help clean the brake discs and pads. Make sure nobody is behind you and that you do not endanger yourself or others ⇒⚠.

Brake system malfunction

If you brake and find that the vehicle doesn't brake nearly as well as it used to (sudden increase in stopping distance), a brake circuit may have failed. The brake warning light (!) or BRAKE will come on and a message may appear in the instrument cluster display. If you believe the vehicle is safe to drive, immediately take it to the nearest authorized Volkswagen dealer or authorized Volkswagen Service Facility for repair. Drive slowly and very carefully, allow for the longer stopping distance, and be ready to push longer and harder on the brake pedal to slow the vehicle down.

Brake booster

The brake booster works only when the engine is running. It increases the force on the brakes above and beyond the pressure put on the brake pedal by the driver.

If the brake booster is not working, or if the vehicle has to be towed, you will have to push the brake pedal harder to make up for the lack of booster assistance and the resulting longer stopping distance ⇒ ⚠.

WARNING

New brake pads do not provide maximum braking performance.

- **New brake pads do not have the best stopping power for the first 200 miles (320 km) and must be “broken in.” You can compensate for the slightly reduced braking force by putting more pressure on the brake pedal.**
- **Drive with extra care while the new brake pads are being broken in. This reduces the risk of collisions and serious personal injuries due to a loss of control over the vehicle.**
- **Never follow other vehicles too closely or put yourself into other situations that might require sudden, hard braking, especially when the brake pads have not been broken in.**

WARNING

Overheated brakes will reduce the vehicle's stopping power and increase stopping distances considerably.

- **When driving downhill, the brakes have to work especially hard and heat up quickly.**
- **Before driving downhill, especially on hills that are long or steep, always reduce speed and shift into lower gear (manual or automatic transmission). This will let the vehicle use engine braking and reduce the load on the brakes. Otherwise, the brake system could overheat and possibly fail. Only use the brakes when you need them to slow the vehicle down more or to stop.**
- **A damaged front spoiler or a non-standard spoiler can reduce airflow to the brakes and make them overheat.**

WARNING

Wet brakes or brakes coated with ice or road salt react slower and need longer stopping distances.

- **Carefully apply the brakes to test them.**
- **Always dry brakes and clean off ice and salt coatings with a few cautious brake applications when visibility, weather, road and traffic conditions permit.**

WARNING

Driving when the brake booster is not working increases stopping distances and can cause accidents and serious personal injuries.

- **Never let the vehicle coast when the engine is switched off.**
- **If the brake booster is not working (such as when the vehicle is being towed), a lot more pedal force is needed to slow down and stop.**

NOTICE

- **Never "ride" the brakes by keeping your foot on the brake pedal when you do not want to brake. Constant pressure on the brake pedal can make the brakes overheat. Riding the brakes will substantially reduce braking performance, increase stopping distance, and can cause complete brake system failure.**
- **Before driving downhill, especially on hills that are long or steep, always reduce speed and shift into lower gear (manual or automatic transmission). This will let the vehicle use engine braking and reduce the load on the brakes. Otherwise, the brake system could overheat and possibly fail. Only use the brakes when you need them to slow the vehicle down more or to stop.**

When the front brakes are serviced, you should have the rear brake pads inspected at the same time. The wear of all brake pads should be visually checked regularly. The best way to check for brake pad wear is to have your authorized Volkswagen dealer or authorized Volkswagen Service Facility visually inspect the pads through the openings in the wheel rims or from underneath the vehicle. If necessary, the wheels can be taken off for a more thorough inspection.

Braking assistance systems

Please first read and note the introductory information and heed the WARNINGS ..

The ESC, ABS, BAS, ASR, and EDL braking assistance systems work only when the engine is running. These systems can significantly improve active driving safety.

Electronic Stability Control (ESC)

ESC helps to improve road holding and vehicle dynamics to help reduce the probability of skidding and loss of vehicle control. It works only when the engine is running. ESC detects certain difficult driving situations, including when the vehicle is beginning to spin (yaw) out of control. ESC then helps you to get the vehicle back under control by selectively braking the wheels and/or reducing engine power and by providing steering assistance to help hold the vehicle on the driver's intended course.

ESC has limitations. It is important to remember that ESC cannot overcome the laws of physics. It will not always be able to help out under all conditions you may come up against. For example, ESC may not always be able to help you master situations where there is a sudden change in the coefficient of friction of the road surface. When there is a section of dry road that is suddenly covered with water, slush or snow, ESC cannot perform the same way it would on a dry surface. If the vehicle "hydroplanes" (rides on a cushion of water instead of the road surface), ESC will not be able to help you steer the vehicle because contact with the pavement has been interrupted and the vehicle cannot be braked or steered. During fast cornering, particularly on winding roads, ESC cannot always deal as effectively with difficult driving situations as it can at lower speeds.

Always adjust your speed and driving style to visibility, road, traffic, and weather conditions. ESC cannot override the vehicle's physical limits, increase the available traction, or keep a vehicle on the road if road departure is a result of driver inattention. Instead, ESC improves the possibility of keeping the vehicle under control and on the road during extreme maneuvers by using the driver's steering inputs to help keep the vehicle going in the intended direction. If you are traveling at a speed that

causes you to run off the road before ESC can provide any assistance, you may not experience the benefits of ESC.

ESC includes and/or works together with the ABS, BAS, ASR, EDL, and XDL systems (see below). ESC is switched on all the time and cannot be switched off.

Anti-Lock Brake System (ABS)

ABS helps to keep the wheels from locking up and helps to maintain the driver's ability to steer and control the vehicle. This means the vehicle is less likely to skid, even during hard braking:

- Push the brake pedal down hard and hold it there. Don't take your foot off the pedal or reduce the force on the pedal!
- Do not “pump” the brake pedal or let up on it!
- Steer the vehicle while pushing down hard on the brake pedal.
- ABS stops working if you release or let up on the brake.

When ABS is doing its job, you will notice a **slight vibration** through the brake pedal and hear a noise. *ABS cannot shorten the stopping distance under all conditions.* The stopping distance may even be longer, for instance, when driving on gravel or on newly fallen snow covering an icy or slippery surface.

Brake Assist (BAS)

The Brake Assist System can help to reduce stopping distances. If you press the brake pedal very quickly, BAS detects an emergency situation. It then very quickly builds up full brake system pressure, maximizing braking power and reducing the stopping distance. This way, ABS can be activated more quickly and efficiently.

Do **not** reduce pressure on the brake pedal! BAS switches off automatically as soon as you release or let up on the brake.

Anti-Slip Regulation (ASR)

ASR reduces engine power directed to spinning wheels and adjusts power to the road conditions. Even under poor road conditions, ASR can make it easier to get moving, accelerate, and climb hills.

ESC and ASR can help when driving on loose surfaces (such as gravel) and in deep snow. If you get stuck in deep snow, you may be able to get going again by “rocking” the vehicle back and forth. ESC and ASR recognize this special driving situation and automatically increase the speed of the front wheels. Keep pressing the accelerator and let ESC increase the speed of the front wheels to help you keep moving or get moving again.

Electronic Differential Lock (EDL and XDL)

EDL is applied during regular straight-line acceleration. EDL gently brakes a drive wheel that has lost traction (spinning) and redirects the drive force to other drive wheels. In extreme cases, EDL automatically switches off to keep the brake from overheating. As soon as the brake has cooled down, EDL automatically switches on again.

XDL is an extension of the Electronic Differential Lock system. XDL does not react to drive wheel slippage when driving straight ahead. Instead, XDL detects slippage of the inside front wheel during fast cornering. XDL applies enough brake pressure to this wheel in order to stop the slippage. This improves traction, which helps the vehicle stay on track.

WARNING

Driving fast on icy, slippery, or wet roads can lead to a loss of control and result in serious personal injury for you and your passengers.

- **Always adjust your speed and driving style to road, traffic, weather, and visibility conditions. Never let the additional safety that ESC, ABS, BAS, ASR, and EDL can provide tempt you into taking extra risks.**
- **Braking assistance systems cannot overcome the laws of physics and always prevent loss of vehicle control. Slippery and wet roads are still dangerous even with ESC and the other systems!**
- **Driving too fast on wet roads can cause the wheels to lose contact with the road and "hydroplane." A vehicle that has lost road contact cannot be braked, steered, or controlled.**
- **These systems cannot reduce the risk of accident, for example if you drive too fast for conditions or if you do not keep your distance from the vehicle in front of you.**
- **Although these systems are very effective and can help you control the vehicle in many difficult situations, always remember that your vehicle handling control is limited by tire traction.**
- **When accelerating on a slippery surface, for example on ice and snow, depress the accelerator carefully. Even with these systems, the wheels may start to spin, leading to a loss of vehicle control.**

WARNING

The effectiveness of ESC can be significantly reduced if other components and systems that affect vehicle dynamics, including but not limited to brakes, tires, and other systems mentioned above, are not properly maintained or functioning.

- **Always remember that vehicle alterations or modifications can affect the functioning of the ABS, BAS, ASR, EDL, and ESC systems.**
- **Changing the vehicle suspension or using an unapproved tire/wheel combination can change the way the ABS, BAS, ASR, EDL, and ESC systems work and reduce their effectiveness.**
- **The effectiveness of ESC is also determined by the tires fitted..**

All 4 wheels must be equipped with identical tires in order for ESC and ASR to work properly. Differences in the tread circumference of the tires can cause the system to reduce the engine power when it is not expected.

If ABS is not working, ESC, ASR, and EDL will also not work.

You may hear noises when these systems are active.

Brake fluid

Fig. 104 In the engine compartment: Brake fluid reservoir cap.

Please first read and note the introductory information and heed the WARNINGS ⚠..

Brake fluid absorbs water from the air over time. Too much water in the brake fluid will damage the brake system. Water also lowers the boiling point of the brake fluid. Too much water in the brake fluid can cause vapor lock during heavy brake use or hard braking. Vapor lock reduces braking performance, increases stopping distances and can even cause total brake failure. Your safety and the safety of others depends on brakes that are working properly at all times ⇒⚠.

Brake fluid specifications

Volkswagen has developed a special brake fluid that is optimized for the brake system in your Volkswagen. Volkswagen recommends that you use brake fluid that expressly conforms to quality standard **VW Standard 501 14** for optimum performance of the brake system. Check the information on the container for the brake fluid you want to use to make sure it meets the requirements for your vehicle.

Brake fluid that complies with **VW Standard 501 14** can be purchased from your authorized Volkswagen dealer or authorized Volkswagen Service Facility.

If this special brake fluid is not available you may – under these circumstances – use another high quality brake fluid that complies with U.S. Federal Motor Vehicle Safety Standard (FMVSS) 116 DOT 4 ⇒⚠.

Please note, however, that not all brake fluids that comply with U.S. Federal Motor Vehicle Safety Standard FMVSS 116 DOT 4 have the same chemical composition. Some of these brake fluids can contain chemicals that could, over time, degrade or damage internal parts of the vehicle's brake system.

Volkswagen therefore recommends that you use brake fluid that expressly complies with **VW Standard 501 14** for optimum brake system performance over the long term.

Brake fluid level

The fluid level in the transparent brake fluid reservoir must always be between the MIN and MAX marking ⇒⚠.

On some vehicles, engine components block the view of the brake fluid reservoir and make it impossible to see the brake fluid level. If you cannot clearly see the brake fluid level in the brake fluid reservoir, please see an authorized Volkswagen dealer or authorized Volkswagen Service Facility.

The brake fluid level drops slightly when the vehicle is being used as the brake pads wear and the brakes are automatically adjusted.

Changing brake fluid

Brake fluid must be changed according to the service schedule in your ⇒ Booklet *Warranty and Maintenance*. Have the brake fluid checked by an authorized Volkswagen dealer or an authorized Volkswagen Service Facility. Refill only with new brake fluid that meets the standards listed above.

WARNING

Brake failure and reduced brake performance can be caused by not having enough brake fluid in the reservoir or by old or incorrect brake fluid.

- **Check the brake system and brake fluid level regularly.**
- **Always change the brake fluid according to the service schedule in your**

⇒ Booklet *Warranty and Maintenance*.

- **Hard braking with old brake fluid may cause vapor lock. Vapor lock reduces braking performance, increases stopping distances and can even cause total brake failure.**
- **Always make sure that only the correct brake fluid is used. Only use brake fluid that expressly conforms to VW Standard 501 14 or, if it is not available, only use a high-quality brake fluid that conforms to U.S. Standard FMVSS 116 DOT 4 requirements.**
- **Using another brake fluid, or one that is not of high quality, can impair the function of the brake system and reduce its effectiveness. If the container does not say that the brake fluid complies with VW Standard 501 14, or U.S. Standard FMVSS 116 DOT 4, do not use it.**
- **The brake fluid must be new.**

WARNING

Brake fluid is poisonous.

- **To reduce the risk of poisoning, never use food, beverage or other non-original containers to store brake fluid. Someone might be misled by the original label on the container, or by the shape of the container, and drink the brake fluid. This could occur even if you relabel the container as "brake fluid."**
- **Only store brake fluid in the closed, original container and keep it out of the reach of children.**

NOTICE

Brake fluid will damage vehicle paint, plastic parts, and tires. Wipe any brake fluid off vehicle paint and other vehicle parts immediately.

Brake fluid can pollute the environment. Brake fluid that has leaked out must be collected and disposed of properly, following all applicable environmental regulations.

Saving fuel and helping the environment

Introduction

In this section you'll find information about:

Efficient driving style

Fuel-efficient driving

Fuel consumption, environmental impact, and wear and tear on engine, brakes and tires depend mainly on the following 3 factors:

- Your personal driving style.
- External conditions (weather, road conditions).
- Technical requirements.

You can reduce fuel consumption by up to 25% by using a few simple techniques and adjusting your driving style.

WARNING

Always adjust your speed and the distance you keep between you and the vehicles ahead of you to the road, traffic, weather, and visibility conditions.

Efficient driving style

Please first read and note the introductory information and heed the WARNINGS ..

Shifting faster

As a rule, the following applies: The higher gear is always the most efficient gear. The rule of thumb for most vehicles is to drive in 3rd gear at 20 mph (30 km/h), 4th gear at 25 mph (40 km/h), 5th gear at 30 mph (50 km/h), and 6th gear at 36 mph (60 km/h).

If traffic and driving conditions permit, "skipping" gears when upshifting also saves fuel.

Do not run the gears up to their limit. Use 1st gear only to start moving and then smoothly shift into 2nd gear. Avoid kick-downs in vehicles with automatic transmissions.

Coasting

If you take your foot off the accelerator, fuel delivery to the engine is interrupted, which lowers fuel consumption.

Therefore, when nearing a red stop light, for instance, allow the vehicle to coast without using the accelerator. Press the clutch pedal and release it only if the vehicle moving too slowly or the coasting distance is too long. The engine will then continue to run at idle.

In situations where the vehicle will be stopped for a longer period of time, such as at a railroad crossing, physically switch off the engine.

Defensive driving and "flowing" with traffic

Frequent braking and acceleration increase fuel consumption significantly. Just by driving defensively and keeping a sufficiently large distance away from the vehicle in front of you can make up for the speed fluctuations caused by taking your foot off the accelerator. Active braking and accelerating is then not necessarily required.

Calm and smooth driving

Consistency is more important than speed. The more smoothly you drive, the less fuel the vehicle consumes.

When driving on the highway or freeway, a constant, moderate speed is more efficient and economical than constantly accelerating and braking. Usually you can reach your destination just as quickly by driving at a moderate, but steady speed.

The cruise control system can assist in maintaining a uniform driving style.

Moderate use of extra electrical loads

Comfort inside the vehicle is nice and important, but it is important to use them in an environmentally conscious manner.

Some devices can increase fuel consumption when activated (examples):

- Climate control system (air conditioner): If the air conditioner has to produce starkly contrasting temperatures, it requires a large amount of energy, which is generated by the engine. The temperature in the vehicle should therefore not be extremely different from that of the outside temperature. It may be helpful to ventilate the vehicle before driving and then to drive a short distance with the windows open. After that, switch on the air conditioner with the windows closed. Keep the windows closed when driving at high speeds. Open windows increase fuel consumption.
- Switch off seat heating once it has served its purpose.
- Switch off the rear window defroster as soon as the windows are free of fog and ice.

Additional factors that increase fuel consumption (examples):

- Malfunctioning engine control.
- Driving in the mountains.

NOTICE

Never let the vehicle coast or roll down a hill in Neutral (N), especially when the engine is not running. The transmission will not be lubricated and will be damaged.

Fuel-efficient driving

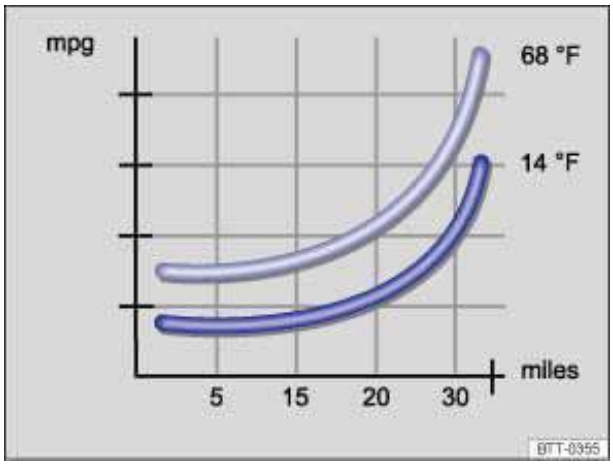

Fig. 105 Fuel consumption in mpg at 2 different outside air temperatures.

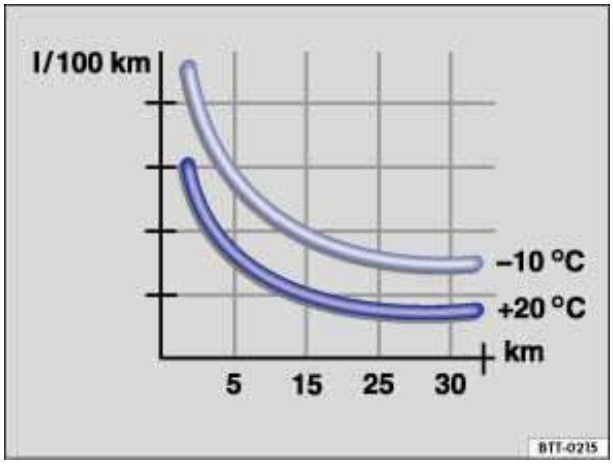

Fig. 106 Fuel consumption in l/100 km at 2 different outside air temperatures.

Please first read and note the introductory information and heed the WARNINGS ⚠..

Driving defensively and economically can easily reduce fuel consumption by 10 to 15%.

The vehicle consumes the most fuel when accelerating. Defensive driving requires less braking and therefore less acceleration. If possible, coast the vehicle to a stop, for example, when you can see that the next traffic light is red or about to turn red.

Avoid traveling short distances

A cold engine consumes significantly more fuel immediately after starting. It takes a few miles (km) before the engine is warmed up and fuel consumption is stabilized.

To reduce fuel consumption and the emission of pollutants effectively, the engine and catalytic converter must reach their optimal **operating temperature**. Critical in this context is also the **outside air temperature**.

fig. 106 and display the varying fuel consumption rates for the same distance driven, once at +68 °F (+20 °C) and once at +14 °F (-10 °C).

Therefore, avoid driving short distances unnecessarily and consolidate routes.

Under the same conditions, the vehicle consumes more fuel in winter than in summer.

“Letting the engine run to warm up” is not only illegal in some places, but also technically not necessary and wastes fuel.

Adjust the tire pressure

The proper tire pressure helps reduce rolling resistance as well as fuel consumption.

When purchasing new tires, always make sure that the tires are optimized for lower rolling resistance.

Use low viscosity engine oil

Fully “synthetic,” low viscosity engine oils that expressly comply with Volkswagen oil quality standards reduce fuel consumption. Low viscosity engine oils reduce the frictional resistance on the engine and are distributed more evenly and quickly, particularly when cold-starting the engine. The effect is particularly apparent in vehicles that frequently travel short distances.

Always ensure the right engine oil level is maintained and keep to the scheduled service intervals (engine oil changes).

Make sure the engine oil that you purchase expressly complies with Volkswagen oil quality standards and is the oil approved by Volkswagen for your vehicle.

Avoid unnecessary weight

The lighter the vehicle, the more economical and eco-friendly it will be. For example, an extra 220 lbs (100 kg) of weight increases fuel consumption by up to 1 pint per 60 miles (0.3 l/100 km).

Remove all unnecessary items and unnecessary dead weight from the vehicle.

Remove unnecessary aftermarket components

The more aerodynamic the vehicle, the less fuel it will consume. Aftermarket components such as bicycle racks reduce its aerodynamic performance.

Therefore, remove unnecessary structures and unused rack systems, particularly if planning to drive at higher speeds.

Steering

Introduction

In this section you'll find information about:

Warning and indicator lights

Steering system information

The power steering system is either hydraulic or electro-mechanical. In both cases, the power steering works only when the engine is running.

The hydraulic power steering system uses hydraulic lines, hydraulic oil, a pump, a filter, and other parts to maintain a constant oil pressure in the hydraulic system.

The electro-mechanical power steering system automatically adjusts to driving speed, steering torque, and the steering angle of the wheels. It delivers extra steering force only when you are actually turning the wheels. The electro-mechanical power steering works only when the engine is running.

More information:

- Starting and stopping the engine.
- Vehicle battery.
- Towing.

WARNING

Turning the steering wheel is very hard when the power steering system is not working. This makes it harder to steer and control the vehicle.

- **Power steering works only when the engine is running.**
- **Never let the vehicle coast with the engine switched off.**
- **Never remove the key from the ignition switch while the vehicle is moving or rolling to a stop. The steering wheel will lock and you will be unable to control the vehicle.**

Warning and indicator lights

Please first read and note the introductory information and heed the WARNINGS ..

Lights up	Possible cause	Proper response
	Power steering malfunction.	**Stop!** Have the power steering system checked immediately by an authorized Volkswagen dealer or an authorized Volkswagen Service Facility.

Lights up	Possible cause	Proper response
	Power steering assist is reduced.	Stop, restart the engine, and drive a short distance. If the yellow warning light does not come on again, you do **not** need to have the steering system checked. Otherwise, have the steering checked immediately by an authorized Volkswagen dealer or an authorized Volkswagen Service Facility.
	Vehicle battery was disconnected and has been reconnected.	Drive a short distance at about 10–12 mph (15–20 km/h).

Flashes	Possible cause	Proper response
	Electronic steering column lock malfunction.	**Stop!** The ignition cannot be switched on. The vehicle must not be towed! Get professional assistance.
	Steering system stiff.	Turn the steering wheel back and forth.
	Steering column not locked/unlocked.	Switch the ignition off and then switch it on again. Heed any messages shown in the instrument cluster display, if applicable. On vehicles with Keyless Access., press the starter button briefly twice in a row without depressing the brake or clutch pedal. **Do not drive any farther** if the steering column remains locked after you switch on the ignition. Contact your authorized Volkswagen dealer or an authorized Volkswagen Service Facility for assistance.

When the ignition is switched on, several warning and indicator lights come on briefly for a function check. They go out after a few seconds.

WARNING

Failure to heed warning lights and instrument cluster text messages can cause the vehicle to break down in traffic and result in a collision and serious personal injury.

- **Never ignore warning lights or text WARNINGS.**
- **Always stop the vehicle as soon as it is safe to do so.**

NOTICE

Failure to heed warning lights or text WARNINGS can result in vehicle damage.

Steering system information

Please first read and note the introductory information and heed the WARNINGS ..

To help make it more difficult to steal your vehicle, you should always make sure the steering column is locked before leaving the vehicle.

Electronic steering column lock

Vehicles with Keyless Access: The steering column is locked if the driver door is opened with the ignition switched off. The vehicle must be standing still and the transmission must be in Park **(P)** on an automatic transmission vehicle.

If the driver door is opened before the ignition is switched off, the electronic steering column lock is activated only after the vehicle has been locked with the vehicle key or via the sensor in the door handle.

Mechanical steering column lock

Vehicles without Keyless Access: The steering column is locked if the vehicle is stationary and the vehicle key is removed from the ignition switch.

Engaging the steering column lock	Disengaging the steering column lock
Parking the vehicle..	Turn the steering wheel slightly to take pressure off the steering column lock.
Remove the vehicle key.	Insert the vehicle key into the ignition switch.
Turn the steering wheel slightly until you hear the steering column lock engage.	Hold the steering wheel in this position and turn the ignition switch.

Power steering

Power steering automatically adjusts to driving speed, steering torque, and the steering angle of the wheels. Power steering works only when the engine is running.

If power steering is reduced or lost completely, it will be much harder to steer and control the vehicle.

Counter-steering assistance

Counter-steering assistance is part of Electronic Stability Control (ESC). This feature makes it easier for the driver to control the vehicle in difficult situations. For example, if you have to brake hard on a surface that provides uneven traction, the vehicle could pull to the right or left. ESC detects this situation and helps the driver counter-steer with additional steering power ⇒ ⚠.

WARNING

The counter-steering assistance in ESC can do no more than help the driver steer in difficult situations. The driver must still control the vehicle. The vehicle does not steer by itself with this feature!

NOTICE

If the ignition is off, the steering column lock will engage and the vehicle cannot be steered. For this reason, you must leave the ignition on when going through an automatic car wash, for example, so that the wheels will still steer.

Driver assistance systems

Starting assistance systems

Introduction

In this section you'll find information about:

Hill Hold

More information:

- Volkswagen Information System.
- Braking, stopping and parking.
- Vehicle battery.
- Tires and wheels.
- Parts, accessories, repairs and modifications.
- Jump-starting.

WARNING

The intelligent technology of the dynamic starting assistance features cannot overcome the laws of physics. Never let the increased convenience provided by the dynamic starting assistance features tempt you into taking risks.

- **Unintended vehicle movement can cause serious personal injury.**
- **The dynamic starting assistance features are no substitute for careful and attentive driving.**
- **Always adapt your speed and driving style to visibility, weather, road, and traffic conditions.**
- **The dynamic starting assistance features cannot keep the vehicle from moving in all hill-start situations (for example, if the ground is slippery or icy).**
- **Never activate the throttle manually from the engine compartment when the engine is running and the automatic transmission is in gear. The vehicle will start to move as soon as the engine speed increases, even if the parking brake is set.**

WARNING

Driving with too little fuel in the fuel tank increases the risk of stalling, especially when driving up and down hills.

- **If your vehicle stalls suddenly, this can cause an accident and serious personal injuries.**
- **Driver assistance and braking assistance systems can malfunction when there is too little fuel in the tank and cause you to lose control of the vehicle.**
- **Never drive until the fuel tank is almost empty.**

Hill Hold

Please first read and note the introductory information and heed the WARNINGS ..

Hill Hold helps keep the vehicle from rolling backwards when starting out on a hill, for example after stopping at a traffic light. You don't have to apply and release the parking brake while depressing the accelerator. For Hill Hold to work, the engine must be running and the vehicle must be in First Gear or Reverse (manual transmission) or in Drive **(D)**, Sport Drive **(S)**, or Reverse **(R)** (automatic transmission) and you must use the foot brake to hold the vehicle before starting to move.

Hill Hold keeps the brake applied for not quite 2 seconds with the same force you used to prevent the vehicle from moving. This gives you time to take your foot off the brake, let the clutch out on a manual transmission vehicle, and gently depress the accelerator to get the vehicle moving again. If you do not depress the accelerator pedal and get the vehicle moving again within this time, the brakes will release and the vehicle will roll downhill. Furthermore, if any requirement for engaging Hill Hold is no longer met while the vehicle is stopped, Hill Hold disengages and the brakes are automatically released and will no longer hold the vehicle.

Hill Hold is activated automatically when the following conditions are all met at the same time.

Points 1 to 3 must all be met at the same time:

Step	Manual transmission	Automatic transmission
1.	Hold the **stopped** vehicle on an incline with the foot or parking brake.	
2.	The engine must be running “smoothly.”	
3.	A manual transmission vehicle must be in 1st gear **(1)** if headed up a hill or in Reverse **(R)** if backing up a hill; you must hold the clutch down and the foot brake must be depressed to keep the vehicle from moving.	An automatic transmission vehicle must be in Reverse **(R)**, Drive **(D)**, or Sport Drive **(S)** and the foot brake must be depressed to keep the vehicle from moving.
4.	To drive off, take your foot off the brake pedal as you let the clutch out and gently depress the accelerator within 2 seconds.	To drive off, take your foot off the brake pedal and gently depress the accelerator within 2 seconds.

Hill Hold is immediately deactivated:

- If any requirement listed in the table above is no longer met (see., *Hill Hold is activated automatically when the following conditions are all met at the same time.*).
- If the engine is not running smoothly or the engine malfunctions.
- If the engine stalls or is switched off.
- *Automatic transmission vehicles:* If the transmission is in Neutral **(N)**.
- *Automatic transmission vehicles:* If a tire does not have enough road contact (such as when the vehicle is tipped or at an angle).

WARNING

The intelligent technology of Hill Hold cannot overcome the laws of physics. Never let the increased convenience provided by Hill Hold tempt you into taking risks.

- **The Hill Hold feature cannot hold the vehicle in all hill start situations (for example, if the surface is icy or slippery).**
- **Hill Hold can only help keep the vehicle from moving for less than 2 seconds. After that, the brakes will be released and the vehicle can roll down the hill.**

Cruise Control System (CCS)

Introduction

In this section you'll find information about:

Indicator lights

Cruise control operation

The Cruise Control System (CCS) helps maintain an individually stored constant speed when driving above about 15 mph (20 km/h).

The CCS slows down the vehicle only by reducing the flow of fuel to the engine, not by braking ⇒ ⚠.

More information:

- Shifting gears.
- Parts, accessories, repairs and modifications.

⚠ WARNING

Using the cruise control when it is not possible to drive safely at a constant speed can be dangerous and can lead to an accident and serious personal injuries.

- **Never use cruise control when driving in heavy or varying traffic or when you cannot keep a safe distance between you and the vehicles ahead of you.**
- **Never use cruise control on steep, winding, or slippery roads (such gravel roads, wet roads, or snowy or icy roads) or on roads with standing water.**
- **Never use cruise control when driving off-road or on unpaved roads.**
- **Always adjust your speed and the distance you keep between you and the vehicles ahead of you to the road, traffic, weather, and visibility conditions.**
- **To help prevent unintended operation of cruise control, switch the system off when it is not being used.**
- **It is dangerous to use the Resume feature when the previously set speed is too high for the existing road, traffic, or weather conditions.**
- **When going downhill, the cruise control may not be able to maintain a constant speed. The vehicle will speed up because of its own weight. Downshift and/or use the foot brake to slow the vehicle.**

Indicator lights

Please first read and note the introductory information and heed the WARNINGS ⚠..

Lights up	Possible cause
CRUISE	Cruise control is regulating the speed.

Display

Different cruise control versions are available. The stored speed is shown in the instrument cluster display on some equipment versions.

When the ignition is switched on, several warning and indicator lights come on briefly for a function check. They go out after a few seconds.

WARNING

Failure to heed warning lights and instrument cluster text messages can cause the vehicle to break down in traffic and result in a collision and serious personal injury.

- **Never ignore warning lights or text WARNINGS.**
- **Always stop the vehicle as soon as it is safe to do so.**

NOTICE

Failure to heed warning lights or text WARNINGS can result in vehicle damage.

Cruise control operation

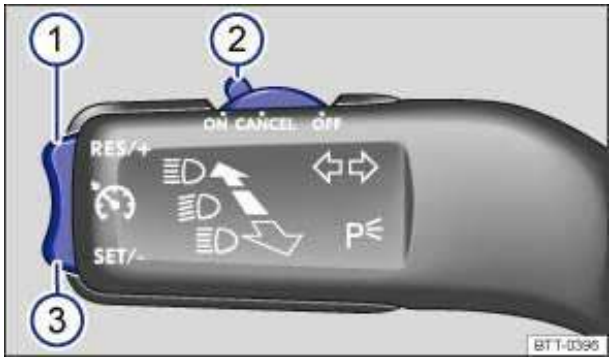

Fig. 107 On the left side of the steering column: Cruise control buttons and switches.

Please first read and note the introductory information and heed the WARNINGS ⚠..

In order to:	You must: ⇒ fig. 107	Result:
Switch on cruise control.	Move switch (2) to **ON** position.	System is switched on, but does not regulate vehicle speed until a speed is set.
Set cruise control to current vehicle speed.	Press button (3) **SET/–**.	Current vehicle speed is set; cruise control helps to maintain this speed.
Temporarily deactivate cruise control.	Move switch (2) to the **CANCEL** position. **OR:** depress the brake or clutch pedal.	Cruise control is temporarily deactivated. The speed is still stored in the memory.
Resume speed stored in cruise control.	Press button (1) **RES/+**.	Cruise control resumes speed previously set.

In order to:	You must: ⇒ fig. 107	Result:
Increase set speed (while cruise control is actively controlling vehicle speed).	Press button (1) **RES/+** *briefly* to increase the set speed in small steps of 1 mph (1 km/h) each.	The vehicle will accelerate until the new higher speed is reached and saves the new higher speed in the memory.
	Press *and hold* button (1) **RES/+** to increase the set speed until the higher desired speed is reached and button is released.	
Reduce set speed (while cruise control is actively controlling vehicle speed).	Press button (3) **SET/–** *briefly* to reduce the set speed in small steps of 1 mph (1 km/h) each.	Cruise control will slow the vehicle down *without braking* by reducing the flow of fuel to the engine until the new lower speed is reached and saves the new lower speed in the memory.
	Press *and hold* button (3) **SET/–** to reduce the set speed until the lower desired speed is reached and the button is released.	
Switch off cruise control.	Move switch (2) to **OFF** position.	System is switched off. The set speed is deleted.

Driving downhill with cruise control

If cruise control cannot maintain constant speed while driving downhill, slow the vehicle with the foot brake and downshift if necessary.

Automatic deactivation

Cruise control speed regulation is automatically deactivated or temporarily interrupted:

- If the system detects an error that could affect the function of the cruise control.
- If the vehicle has accelerated and goes faster than the stored speed for a longer time.
- If the brake or clutch pedal is depressed.
- If the vehicle shifts gear (manual transmission).
- If an airbag deploys.

Tire Pressure Monitoring System (TPMS)

Applicable only in the United States

Introduction

In this section you'll find information about:

Indicator light (telltale)

Your vehicle's Tire Pressure Monitoring System (TPMS) uses the Anti-lock Brake System (ABS) sensors to indirectly check the tire pressure of all 4 tires while you are driving. The sensors monitor the tread circumference (rolling circumference) and vibration characteristics of the individual tires. TPMS warns if there is a significant loss of pressure in one or more tires while the vehicle is moving. Pressure loss is signaled by the indicator light ç (described below) as well as by acoustic warnings and text warnings in the instrument cluster display if your vehicle has this display (Multi-Function Indicator - MFI).

The original benchmark pressure is the recommended maximum load cold tire inflation pressure for the tires that come with your vehicle. This pressure is listed on the tire pressure label on the driver door jamb.. After adjusting the tire pressures in all 4 tires, you must confirm and store the new cold inflation pressures by pressing the SET button, which changes the benchmark pressure to match the current pressure of the tires on your vehicle.**or! Bookmark not defined.**.

Recalibrating the TPMS to reset the benchmark cold tire inflation pressure with proper use of the SET button is explained below.**or! Bookmark not defined.**.

More information:

- Volkswagen Information System.
- Transporting.
- Braking, stopping and parking.
- Exterior care and cleaning.
- Tires and wheels.
- Parts, accessories, repairs and modifications.
- Consumer Information.

WARNING

Incorrect tire pressures and/or underinflation can cause sudden tire failure, loss of control, collision, serious personal injury or even death.

- **When the warning symbol appears in the instrument cluster, stop and inspect the tires.**
- **Incorrect tire pressure and/or underinflation can cause increased tire wear and can affect the handling of the vehicle and stopping ability.**
- **Incorrect tire pressures and/or underinflation can also lead to sudden tire failure, including a blowout and sudden deflation, causing loss of vehicle control.**
- **The driver is responsible for the correct tire pressures for all tires on the vehicle. The recommended tire pressure values are listed on a sticker inside the driver door..**
- **The TPMS can only work correctly when all tires on the vehicle are filled to the correct cold tire inflation pressure.**
- **Using incorrect tire pressure values can cause accidents or other damage. Always inflate the tires to the correct specified cold tire pressure values for the tires installed on the vehicle.**
- **Always maintain correct cold tire inflation pressure so that TPMS can do its job.**
- **Always inflate tires to the recommended and correct tire pressure before driving off.**
- **Driving with underinflated tires causes them to flex (bend) more, letting them get too hot, resulting in tread separation, sudden tire failure, and loss of control.**
- **Excessive speed and/overloading can cause heat build-up, sudden tire failure and loss of control.**
- **If the tire pressure is too low or too high, the tires will wear prematurely and the vehicle will not handle well.**
- **If the tire is not "flat" and you do not have to change a wheel immediately, drive carefully and at reduced speed to the nearest service station to check the tire pressure and add air as required.**
- **When replacing tires or wheel rims on vehicles equipped with TPMS always read and heed the information and all WARNINGS regarding., *Tires and wheels*.**
- **The Tire Pressure Monitoring System must be recalibrated using the SET button whenever you remove and remount or change any wheel or tire on the vehicle, even if the reinstalled or replacement wheels and tires are identical to those that were removed and even if the tire pressure does not change.**or! Bookmark not defined.**.**

WARNING

Improper use of the SET button can cause the TPMS to give false warnings or to give no warning despite dangerously low tire pressure.or! Bookmark not defined.**.**

Underinflation increases fuel consumption and tire wear.

Do not rely solely on the Tire Pressure Monitoring System. Check your tires regularly to make sure they are properly inflated and have no signs of damage, such as punctures, cuts, cracks, and blisters. Remove any objects that become embedded in the tire tread but have not penetrated into the body of tire itself.

When you take delivery of the vehicle, the Tire Pressure Monitoring System is calibrated for the factory-recommended cold tire inflation pressure for the tires on your vehicle, as shown on the label inside the driver door..

- The system must be recalibrated using the SET button whenever you remove and remount or change any wheel or tire on the vehicle, even if the reinstalled or replacement wheels and tires are

identical to those that were removed and even if the tire pressure does not change.**or! Bookmark not defined.**.

- If you have to adjust the tire pressure on a warm tire, fill the tire with 2.0 - 4.35 psi (20 - 30 kPa) more than the pressure specified on the tire pressure label inside the driver door..
- If the TPMS determines that the air pressure in at least one tire is too low, carefully check the pressure in all 4 tires with an accurate tire pressure gauge. Low tire pressure usually cannot be determined by looking at the tire. This is especially true of low-profile tires.

If you have work done on your wheels or tires, inform the workshop that the vehicle is equipped with a Tire Pressure Monitoring System (TPMS).

New tires may expand slightly the first time they are driven at high speeds, which can trigger a tire pressure warning. Remember that tire pressure can only be properly measured when the tire is “cold”..

Only replace old tires with tires that have been approved by Volkswagen for your vehicle type.

Applicable only in the United States

Indicator light (telltale)

Please first read and note the introductory information and heed the WARNINGS ..

Lights up	Possible cause or meaning ⇒	Proper response
	Lights up and a chime may also sound. The inflation pressure of one or more tires is significantly lower than the benchmark pressure set by the driver or a tire has structural damage. Depending on vehicle equipment, a message may also appear in the instrument cluster display.	**Stop safely as soon as possible!** Reduce speed immediately! Avoid fast cornering and hard braking! Check the condition and inflation pressure of all tires. Have damaged tires replaced.

Flashes	Possible cause or meaning ⇒	Proper response
	Flashes for about 70 seconds and then stays on: System malfunction.	Check and, if necessary, adjust the tire inflation pressure in all 4 tires. If the tire pressure is correct, switch the ignition off and back on. If the indicator light flashes again and then stays on or does not go out after checking and adjusting the air pressure in all 4 tires and pressing the SET button, take the vehicle to an authorized Volkswagen dealer or an authorized Volkswagen Service Facility. Have the system checked.

When the ignition is switched on, several warning and indicator lights come on briefly for a function check. They go out after a few seconds.

WARNING

Incorrect tire pressures and/or underinflation can cause sudden tire failure, loss of control, collision, serious personal injury, or even death.

- **When the warning symbol appears in the instrument cluster, stop the vehicle as soon as it is safe to do so and inspect all tires.**
- **Incorrect tire pressure and/or underinflation can cause increased tire wear and can affect the handling of the vehicle and its stopping ability.**
- **Incorrect tire pressure and/or underinflation can also lead to sudden tire failure, including a blowout and sudden deflation, causing loss of vehicle control.**
- **The driver is responsible for the correct tire pressures for all tires on the vehicle. The recommended tire pressure values are listed on a sticker inside the driver door..**
- **The TPMS can only work correctly when all tires on the vehicle are filled to the correct cold tire inflation pressure. Always maintain the correct cold tire inflation pressure so that TPMS can do its job.**
- **Using incorrect tire pressure values can cause accidents or other damage. Check the pressure in all 4 tires when the tires are still cold. Never reduce air pressure in warm tires to match cold tire inflation pressure.**
- **Always inflate the tires to the correct specified cold tire pressure values for the tires installed on the vehicle; see the tire inflation pressure label on the driver door jamb., *Tires and wheels*.**
- **Always inflate tires to the recommended and correct tire pressure before driving off.**
- **Driving with underinflated tires causes them to flex (bend) more, letting them get too hot, which can result in tread separation, sudden tire failure, and loss of control.**
- **Excessive speed and/or overloading can cause heat build-up, sudden tire failure, and loss of control.**
- **If the tire pressure is too low or too high, the tires will wear prematurely and the vehicle will not handle well.**
- **If the tire is not "flat" and you do not have to change the tire or wheel immediately, drive at reduced speed to the nearest service station to check the tire pressure and add air as required.**
- **When replacing tires or wheel rims on vehicles equipped with TPMS, always read and heed the information and all WARNINGS in the section., *Tires and wheels*.**
- **The Tire Pressure Monitoring System must be recalibrated using the SET button whenever you remove and remount or change any wheel or tire on the vehicle, even if the reinstalled or replacement wheels and tires are identical to those that were removed and even if the tire pressure does not change.**or! Bookmark not defined..

WARNING

Improper use of the SET button can cause the TPMS to give false warnings or to give no warning despite dangerously low tire pressure.or! Bookmark not defined..

WARNING

Failure to heed warning lights and instrument cluster text messages can cause the vehicle to break down in traffic and result in a collision and serious personal injury.

- **Never ignore warning lights or text WARNINGS.**
- **Always stop the vehicle as soon as it is safe to do so.**

NOTICE

Failure to heed warning lights or text WARNINGS can result in vehicle damage.

If the ignition is switched on, an acoustic warning sounds when low tire pressure is detected. If a system malfunction is detected, no acoustic warning sounds.

Driving for a longer period of time on rough roads or with a dynamic and sporty style can make the TPMS system temporarily unavailable. The indicator light will come on, signaling a malfunction, but will go out again once the road condition or driving style changes.

Applicable only in the United States

Heating and air conditioning

Introduction

In this section you'll find information about:

Manual AC controls
Air conditioner operation
Air vents
Air recirculation

Your vehicle is equipped with a Manual air conditioning (AC) system.

The dust and pollen filter

The dust and pollen filter with an activated carbon insert reduces the entry of pollutants into the passenger compartment.

The dust and pollen filter must be replaced at the intervals recommended in ⇒ Booklet *Warranty and Maintenance* so that the air conditioner can work properly.

If the effectiveness of the filter decreases prematurely due to operating the vehicle where the outside air is heavily polluted, the dust and pollen filter should be replaced more frequently than indicated.

More information:

- Exterior views.
- Passenger compartment.
- Seat functions.
- Windshield wiper and washer.
- Starting and stopping the engine.
- Exterior care and cleaning.

WARNING

Poor visibility increases the risk of collisions and other accidents that cause serious personal injuries.

- **Always make sure all windows are clear of ice, snow and condensation for good visibility to the front, sides, and rear.**
- **Maximum heating output and defrosting performance are not possible until the engine has reached operating temperature. Wait until you have good visibility before driving off.**
- **Always make sure you know how to properly use the heating and ventilation systems as well as the rear window defroster that you will need for good visibility.**
- **Never use air recirculation for long periods of time. When the air conditioner is off and recirculation mode is on, condensation can quickly form on the windows and greatly reduce visibility.**
- **Always switch off recirculation mode when it is not needed.**

WARNING

Stale air causes driver fatigue and reduces driver alertness, which can cause accidents, collisions and serious personal injury.

- **Never switch off the fan for a long period of time and never use air recirculation for a long period of time because no fresh air will enter the passenger compartment.**

NOTICE

- **If you think the air conditioner is not working properly or may be damaged, switch it off to help prevent more damage. Have the air conditioner checked by an authorized Volkswagen dealer or an authorized Volkswagen Service Facility.**
- **Air conditioner repair requires specialized knowledge and special tools. Volkswagen recommends that you see an authorized Volkswagen dealer or an authorized Volkswagen Service Facility.**
- **Do not smoke when air recirculation is switched on. Smoke drawn into the ventilation system can leave residue on the evaporator and on the dust and pollen active carbon filter, resulting in permanent odors whenever the air conditioner is switched on.**

If the air conditioner is switched off, the fresh outside air will not be dehumidified. To help keep the windows from fogging over, Volkswagen recommends leaving the air conditioner (compressor) switched on. Press the A/C button. The indicator light in the button must come on.

When it is very hot and humid outside, **water condensation** can drip from the air conditioner evaporator and form a puddle under the vehicle. This is normal and does not indicate a leak.

Keep the air intake slots in front of the windshield free of ice, snow, and leaves in order to maintain proper functioning of the heating and ventilation systems.

Maximum heating output and defrosting performance are not possible until the engine has reached operating temperature.

Emergency starting and starting the engine with a very weak vehicle battery or after the vehicle battery has been replaced may change or delete system settings (including time, date, personal convenience settings, and programming). Check the settings and correct as necessary once the vehicle battery has built up a sufficient charge.

Manual AC controls

Fig. 109 In the center console: Manual AC controls.

Please first read and note the introductory information and heed the WARNINGS ⚠..

Press the corresponding button to switch a function on or off. If a function is switched on, an indicator light in the button comes on. To switch off a function, press the button again.

Buttons, knobs	More information: Manual AC ⇒ fig. 109
Temperature 1 ● . . . ●	Turn knob to set the desired temperature. The MAX position provides maximum cooling output. Recirculation mode and the cooling system switch on automatically.
Fan (2) 0 . . .	Setting 0: the fan and manual AC are switched off. Setting 4: highest fan speed.
Air distribution (3)	Direct airflow by turning knob to any setting (continuously adjustable).
	Defog/defrost: Airflow is directed to the windshield. Recirculation mode switches off automatically in this position. Increases the fan speed to clear the windshield as quickly as possible. The cooling system switches on automatically to dehumidify the air.
	Air distribution to the air vents in the instrument panel.
	Air distribution to the footwells.
	Air distribution to the windshield and footwells.
	Rear window defroster: Works only when the engine is running and switches off automatically after 10 minutes or less.
	Air recirculation mode..
,	Buttons for seat heating.
A/C	Press the button to switch the air conditioner on or off.

Buttons, knobs	More information: Manual AC ⇒ fig. 109
Switching off.	Turn fan switch to position 0.

WARNING

Stale air causes driver fatigue and reduces alertness, which can cause accidents, collisions, and serious personal injury.

- **Never switch off the fan for a long time because no fresh air will enter the passenger compartment.**

Air conditioner operation

Please first read and note the introductory information and heed the WARNINGS ⚠..

The air conditioner works only when the ignition is switched on. The cooling system for the passenger compartment works only when the engine is running and the fan is on.

The air conditioner is most efficient when the windows and the power sunroof are closed. If the vehicle is stationary and the passenger compartment becomes very hot due to sunlight, briefly opening the windows and the power sunroof may speed up the cooling process.

Keep the air intake slots in front of the windshield free of ice, snow, and leaves so that the heating and ventilation systems can work properly.

Settings for optimum visibility

When you switch on the cooling system, both the temperature and humidity in the vehicle are reduced. This will help make passengers feel more comfortable and help keep the windows from fogging up.

- Switch off air recirculation..
- Set the fan to the desired speed.
- Turn the temperature knob to the center position.
- Open and adjust all air vents in the instrument panel..
- Turn the air distribution knob to the desired setting.
- Push the A/C button to turn on the air conditioner. The indicator light in the button lights up.

Heating

Maximum heating output and defrosting performance are not possible until the engine has reached operating temperature.

Air conditioner does not work

The air conditioner may not switch on for one of the following reasons:

- The engine is not running.
- The fan is switched off.
- The air conditioner fuse has blown.
- The outside air temperature is colder than about +38 °F (+3 °C).
- The air conditioner compressor has been temporarily switched off due to excessive engine coolant temperature.
- There is another malfunction in the vehicle. Have the air conditioner checked by an authorized Volkswagen dealer or authorized Volkswagen Service Facility.

Special considerations

When it is very hot and humid outside, **water condensation** can drip from the air conditioner evaporator and form a puddle under the vehicle. This is normal and does not indicate a leak.

The climate control system adjusts the passenger compartment temperature as fast as possible considering the outside temperature.

Due to residual moisture in the air conditioner, the windshield may fog up after the engine is started. Switch on the windshield defroster to help evaporate the condensation as quickly as possible.

The air coming out of the vents flows through the passenger compartment and out through the vents under the rear window. Do not cover these slots with clothing or other things.

Air vents

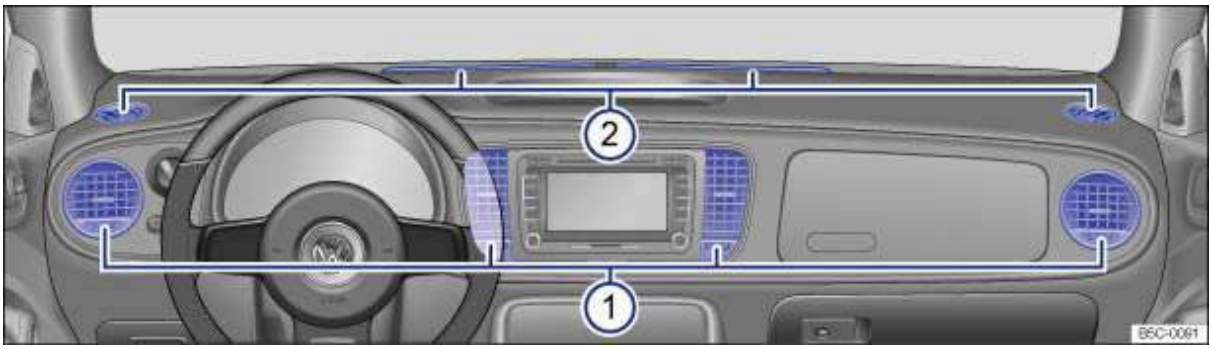

Fig. 110 In the instrument panel: Air vents.

Please first read and note the introductory information and heed the WARNINGS ⚠..

Air vents

To help ensure sufficient heating, cooling and ventilation in the passenger compartment, never close the air vents completely ⇒ fig. 110 (1).

- To open and close the air vents, turn the respective thumbwheel in the desired direction. When the thumbwheel is in the ¡ position, the air vent is closed.
- Use the lever on the vent grille to adjust the airflow direction.

Additional, non-adjustable air vents are located in the instrument panel (2), in the footwells, as well as in the rear area of the passenger compartment.

NOTICE

Do not place food, medications, or other heat-sensitive things in front of the air vents. Food, medications, and other things that are sensitive to heat or cold can be damaged or made unusable by the air flow from the vents.

The air coming out of the vents flows through the passenger compartment and out through vents under the rear window. Do not cover these slots with clothing or other things.

Air recirculation

Please first read and note the introductory information and heed the WARNINGS ..

	Manual air recirculation.

The air recirculation mode helps prevent outside air from entering the vehicle interior.

In very hot outside temperatures, temporarily switch to air recirculation in order to cool the vehicle interior faster.

For safety reasons, air recirculation is switched off when the air distribution switch is turned to ⇒.

Switching air recirculation on and off

Switching on: Press the button until the indicator light in the button comes on.

Switching off: Press the button until the indicator light in the button goes out.

WARNING

Stale air causes driver fatigue and reduces driver alertness, which can cause accidents, collisions and serious personal injury.

- **Never use air recirculation mode over an extended period of time, since no fresh air will enter the passenger compartment.**
- **When the air conditioner is off and recirculation mode is on, condensation can quickly form on the windows and greatly reduce visibility.**
- **Always switch off recirculation mode when it is not needed.**

NOTICE

Do not smoke when air recirculation is switched on. Smoke drawn into the ventilation system can leave residue on the evaporator and on the dust and pollen active carbon filter, resulting in permanent odors whenever the air conditioner is switched on.

Refueling

Introduction

In this section you'll find information about:

Indicator lights and fuel gauge
Misfueling guard for diesel vehicles
Fuel capacities
Refueling checklist

The fuel filler flap is located on the rear right side of the vehicle.

More information:

- Exterior views.
- Fuel.
- Preparations for working in the engine compartment.

WARNING

Improper refueling or handling of fuel is dangerous and can cause fire, explosion, and severe burns.

- **Always make sure that the fuel filler cap is screwed on all the way. This helps keep fuel from spilling out or evaporating.**
- **Fuel is highly flammable and explosive; it can cause severe burns and other severe injuries.**
- **Failure to shut the engine off while refueling and/or to insert the pump nozzle all the way into the fuel filler neck can cause fuel to overflow and to spray out. Fuel spray and overflowing fuel are dangerous because they can cause fire and serious personal injury.**
- **During refueling, the engine and the ignition must be switched off for safety reasons.**
- **Never use a cellular telephone, CB radio, or other radio equipment while refueling. The electromagnetic radiation can cause sparks that can ignite fuel vapors and cause a fire.**
- **Never get back into your vehicle while refueling. If in exceptional circumstances you must get back in your vehicle while refueling, make certain that you close the door and touch metal to discharge static electricity before touching the filler nozzle again. This helps avoid the build-up of static electricity, which can cause sparks that can ignite fuel vapors released during refueling.**
- **Never smoke or have an open flame (or sparks, cigarettes, or other smoldering objects) anywhere in or near your vehicle when refueling or filling a portable fuel container.**
- **Follow all safety instructions and procedures that apply at the service station where you refuel.**
- **Never spill fuel in the vehicle or the luggage compartment.**

WARNING

Even if empty, portable fuel containers can leak and cause a fire and serious personal injuries, especially in a crash.

- **For your safety, we strongly recommend that you do not travel with a portable fuel container in your vehicle.**
- **If, under exceptional circumstances, you must transport a portable fuel container, please observe the following:**
  - **Never fill a portable fuel container while it is anywhere in or on the vehicle (for example, in the luggage compartment or on top of the rear hatch). Static electricity can build up while filling and can ignite fuel vapors, causing a fire.**
  - **Always place a portable fuel container on the ground before filling. Never spill fuel inside the vehicle or luggage compartment. Fuel vapors are highly flammable.**
  - **Always keep the filler nozzle completely inside the portable container before and during filling.**
  - **If filling a portable container made of metal, the filler nozzle must always be in contact with the container. This will help prevent static electricity from discharging and causing a fire.**
  - **Always observe local and state or provincial laws about the use, storage, and transportation of portable fuel containers.**
  - **Make certain that the portable fuel container meets industry standards, such as ANSI/ASTM F852-86.**

NOTICE

- **Remove fuel spills from the vehicle immediately to help prevent damage to the paint, tires, and wheel housings.**
- **Refueling with gasoline when your vehicle has a diesel engine or refueling with diesel fuel when your vehicle has a gasoline engine can cause very serious and expensive engine and fuel system damage that is not covered by any Volkswagen Limited Warranty.**
- **If you put any amount of incorrect fuel in the fuel tank, do not start the engine under any circumstances. Immediately contact the nearest authorized Volkswagen dealer or authorized Volkswagen Service Facility for assistance. These fuels contain substances that can severely damage the fuel system and the engine if the engine is started.**
- **Vehicles with diesel engines must never be refueled or driven with gasoline, kerosene, heating oil, or other non-specified fuels that have not been expressly approved for use with the diesel engine. Other kinds of fuel will cause serious damage to the fuel system and the engine that is not covered by any Volkswagen Limited Warranty.**

Fuels can pollute the environment. Spilled fuel must be collected and disposed of properly, following all applicable environmental regulations.

There is no emergency release for the fuel filler flap. Contact an authorized Volkswagen dealer or an authorized Volkswagen Service Facility for assistance.

Indicator lights and fuel gauge

Fig. 111 In the instrument cluster: Fuel gauge.

Please first read and note the introductory information and heed the WARNINGS ⚠..

Lights up	Gauge position ⇒ fig. 111	Possible cause or meaning ⇒ ⚠	Proper response
	Red range (arrow)	Fuel tank almost empty. Running on reserve –..	Time to refuel ⇒ ⓘ.
	–	Fuel filler cap not properly closed (*gasoline engines only*).	Stop and close the fuel filler cap properly.

When the ignition is switched on, several warning and indicator lights come on briefly for a function check. They go out after a few seconds.

Fuel filler cap not properly closed

If the indicator light comes on or you see a text message in the instrument cluster display indicating that the fuel filler cap is not properly closed, stop the vehicle in a safe place and switch off the engine and the ignition.

Open the fuel filler flap and take the fuel filler cap off the filler neck. Then put the fuel filler cap back on the filler neck and screw it on clockwise until you clearly hear a clicking sound. Close the fuel filler flap.

After switching on the ignition, the indicator light may stay on or the text message may still appear in the instrument cluster display, even if the fuel filler cap is now properly closed. This is normal and no reason to take your vehicle in for service.

If, however, the malfunction indicator light also comes on, drive to your nearest authorized Volkswagen dealer or authorized Volkswagen Service Facility and have the fuel system and the engine checked.

WARNING

Driving with a fuel tank that is almost empty can lead to stalling in traffic, a collision, and serious personal injuries.

- **When the fuel tank is almost empty, fuel supply to the engine can be interrupted, especially when driving over bumps, across slopes, and up and down hills.**
- **Steering and braking assistance as well as ESC and related systems will not work if the engine "sputters" or stalls due to lack of fuel.**
- **Always refuel when the tank is 1/4 full to reduce the risk of running out of fuel and stalling in traffic.**

NOTICE

- **Failure to heed warning lights or text WARNINGS can result in vehicle damage.**
- **Never drive until the fuel tank is completely empty. The irregular fuel supply can cause the engine to misfire. This allows unburned fuel to get into the exhaust system and damage the catalytic converter or the diesel particulate filter.**

The small arrow next to the gas pump symbol in the fuel gauge shows the side of the vehicle with the fuel filler flap.

Misfueling guard for diesel vehicles

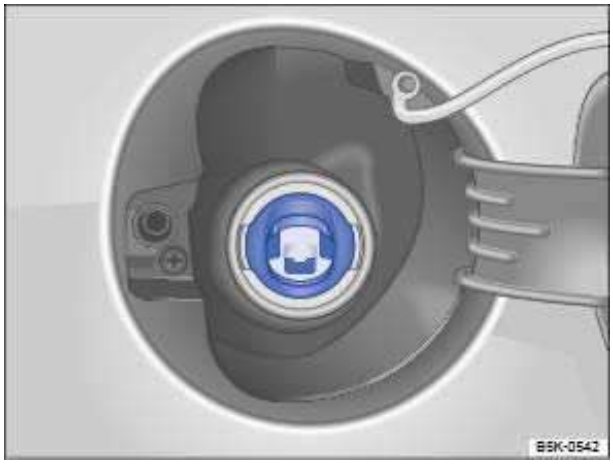

Fig. 113 With open fuel cap: Misfueling guard in the fuel filler neck.

Please first read and note the introductory information and heed the WARNINGS ..

The fuel filler neck of diesel vehicles is equipped with a misfueling guard ⇒ fig. 113. The misfueling guard helps prevent filling the fuel tank of a diesel vehicle with gasoline, because the guard makes it difficult to insert any type of filler nozzle other than the type commonly used for diesel fuel.

Damaged, worn out, or incorrect nozzles, as well as other means of refueling (portable fuel containers, for example) will generally not open the misfueling guard and fuel from these sources cannot easily flow into the tank. Using these incorrect or non-standard nozzles to refuel your diesel vehicle can cause fuel spills, which can cause fires, explosions, burns, and other severe injuries.

The misfueling guard can generally only be properly opened with a correct nozzle from a standard diesel fuel pump. Under certain circumstances it may be necessary to turn the nozzle back and forth

slightly with light pressure to open the misfueling guard. If the misfueling guard cannot be opened this way, see the nearest authorized Volkswagen dealer or authorized Volkswagen Service Facility and have the fuel system checked.

WARNING

Spilled fuel can cause fires, explosions, burns, and other severe injuries.

- **Do not refuel from devices other than correct, undamaged standard diesel fuel pump nozzles.**
- **Always stop refueling once the pump nozzle switches off so that the tank does not overflow.**

NOTICE

- **It is your responsibility to put the right fuel in your vehicle and any damage that results is not covered under the Emissions warranties or any other Volkswagen Limited Warranty.**
- **If you put any amount of the incorrect fuel in the fuel tank, do not start the engine under any circumstances. Immediately contact the nearest authorized Volkswagen dealer or authorized Volkswagen Service Facility for assistance.**
- **If diesel fuel should get on any rubber hose, it must be wiped off immediately. The same applies if diesel fuel gets onto other parts of the vehicle, especially paint, tires, or a plastic part. Wash the contaminated vehicle parts right away with soap and warm water to help prevent leaks and serious damage.**
- **Never force a fuel nozzle in the misfueling guard. If you have problems inserting a fuel nozzle, first check to make sure you are using the correct diesel fuel. If you are, go to a pump with the standard diesel nozzle. Forcing a fuel nozzle in the misfueling guard can damage it so that it can no longer help prevent misfueling.**

Fuel capacities

Please first read and note the introductory information and heed the WARNINGS ..

Engine	Fuel tank capacity
Gasoline and diesel engines	About 14.5 gallons (55.0 liters), including about 2 gallons (7.0 liters) reserve.

Refueling checklist

Please first read and note the introductory information and heed the WARNINGS ..

The engine compartment of any motor vehicle is a hazardous area. Never do any work on the engine or in the engine compartment unless you

- know exactly how to carry out the job,
- have the correct technical information and the proper tools and supplies, and
- are familiar with the necessary safety precautions., *Preparations for working in the engine compartment*.

Checklist

If you are uncertain in any way, have the work done by an authorized Volkswagen dealer or authorized Volkswagen Service Facility. Serious personal injury may result from improperly performed work. Make sure that you check the following items regularly. The best thing is to check them every time you refuel:

✓ Windshield washer fluid level.✓ Engine oil level.

✓ Engine coolant level.

✓ Brake fluid level.

✓ Tire pressure.

✓ Vehicle lighting necessary for driving safety:

- Turn signals
- Low beams and high beams
- Taillights
- Brake lights
- License plate lights

Information regarding changing light bulbs..

WARNING

Disregarding the safety-related checklist may lead to accidents and injuries.

- **Please note and follow the points listed in the checklist.**

Fuel

Introduction

In this section you'll find information about:

Gasoline additives
Diesel fuel

The correct fuel grade for your engine is shown on a sticker located on the inside of the fuel filler flap ⇒fig. 112.

Bad or poor quality fuel reduces operating performance, efficiency and service life of the engine. If you notice any symptoms like rough engine idle or performance or "bucking," immediately reduce the vehicle speed, accelerate slowly, and keep the engine speed in the middle of the rpm range. Avoid high rpm and rapid acceleration. If these symptoms should appear right after refueling, switch off the engine. In both cases contact an authorized Volkswagen dealer or an authorized Volkswagen Service Facility to have the engine checked.

More information:

- ⇒Booklet *Warranty and Maintenance*
- Refueling.
- Engine control and exhaust system.

WARNING

Improper refueling or handling of fuel is dangerous and can cause fire, explosion, and severe burns.

- **Fuel is highly explosive and flammable and can cause severe burns and other injuries.**
- **Heed applicable safety warnings and obey local fuel handling regulations.**
- **Always make sure the fuel cap is screwed on all the way. This keeps fuel from spilling out and from evaporating.**
- **Failure to shut the engine off while refueling and/or to insert the pump nozzle fully into the vehicle's filler neck could cause fuel overflow and fuel spray. Fuel spray and overflowing fuel are dangerous because they can cause fire or serious injury.**
- **For safety reasons, the engine must be turned off when refueling.**
- **Never get back into your vehicle while refueling. If in exceptional circumstances you must get back in your vehicle while refueling, make certain that you close the door and touch metal to discharge static electricity before touching the filler nozzle again. Static electricity can cause sparks that can ignite fuel vapors released during refueling.**

Blends of gasoline and methanol (wood alcohol or methyl alcohol):

- Anti-Knock Index (AKI) must be 87 or higher.
- Blend must contain no more than 3% methanol.
- Blend must contain more than 2% co-solvents.

Blends of gasoline and ethanol (grain alcohol or ethyl alcohol):

- Anti-Knock Index (AKI) must be 87 or higher.
- Blend must contain no more than 10% ethanol.

Blends of gasoline and MTBE:

- Anti-Knock Index (AKI) must be 87 or higher.
- Blend must contain no more than 15% MTBE.

Seasonally adjusted gasoline

Many fuels are blended especially for winter or summer conditions. When seasons change, Volkswagen suggests that you buy fuel at busy stations where the seasonal adjustment is more likely to be made earlier.

WARNING

Starting fluids can explode and cause a run-away vehicle condition.

- **Never use starting assist fluids.**

Gasoline additives

Please first read and note the introductory information and heed the WARNINGS ⚠..

Additives are used to improve the quality of the gasoline.

Fuel quality impacts the operating performance, efficiency and service life of the engine. Therefore, use high quality gasoline that is already blended by the fuel supplier with suitable gasoline additives that do not contain metal. The additives provide corrosion protection, clean the fuel system, and prevent deposits on the engine.

Volkswagen recommends TOP TIER Detergent Gasoline. For more information on TOP TIER Detergent Gasoline, please go to the official Web site http://www.toptiergas.com.

If quality gasoline with additives that do not contain metal is not available or engine malfunctions occur, you should add the required additives while refueling ⇒ ⓘ.

Not all gasoline additives are effective. Using the wrong additives can cause significant and expensive damage to the engine and the catalytic converter. Never use additives that contain metal. Please note that metal can be included in some aftermarket gasoline additives that are available to be added to gasoline during or after refueling to help improve knock resistance or increase the octane rating.

Volkswagen recommends using only additives approved by Volkswagen. Appropriate additives as well as instructions on how to use them are available from your authorized Volkswagen dealer or authorized Volkswagen Service Facility. Do not add any other gasoline additives.

NOTICE

You can damage the engine by using incorrect additives.

- **Using incorrect gasoline additives can cause extensive engine damage as well as damage to the catalytic converter.**
- **If you must fuel your vehicle with gasoline whose octane rating is too low, only drive with the engine speed in the middle of the rpm range and with low engine load. Avoid high rpm and heavy engine load. Otherwise, the engine could be damaged. Refuel your vehicle with gasoline with the required octane rating as soon as possible.**
- **Do not use fuel that is labeled at the pump as containing metal. Lead replacement fuel contains high concentrations of metallic additives. Engine damage could result.**
- **Fueling your vehicle just one time with leaded fuel or fuel that contains other metallic additives can affect the performance of the catalytic converter and cause extensive damage to it.**

Diesel fuel

🕮 Please first read and note the introductory information and heed the WARNINGS ⚠..

Always use only Ultra Low Sulphur Diesel (ULSD) fuel No. 2 ⇒⚠.

The ULSD must always meet ASTM D-975 specification ⇒ⓘ.

“ULSD” should be clearly marked on the pump. Before filling your vehicle, please always make sure you are using ULSD. According to Federal regulations ULSD is the only diesel fuel type allowed for use in your vehicle.

Diesel fuel with concentrations of methyl ester biodiesel higher than 5% (B5), such as B11, B20, or B100, are strictly prohibited.

ULSD diesel fuel may not be available outside the USA and Canada. Be sure to check availability before traveling to other countries.

Winter diesel

At temperatures below 20 °F (-7 °C), wax separation in ULSD occurs. Wax may clog the fuel filter or tank filter and keep the engine from running.

To help prevent the filter from being clogged with wax, the fuel filter in your vehicle is heated with warm fuel when the engine is running (filter preheating system). Heating the fuel filter makes it possible to use your vehicle with ULSD down to about -10 °F (-24 °C).

If you expect temperatures below +5 °F (-15 °C) ask your fuel dealer if their ULSD is sufficiently winterized.

If non-winterized or insufficiently winterized diesel fuel has already thickened to the point that the engine will not start, move the vehicle to a heated garage or workshop until it has warmed up.

Cold diesel engines normally produce louder noises during winter conditions than during warmer periods. In addition, the exhaust gases may be light blue in color until the engine has warmed up. The exhaust gas volume varies depending on the outside temperature.

Do not let your diesel engine idle unnecessarily after a cold start. Driving off slowly will shorten the warm-up period.

⚠ WARNING

Starting fluids can explode and cause a run-away vehicle condition.

- **Never use starting assist fluids.**

ⓘ NOTICE

- **The vehicle's diesel engine was designed solely for use with ULSD fuel. For this reason, never use gasoline, heating oil, or other fuels that have not been expressly approved for use with the diesel engine. These fuels contain substances that will severely damage the fuel system and the engine. Such damage will not be covered by any Volkswagen Limited Warranty.**
- **If you put any amount of the incorrect fuel in the fuel tank, do not start the engine under any circumstances. Immediately contact the nearest authorized Volkswagen dealer or authorized Volkswagen Service Facility for assistance.**
- **If diesel fuel should get on any rubber hose, it must be wiped off immediately. The same applies if diesel fuel gets onto other parts of the vehicle, especially paint, tires, or a plastic part. Wash the contaminated vehicle parts right away with soap and warm water to help prevent leaks and serious damage.**
- **The vehicle is designed to run on diesel fuel containing methyl ester biodiesel in concentrations of 5% or less. Never use methyl ester biodiesel in blend levels higher than 5%**

(5% methyl ester blends are sometimes designated or labeled as B5). The properties of methyl ester biodiesel blends in levels greater than 5% may cause serious damage to the fuel injection system and to the engine. This could lead to expensive repairs that will not be covered by any Volkswagen Limited Warranty.

- **Damage to the engine and fuel system and performance problems caused by using fuels that are different from those specified above or by using "starting assist fluids" are not the responsibility of Volkswagen and are not covered under the Emission warranties or any other Volkswagen Limited Warranty.**

Preparations for working in the engine compartment

Introduction

In this section you'll find information about:

Warning light

Getting ready to work in the engine compartment

Opening and closing the engine compartment

Always position the vehicle on a firm and level surface before doing any work in the engine compartment.

The engine compartment of a vehicle is a hazardous area. Never do any work on the engine or in the engine compartment unless you

- know exactly how to carry out the job,
- have the correct technical information and the proper tools and supplies, and
- are familiar with the necessary safety precautions ⇒ ⚠.

If you are uncertain in any way, have the work done by an authorized Volkswagen dealer or an authorized Volkswagen Service Facility. Serious personal injury may result from improperly performed work.

More information:

- Exterior views.
- Windshield wiper and washer.
- Starting and stopping the engine.
- Brake fluid.
- Checks while refueling.
- Engine oil.
- Engine coolant.
- Vehicle battery.
- Exterior care and cleaning.
- Parts, accessories, repairs and modifications.

⚠ WARNING

Unintended vehicle movement during maintenance work can cause serious personal injuries.

- **Never work under the vehicle unless you have safely secured the vehicle from moving. If you must work under the vehicle with the wheels on the ground, always make sure that the vehicle is on level ground, that all 4 wheels are chocked to keep them from moving, and that the key is not in the ignition.**
- **If you must work under a vehicle raised on a floor jack, always make sure that the vehicle is safely supported on safety stands intended for that purpose that are strong enough to support the weight of the vehicle. The jack supplied with the vehicle is not strong enough for this purpose and can collapse causing serious personal injury.**

WARNING

The engine compartment of any motor vehicle is a potentially dangerous area and can cause serious personal injury.

- **Always use extreme caution when doing any work in the engine compartment. Always follow commonly accepted safety practices and use common sense. Never risk personal injury.**
- **Never perform any work in the engine compartment unless you know exactly how to carry out the job and have the correct technical information and the correct tools.**
- **If you are uncertain about what to do, have the work performed by an authorized Volkswagen dealer, an authorized Volkswagen Service Facility, or another qualified workshop. Serious personal injury may result from improperly performed work.**
- **We strongly recommend that you always have HID – High Intensity Discharge (Xenon) headlights and HB2 (H4) bulbs replaced by a qualified technician. Serious personal injury may result from improperly performed work.**
- **Never open or close the engine hood if steam or coolant is escaping. Hot steam or coolant can cause serious burns. Always wait until you no longer see or hear steam or coolant escaping from the engine.**
- **Always let the engine cool down completely before carefully opening the hood.**
- **Hot parts of the engine and the exhaust system will burn skin on contact.**
- **When the engine has cooled down and you are ready to open the hood:**
  - **Firmly apply the parking brake and shift the transmission into Park (P) (automatic) or Neutral (manual only).**
  - **Take the vehicle key out of the ignition.**
  - **On vehicles with Keyless Access, make sure that the remote control vehicle key is out of range of the vehicle and that the vehicle cannot be started by depressing the starter button..**
  - **Always keep children and others away from the engine compartment and never leave them unsupervised.**
- **The engine coolant system is under pressure when the engine is hot. Never unscrew the coolant expansion tank cap when the engine is hot. Hot coolant can spray out and cause severe burns and other serious injuries.**
  - **Turn the cap slowly and very carefully in a counterclockwise direction while applying light downward pressure on the top of the cap.**
  - **Always protect your face, hands, and arms from hot escaping coolant or steam by covering the cap with a large, thick rag.**
- **Never spill fluids on the engine or exhaust system when refilling. Spilling fluids onto hot parts of the engine or exhaust system can cause a fire.**

WARNING

High voltage systems in the engine compartment can cause electrical shocks or even electrocution, severe burns, other serious injuries, and even death!

- **Never short-circuit the electrical system. Be especially careful when using jumper cables. The vehicle's battery could explode!**
- **To reduce the risk of electrical shock and personal injury while the engine is running or being started:**
  - **Never touch ignition cables. Never touch other components of the high voltage electronic ignition system.**
  - **Never touch the wiring of the HID – High Intensity Discharge (Xenon) headlights.**
- **Read and heed the important information and warnings on cleaning the engine compartment.**or! Bookmark not defined.**,** ***Cleaning the engine compartment***

WARNING

Moving parts in the engine compartment can cause serious personal injury on contact.

- **Never reach into the area around or touch the radiator fan. Contact with the blades can cause serious personal injury. Always remember that the radiator fan is temperature-controlled and can come on suddenly even when the engine has been switched off for a while and the key has been removed from the ignition.**
- **If you have to perform a check or repair when the engine is running, there are more risks from the rotating parts, such as the drive belts, alternator, radiator fan, etc., and from the high-voltage ignition system. Always use extreme care.**
  - **Always make sure that jewelry, loose clothing and long hair do not get caught in rotating engine parts. Before starting any work remove your jewelry, take off your necktie, tie back and cover your hair, and do not wear clothing that can hang down and get caught in moving engine parts.**
  - **Always use extreme caution if the accelerator pedal has to be depressed to perform a check. The vehicle will start to move even if the parking brake is on.**
- **Never leave any objects in the engine compartment, for example cleaning rags and tools. Objects left behind can cause malfunctions, engine damage, and even fires.**

WARNING

Operating fluids and some materials in the engine compartment can catch fire easily, causing burns and other serious personal injuries!

- **Never smoke near the engine compartment.**
- **Never work next to open flames or sparks.**
- **Never pour or spill operating fluids or other flammable liquids on the engine. These fluids can ignite on hot engine parts and cause injuries.**
- **If work on the fuel system or the electrical system is necessary:**
  - **Always disconnect the 12 Volt vehicle battery. Make sure the vehicle is unlocked when you disconnect the battery, or the alarm will go off. Never touch the electrical wiring of the ignition system.**
  - **Never work near heaters, water heaters, or other open flames.**
- **Always have a functional, approved fire extinguisher nearby.**

NOTICE

When changing or topping off fluids, make sure that you pour the fluids into the correct reservoirs. Adding the wrong type of operating fluids will cause serious malfunctions and engine damage.

Fluid leaks and spills are harmful to the environment. Regularly check the ground underneath your vehicle for this reason. If you find spots of oil or other fluids, have your vehicle checked by your authorized Volkswagen dealer or authorized Volkswagen Service Facility. Dispose of leaked operating fluids properly.

Warning light

Please first read and note the introductory information and heed the WARNINGS ..

Lights up	Possible cause	Proper response
OR icon appears in the display	Engine hood not properly closed.	**Stop!** Close the engine hood.

When the ignition is switched on, several warning and indicator lights come on briefly for a function check. They go out after a few seconds.

If the engine hood is open or not closed properly, the warning light comes on in the instrument cluster or the vehicle icon appears in the instrument cluster display showing the open engine hood.

Depending on your vehicle's equipment and options, the red warning light or icon may still be displayed even after the ignition is switched off as long as the key has not been taken out of the ignition. The icon in the instrument cluster display goes out about 15 seconds after the vehicle has been locked.

WARNING

Failure to heed warning lights and instrument cluster text messages can cause the vehicle to break down in traffic and result in a collision and serious personal injury.

- **Never ignore warning lights or text WARNINGS.**
- **Always stop the vehicle as soon as it is safe to do so.**

Getting ready to work in the engine compartment

Please first read and note the introductory information and heed the WARNINGS ..

Checklist

Before any work in the engine compartment, carry out the following steps in the order in which they are listed ⇒:

1. Park the vehicle in a safe place on a firm, level surface.

2. Hold the brake pedal down until the engine is switched off.
3. Apply the parking brake to help prevent the vehicle from moving..
4. Shift the transmission into Park **(P)** (automatic) or Neutral (manual only)..
5. Stop the engine and remove the key from the ignition switch..
6. Let the engine cool down sufficiently.
7. Keep children and others away from the vehicle.
8. Make sure the vehicle cannot move unexpectedly.

WARNING

Disregarding the safety-related checklist may result in serious injuries.

- **Always review and follow the checklist. Follow accepted safety practices and use common sense.**

Opening and closing the engine compartment

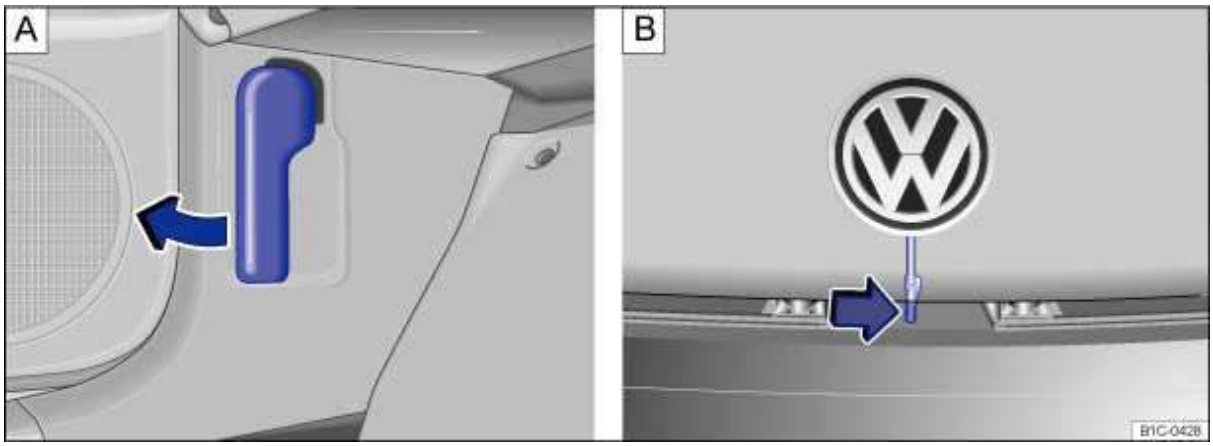

Fig. 114 A Inside hood release lever in the footwell on the driver side.△Outside hood release in the radiator grille.

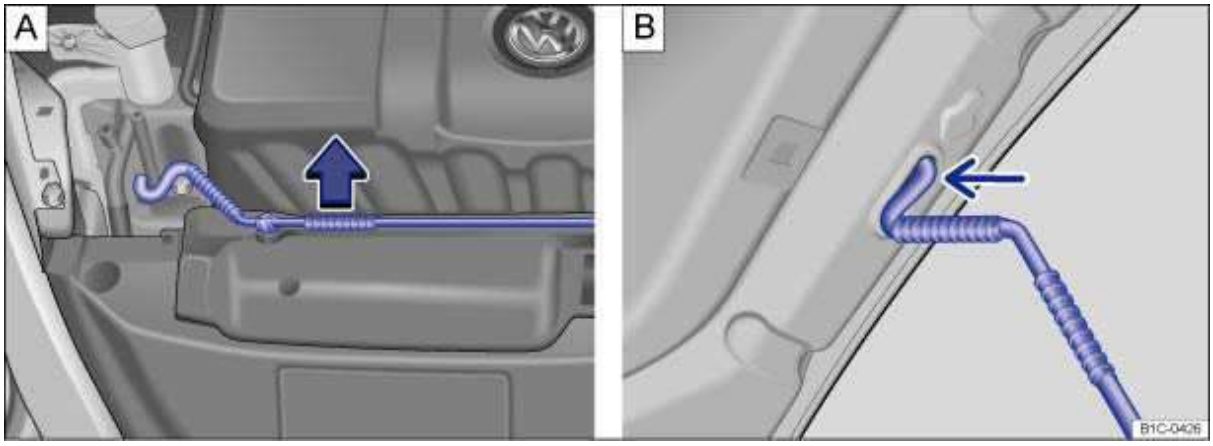

Fig. 115 A: Bracket for hood support in the engine compartment. B: Hood propped open.

Please first read and note the introductory information and heed the WARNINGS ⚠..

Opening the engine hood

- Before you open the hood, make sure that the windshield wiper arms are resting on the windshield ⇒ ⓘ.
- Open the driver door and pull the inside hood release lever in the direction of the arrow ⇒ fig. 114 **A**. The engine hood is released from its latch by a spring ⇒ ⚠.
- Push the outside hood release lever △(arrow) and lift the hood all the way up.
- Pull the hood support out of its bracket in the direction of the arrow ⇒ fig. 115 **A** and insert it into the opening in the hood △(arrow).

Closing the engine hood

- Lift the hood slightly ⇒ ⚠.
- Take out the hood support and clamp it in place in its bracket **A**.
- Lower the engine hood by hand until it is about 8 in. (20 cm) above its latch and then let it drop into place to latch it. *Do not* push down on it afterwards!

If the hood does not close completely, open it again and close it properly.

When the hood is properly closed, you can see that it fits flush with the other body parts. The indicator light in the instrument cluster display will go out..

⚠ WARNING

If the hood is not closed properly, it could fly up and block your view while you are driving. This can lead to a crash and serious personal injuries.

- **After closing the engine hood, check that the hood release lever is properly latched into the hood latch. The engine hood must be flush with the surrounding auto body parts.**
- **If you ever notice that the hood latch is not properly secured when the vehicle is moving, stop at once and close it.**
- **Never let anyone get in the way of the hood when closing it.**

ⓘ NOTICE

- **Make sure the windshield wiper arms are resting on the windshield before you open the hood. Otherwise, the windshield wipers and the hood may be damaged.**
- **Always put the windshield wiper arms down against the windshield before driving the vehicle.**

ⓘ NOTICE

Before opening or closing the engine hood, make sure there is enough room to do so, for example when the vehicle is in a garage.

Engine oil

Introduction

In this section you'll find information about:

Engine oil specifications
Engine oil capacities
Engine oil consumption

More information:

- ⇒ Booklet *Warranty and Maintenance*
- Preparations for working in the engine compartment.
- Parts, accessories, repairs and modifications.

WARNING

Improper handling of engine oil can cause severe burns and other serious injuries.

- **Always wear eye protection.**
- **Engine oil is poisonous and must be stored out of the reach of children.**
- **Store engine oil only in the closed original container. This also applies to used oil until disposal.**
- **To reduce the risk of poisoning, never drain the oil into empty food or beverage containers that might mislead someone into drinking from them.**
- **Continuous contact with used engine oil is harmful to your skin. Always protect your skin by washing thoroughly with soap and water.**
- **Engine oil becomes extremely hot when the engine is running and can cause severe burns. Always let the engine cool down to the touch.**

Like all other operating fluids, engine oil can pollute the environment. Collect leaked or spilled operating fluids and dispose of them properly in accordance with applicable environmental laws and regulations.

Engine oil specifications

Please first read and note the introductory information and heed the WARNINGS ..

The engine oil used must conform to exact specifications.

Using the proper engine oil is important for the functionality and service life of the engine. Your engine was factory-filled with a high-quality multi-grade oil which can usually be used throughout the entire year.

Engine oils are constantly being improved. Authorized Volkswagen dealers and authorized Volkswagen Service Facilities are always up-to-date regarding new developments and changes. Volkswagen therefore recommends that you have the engine oil changed by an authorized Volkswagen dealer or an authorized Volkswagen Service Facility.

Engine oil quality is based not only on requirements for engines and exhaust treatment systems, but also on fuel quality. Engine oil comes into contact with fuel and fuel residue in all internal combustion engines, causing engine oil to age and its lubricating qualities to deteriorate.

Your engine was factory-filled with a high-quality, “synthetic” all-season engine oil that meets strict Volkswagen oil quality standards and has a viscosity grade of SAE 5W-40. or SAE 5W-30. You can use this oil for normal driving in all temperatures.

If you need to add oil between oil changes, use only a high quality oil that expressly complies with the Volkswagen oil quality standard specified for your vehicle's engine:

Engines	Engine oil specification
Gasoline engines	VW 502 00 VW 503 00 VW 504 00
Diesel engines	VW 507 00

At the time this Manual was printed, the engine oils available in the U.S. that meet these Volkswagen standards are “synthetic” oils. This does not mean, however, that any “synthetic” engine oil will meet Volkswagen standards. Always use an approved oil that expressly complies with the Volkswagen oil quality standard that applies to your vehicle's engine.

General recommendations:

If “synthetic” oil that meets the applicable Volkswagen oil quality standard with viscosity grade SAE 5W-40 or SAE 5W-30 is not available in your area, be sure to use a viscosity grade suitable for the climate, season, and operating conditions that exist where the vehicle is used. Make sure the oil meets the quality standard listed in ⇒table..

Engine oils are constantly being improved. Authorized Volkswagen dealers and authorized Volkswagen Service Facilities are always up-to-date regarding new developments and changes. Volkswagen therefore recommends that you have the engine oil changed by an authorized Volkswagen dealer or an authorized Volkswagen Service Facility.

NOTICE

- **If you need to add oil and there is none available that meets the Volkswagen oil quality standard your engine requires, you may add a total of no more than 1/2 quart (0.5 liter) of a high-quality “synthetic” oil that meets ACEA A3 specifications and has a viscosity grade of SAE 5W-40 or SAE 5W-30.**
- **Use only a high quality engine oil that expressly complies with the Volkswagen oil quality standard specified for your vehicle's engine. Using any other oil can cause serious engine damage that will not be covered by any Volkswagen Limited Warranty.**
- **Do not mix any lubricants or other additives into the engine oil. Doing so can cause engine damage! Damage caused by these kinds of additives are not covered by any Volkswagen Limited Warranty.**

Engine oil capacities

Please first read and note the introductory information and heed the WARNINGS ..

Engines	Engine oil capacity (with filter)
170 hp (125 kW), 2.5L gasoline engines	About 6.3 quarts (6.0 liters)
200 hp (147 kW), 2.0L gasoline engines	About 4.9 quarts (4.6 liters)
140 hp (103 kW), 2.0L diesel engines	About 4.5 quarts (4.3 liters)

WARNING

Engine oil can ignite when it touches hot engine parts. This can cause fires, burns, and other severe injuries.

- **Never spill oil on the engine. Oil spilled on a cold engine can also cause a fire when the engine warms up.**
- **Always make certain that you screw the cap of the engine oil filler opening back on tightly after adding oil and that the dipstick has been pushed all the way back into the in the guide tube. This helps prevent engine oil from leaking onto the hot engine when the engine is running.**

NOTICE

- **Do not start the engine if the engine oil level is above range (A). Contact an authorized Volkswagen dealer or an authorized Volkswagen Service Facility. Otherwise the catalytic converter and engine can be damaged!**
- **When changing or topping off fluids, make sure that you pour the fluids into the correct reservoirs. Adding the wrong type of operating fluids will cause serious malfunctions and engine damage.**

The engine oil level should never be above range (A). Otherwise oil can be drawn in by the crankcase ventilation system and enter the atmosphere via the exhaust system.

Engine oil consumption

Please first read and note the introductory information and heed the WARNINGS ..

To provide effective lubrication and cooling for internal engine parts, all internal combustion engines use some oil. Oil consumption varies from engine to engine and may change over the life of the engine. Engines tend to use more oil during the break-in period than they do afterward, when oil consumption has stabilized.

Under normal conditions, the rate of oil consumption depends on oil quality as well as viscosity, engine speed (rpm), outside temperature, road conditions, the amount of oil dilution caused by condensed water or fuel residue, and oxidation of the oil. Oil consumption may increase with engine wear over time, until replacement of worn engine parts may become necessary.

Volkswagen recommends that you to check the engine oil level at regular intervals, preferably every time you fill the fuel tank, and always before a long trip. Your vehicle may consume engine oil depending on several variables. A maximum of 1 quart per 1200 miles (1 liter per 2000 km) would be considered normal. New vehicles may consume more oil over the first 3000 miles (5000 km).

The oil pressure warning light is not an indicator of low engine oil level. If the warning light stays on or flashes while driving (above 1500 rpm), a chime will sound. It indicates that the oil pressure is too low. Stop the engine immediately, check the engine oil level and add oil if necessary. If the engine oil level is normal, but the light continues to flash, do not keep driving or let the engine idle, as damage may occur.

If you believe your engine uses too much oil, we recommend that you consult your authorized Volkswagen dealer or authorized Volkswagen Service Facility so that the cause of your concern can be properly diagnosed. Please keep in mind that accurate measurement of oil consumption requires great care and may take some time. Your authorized Volkswagen dealer and authorized Volkswagen Service Facility have instructions for how to measure oil consumption accurately.

Depending on the way the vehicle is driven and the operating conditions, oil consumption can be up to 1 quart per 1200 miles (0.5 liter per 1000 km). Consumption may be higher for new vehicles during the first 3000 miles (5000 km).

Engine coolant

Introduction

In this section you'll find information about:

Engine coolant temperature warning light
Engine coolant specifications

Never do any work on the coolant system unless you

- know exactly how to carry out the job,
- have the correct technical information and the proper tools, supplies, and operating fluids, and
- are familiar with the necessary safety precautions ⇒ ⚠!

If you are uncertain in any way, have the work done by an authorized Volkswagen dealer or an authorized Volkswagen Service Facility.

Serious personal injury may result from improperly performed work.

More information:

- Preparations for working in the engine compartment.
- Parts, accessories, repairs and modifications.

⚠ WARNING

Engine coolant is poisonous!

- **Always keep the coolant in its original container stored in a safe place.**
- **To reduce the risk of poisoning, never store engine coolant in empty food or beverage containers or in any other containers that might mislead someone into drinking from them.**
- **Always keep engine coolant out of reach of children.**
- **Always make sure there is enough of the correct coolant additive to provide proper antifreeze protection at the coldest temperatures that can be expected where the vehicle will be used.**
- **At extremely cold temperatures, the coolant could freeze, causing the vehicle to break down. The heater would also not work, and vehicle occupants could be without protection at subfreezing temperatures.**

Coolant and coolant additives can pollute the environment. Collect leaking operating fluids and dispose of them properly in accordance with applicable environmental laws and regulations.

Engine coolant temperature warning light

Please first read and note the introductory information and heed the WARNINGS ⚠..

When the ignition is switched on, several warning and indicator lights come on briefly for a function check. They go out after a few seconds.

The following table explains what to do if the engine coolant warning light does not go out a few seconds after the engine is started or starts flashing while driving.

Flashes	Possible cause	Proper response
	Engine coolant temperature too high.	**Stop!** Pull off the road and stop as soon as you can do so safely. Stop the engine and let it cool down until the temperature is in the normal range again. Check the engine coolant level and add engine coolant if needed.. If the engine coolant level is correct or the problem continues after adding coolant and driving a short distance, **do not drive any farther**. Contact the nearest authorized Volkswagen dealer or authorized Volkswagen Service Facility. If the coolant level is correct, the overheating may be caused by a radiator fan fault. Check the fuses and replace as necessary..
	Engine coolant level too low.	Check the engine coolant level after the engine has cooled down and add engine coolant if low.. If the engine coolant level is correct or the problem continues after adding coolant, **do not drive any farther**. Contact an authorized Volkswagen dealer or authorized Volkswagen Service Facility. These instructions apply only when the coolant temperature stays in the normal range.
	Engine coolant system malfunction.	**Stop!** Get assistance from an authorized Volkswagen dealer, an authorized Volkswagen Service Facility, or another qualified workshop.
–	–	Do not drive at high engine speeds or with heavy engine loads until the engine warms up.

When the ignition is switched on, several warning and indicator lights come on briefly for a function check. They go out after a few seconds.

Depending on equipment, the engine coolant temperature may be displayed in the Volkswagen Information System ***MFI*** menu.

WARNING

Failure to heed warning lights and instrument cluster text messages can cause the vehicle to break down in traffic and result in a collision and serious personal injury.

- **Never ignore warning lights or text WARNINGS.**
- **Always stop the vehicle as soon as it is safe to do so.**

NOTICE

Failure to heed warning lights or text WARNINGS can result in vehicle damage.

Engine coolant specifications

Please first read and note the introductory information and heed the WARNINGS ..

The engine cooling system is filled at the factory with a mixture of specially conditioned water and at least 40 percent of Volkswagen engine coolant additive **G 13** (TL-VW 774 J). This engine coolant additive is pink.

This mixture provides antifreeze protection down to -13 °F (-25 °C). It also helps to protect the light alloy parts in the engine cooling system against corrosion. In addition, the mixture helps prevent calcium deposits and increases the boiling point of the engine coolant.

To protect the engine, the mixture must *always* contain *at least 40% coolant additive* even in warm weather or climates where antifreeze protection is not needed.

If more antifreeze protection is needed for climate conditions, the percentage of coolant additive can be increased. However, the coolant additive percentage must never be more than 60%; otherwise, antifreeze protection is reduced and the ability of the mixture to cool the engine is also reduced.

When adding engine coolant, use a mixture of **distilled** water and at least 40% coolant additive G 13 or G 12 plus-plus (TL-VW 774 G) for optimum corrosion protection ⇒ ⓘ.

Do not mix G 13 with G 12 plus or G 11. Mixing these coolant additives together significantly reduces corrosion protection ⇒ ⓘ and can lead to engine damage that is not covered by any Volkswagen Limited Warranty.

⚠ WARNING

Too little antifreeze protection in the engine cooling system can cause engine failure and severe injuries.

- **Always make sure there is enough of the correct coolant additive to provide proper antifreeze protection at the coldest temperatures that can be expected where the vehicle will be used.**
- **At extremely cold temperatures, the coolant could freeze, causing the vehicle to break down. The heater would also not work, and vehicle occupants could be without protection at subfreezing temperatures.**

ⓘ NOTICE

Never mix original Volkswagen engine coolant additives with other additives not approved by Volkswagen. Mixing Volkswagen coolant additives with coolant additives made by other manufacturers can seriously damage the engine and the engine cooling system.

- **If the fluid in the engine coolant reservoir is any color but pink, then G 13 was mixed with a different engine coolant. If this is the case, the engine coolant must be replaced immediately. Otherwise serious malfunctions or engine damage can occur!**

Engine coolant and engine coolant additives can pollute the environment. Collect leaking operating fluids and dispose of them properly in accordance with applicable environmental laws and regulations.

Hot steam and hot engine coolant can cause serious burns.

- **Never open the hood if you see steam or coolant escaping from the engine compartment. Always wait until you no longer see or hear steam or coolant escaping from the engine.**
- **Always let the engine cool down completely before carefully opening the hood. Hot components will burn skin on contact.**
- **When the engine has cooled down and you are ready to open the hood:**
  - **Firmly apply the parking brake and shift the transmission into Park (P) (automatic) or Neutral (manual only).**
  - **Take the vehicle key out of the ignition.**
  - **On vehicles with Keyless Access, make sure that the remote control vehicle key is out of range of the vehicle and that the vehicle cannot be started by depressing the starter button..**
  - **Always keep children and others away from the engine compartment and never leave them unsupervised.**
- **The engine coolant system is under pressure when the engine is hot. Never unscrew the coolant expansion tank cap when the engine is hot. Hot coolant can spray out and cause severe burns and other serious injuries.**
  - **Turn the cap slowly and very carefully in a counterclockwise direction while applying light downward pressure on the top of the cap.**
  - **Always protect your face, hands, and arms from hot escaping coolant or steam by covering the cap with a large, thick rag.**
- **Never spill fluids on the engine or exhaust system when refilling. Spilling fluids onto hot parts of the engine or exhaust system can cause a fire. Under some conditions, the ethylene glycol in engine coolant can catch fire.**

NOTICE

- **Use distilled water only when adding coolant! All other types of water contain chemical compounds that can cause extensive corrosion damage to the engine. This can even lead to engine failure. If you have added non-distilled water, take the vehicle immediately to an authorized Volkswagen dealer or an authorized Volkswagen Service Facility to have the coolant system drained, flushed, and refilled completely with the proper coolant.**
- **Refill engine coolant only up to the top edge of the marked fill range . Excess engine coolant may be forced out of the engine cooling system when it gets hot and cause damage.**
- **In the case of significant engine coolant loss, refill engine coolant only when the engine is *completely cooled down*. Significant engine coolant loss is a sign of leaks in the cooling system. Have the engine cooling system checked immediately by an authorized Volkswagen dealer or an authorized Volkswagen Service Facility. Otherwise the engine may be damaged!**

- **When changing or topping off operating fluids, make sure that you pour the fluids into the correct reservoirs. Serious malfunctions and engine damage can result if you pour operating fluids into the wrong reservoir.**

Vehicle battery

Introduction

In this section you'll find information about:

Warning light

The standard 12 Volt vehicle battery is part of the vehicle electrical system.

Never do any work on the vehicle electrical system unless you

- know exactly how to carry out the job,
- have the correct technical information and the proper tools, and
- are familiar with the necessary safety precautions ⇒ ⚠!

If you are uncertain in any way, have the work done by an authorized Volkswagen dealer or authorized Volkswagen Service Facility. Serious personal injury may result from improperly performed work.

Location of the vehicle battery

The 12 Volt vehicle battery is located in the engine compartment.

Explanation of the warnings on the vehicle battery

Symbol	Meaning
	Always wear eye protection!
	Battery acid is highly corrosive. Always wear protective gloves and eye protection!
	Fire, sparks, open flame, and smOKing are prohibited!
	When a battery is charged, it produces hydrogen gas which is highly explosive!
	Always keep children away from battery acid and vehicle batteries!

More information:

- ⇒ Booklet *Warranty and Maintenance*
- Preparations for working in the engine compartment.
- Parts, accessories, repairs and modifications.

WARNING

Working on the batteries or the electrical system in your vehicle can cause serious acid burns, fires, explosions, or electrical shocks. Always read and heed the following WARNINGS and safety precautions before working on the batteries or the electrical system.

- **Before working on the electrical system, always switch off the ignition and all electrical consumers and disconnect the negative (-) cable from the standard 12 Volt battery.**
- **When you change a light bulb, always switch off the light first.**
- **Always keep children away from battery acid and vehicle batteries in general.**
- **Always wear eye protection. Never let battery acid or lead particles come into contact with your eyes, skin, or clothing.**
- **Sulfuric battery acid is very corrosive. It can burn unprotected skin and cause blindness. Always wear protective gloves and eye protection. To reduce your risk of injury, never tilt the batteries, as this could spill acid through the vents and burn you.**
- **If you get battery acid in your eyes or on your skin, immediately rinse with cold water for several minutes and then get immediate medical attention. If you swallow any battery acid, get medical attention immediately.**
- **When disconnecting the batteries from the vehicle electrical system, always disconnect the negative cable (-) first and then the positive cable (+).**
- **Always switch off all electrical consumers before reconnecting 12 Volt batteries. Reconnect the plus cable (+) first and then the negative cable (-). Never reverse the polarity of the connections. This could cause a fire.**
- **A highly explosive mixture of gases is given off when the battery is being charged.**
- **Do not smoke and avoid fires, sparks, and open flames when working. Never create sparks or electrostatic charges when handling cables and electrical equipment. Never short circuit the battery terminals. High-energy sparks can cause serious personal injury.**
- **Never use or attempt to charge a damaged or frozen battery, or a battery that was frozen but has thawed. Charging a frozen or thawed battery could cause explosions and chemical burns! Replace damaged or frozen vehicle batteries immediately. A dead battery can freeze at temperatures around +32 °F (0 °C).**
- **If the battery has a vent line or tube, make sure that it is properly connected to the battery.**

WARNING

California Proposition 65 Warning

- **Battery posts, terminals, and related accessories contain lead and lead components, chemicals known to the State of California to cause cancer and reproductive harm. Wash your hands after handling.**

NOTICE

- **Do not expose the vehicle battery to direct sunlight for an extended period of time as ultraviolet rays may damage the battery housing.**
- **If the vehicle is left standing in the cold for a long time, protect the vehicle battery from freezing. A battery will be permanently damaged by freezing.**

Emergency starting and starting the engine with a very weak vehicle battery or after the vehicle battery has been replaced may change or delete system settings (including time, date, personal convenience settings, and programming). Check the settings and correct as necessary once the vehicle battery has built up a sufficient charge.

Warning light

Please first read and note the introductory information and heed the WARNINGS ..

Lights up	Possible cause	Proper response
	Alternator malfunction.	See an authorized Volkswagen dealer or an authorized Volkswagen Service Facility. Have the electrical system checked. Switch off unnecessary electrical loads. The vehicle battery will not be charged by the alternator as you drive.

When the ignition is switched on, several warning and indicator lights come on briefly for a function check. They go out after a few seconds.

WARNING

Failure to heed warning lights and instrument cluster text messages can cause the vehicle to break down in traffic and result in a collision and serious personal injury.

- **Never ignore warning lights or text WARNINGS.**
- **Always stop the vehicle as soon as it is safe to do so.**

NOTICE

Failure to heed warning lights or text WARNINGS can result in vehicle damage.

Exterior care and cleaning

Introduction

In this section you'll find information about:

Washing with a power washer

Undercoating

Regular and expert care helps to **preserve the value** of your vehicle. Such expert care may also be one of the requirements of your New Vehicle Limited Warranty if corrosion repair or repainting is necessary.

Vehicle care products are available from your authorized Volkswagen dealer or authorized Volkswagen Service Facility.

More information:

- Preparations for working in the engine compartment.
- Interior care and cleaning.
- Parts, accessories, repairs and modifications.

WARNING

Vehicle care products can be dangerous. Improper use can cause accidents, burns, poisoning, or other serious personal injuries.

- **Always store vehicle care products only in original containers that are securely closed.**
- **Always read and heed all the instructions and all WARNINGS on the package.**
- **To reduce the risk of poisoning, never use empty food or beverage containers that might mislead someone into drinking from them.**
- **Always keep vehicle care products out of the reach of children.**
- **Always use such products outdoors or in well-ventilated areas, because harmful vapors may be released when these products are used.**
- **Never use fuel, turpentine, engine oil, nail polish remover or other volatile fluids for vehicle care. They are poisonous and highly flammable.**

WARNING

Improper care and cleaning of vehicle components can impact the safety features of the vehicle and cause severe injuries.

- **Always clean and maintain vehicle components according to manufacturer's instructions.**
- **Only use approved or recommended cleaners.**

NOTICE

Vehicle care products containing solvents can damage plastics and other vehicle the materials.

Wash the vehicle only at specifically designated wash locations to help prevent water contaminated with oil, grease and fuel from entering the storm drain sewer system. In some areas it is against the law to wash motor vehicles anywhere than other than at specified designated car washing locations.

When buying vehicle care products, try to choose those that are not harmful to the environment.

Never throw out vehicle care products with ordinary household waste. Always read and heed all the instructions and all WARNINGS on the package.

Washing with a power washer

Please first read and note the introductory information and heed the WARNINGS ..

Always follow the instructions for the power washer. This especially applies to the **pressure** and **spraying distance** ⇒.

Make sure there is enough distance to soft materials such as rubber hoses or insulating material.

Never use **concentrated jet nozzles** or so-called **dirt blasters** ⇒.

Never use a power washer to clean the engine compartment.**or! Bookmark not defined.**, *Cleaning the engine compartment*.

WARNING

Improper use of power washers can cause serious invisible permanent damage leading to tire failure and loss of vehicle control. This can cause accidents and severe personal injury.

- **Keep sufficient distance between water jet and tires. Never wash tires with a nozzle that sprays the water out in a direct stream regardless of the distance to the tire and even for a very short time.**
- **Never use "dirt blasters" to clean tires. Even spraying from a relatively long distance for a very short time can do visible or invisible damage to tires.**

WARNING

After the vehicle has been washed, the wet brakes or, in winter, brake discs or pads coated with ice, react slower and need longer stopping distances.

- **Always dry the brakes and clean off any ice coatings with a few careful applications of the brake. Make sure not to endanger other motorists or cyclists or disobey legal requirements.**

NOTICE

- **Water temperature should not be more than +140 °F (+60 °C).**
- **To help prevent damage to the paint, do not wash the vehicle in direct sunlight.**
- **Do not clean icy or snow-covered windows with a power washer.**
- **When washing or rinsing the vehicle in cold weather, do not let water get into the lock cylinders or point the hose at gaps around the doors, hood, or rear hatch. The water could freeze on the locks and seals and make it difficult to open the vehicle!**

Undercoating

Please first read and note the introductory information and heed the WARNINGS ..

The vehicle underbody is coated to help protect it from corrosion and damage. The undercoating could be damaged during normal use. We therefore recommend that you have the protective coatings on the underbody and suspension inspected regularly, and repaired if necessary.

WARNING

Undercoating and rustproofing products can catch fire on the hot exhaust system or any other hot engine component.

- **Never apply additional undercoating or rust proofing on or near the exhaust manifold, the exhaust pipes, the catalytic converter, the heat shields, or any other hot vehicle component.**

Interior care and cleaning

Introduction

In this section you'll find information about:

Caring for upholstery

Modern clothing fabrics such as dark denim may not be completely colorfast. Even with normal use, dye from these and other fabrics can rub off on seat upholstery and leave visible discolorations (especially on light-colored seat upholstery). This is caused by a lack of colorfastness in the clothing fabric, not by any fault in the seat upholstery fabric. To help prevent damage to the seat upholstery, always make sure your clothing is colorfast. Volkswagen recommends having a qualified specialist remove any discolorations from the seat upholstery.

The longer stains, dirt and other deposits remain on the surfaces of vehicle components and upholstery, the more difficult it may be to clean them. If stains, dirt and deposits are left untreated for a long time, they may become impossible to remove.

More information:

- Exterior care and cleaning.
- Parts, accessories, repairs and modifications.

WARNING

Vehicle care products can be dangerous. Improper use can cause accidents, burns, poisoning, or other serious personal injuries.

- **Always store vehicle care products only in original containers that are securely closed.**
- **Always read and heed all the instructions and all WARNINGS on the package.**
- **To reduce the risk of poisoning, never use empty food or beverage containers that might mislead someone into drinking from them.**
- **Always keep vehicle care products out of the reach of children.**
- **Always use such products outdoors or in well-ventilated areas, because harmful vapors may be released when these products are used.**
- **Never use fuel, turpentine, engine oil, nail polish remover or other volatile fluids for vehicle care. They are poisonous and highly flammable.**

WARNING

Improper care and cleaning of vehicle components can compromise the vehicle's safety features and cause serious personal injury.

- **Always clean and maintain vehicle components according to manufacturer's instructions.**
- **Only use approved or recommended cleaners.**

NOTICE

- **Vehicle care products containing solvents can cause irreparable damage to plastics and other vehicle materials.**
- **Stains, dirt and other deposits that contain aggressive substances or solvents can corrode vehicle materials and cause permanent damage, even after brief contact with the surface.**
- **Remove stains, dirt, and other deposits as quickly as possible and do not allow them to dry.**

- **To help prevent damage, have stubborn stains removed by a professional who has the necessary expertise and experience.**

Suitable care products are available from authorized Volkswagen dealers and authorized Volkswagen Service Facilities.

Caring for upholstery

Please first read and note the introductory information and heed the WARNINGS ..

Checklist

Please note the following when it comes to the care and preservation of the upholstery ⇒:

✓ Open Velcro® fasteners can damage upholstery, fabric, and trim. Before you get into the vehicle, close all Velcro® fasteners that could come into contact with upholstery fabrics and cloth trim.

✓ Sharp-edged objects and items on clothing and belts (such as belt clips, mobile phone cases, zippers, rivets, and rhinestones) can damage upholstery material and fabric trim. To help prevent damage, do not let such items come into direct contact with the upholstery and fabric trim.

✓ Dust and dirt particles in pores, folds, and seams can have a “scouring” effect on material and damage the surface. Remove dust and dirt regularly to help prevent permanent surface damage.

✓ Check clothing for color-fastness to help prevent upholstery discoloration, especially to light-colored upholstery.

NOTICE

Disregarding the upholstery-related checklist may lead to damage or discoloration of upholstery and fabric trim.

- **Please note and follow the points listed in the checklist.**

Volkswagen recommends having any discoloration removed by an authorized Volkswagen dealer or authorized Volkswagen Service Facility.

Tires and wheels

Introduction

In this section you'll find information about:

Tire and wheel handling
Wheel rims
Tire inflation pressure
Tire inflation pressure in cold tires
Tread depth and tread wear indicators
Tire wear and damage
Compact spare wheel
Tire labeling
Winter tires
Snow chains
Glossary of tire and loading terminology
Tires and vehicle load limits
Determining the correct load limit

Volkswagen recommends that all work on tires and wheels be done by an authorized Volkswagen dealer or authorized Volkswagen Service Facility. They are familiar with the technical requirements and recommended procedures, have the necessary special tools and spare parts, and can properly dispose of old tires.

More information:

- Transporting.• Braking, stopping and parking.
- Tire Pressure Monitoring System.
- Exterior care and cleaning.
- Vehicle tool kit.
- Consumer information.
- Wheel covers.
- Changing a wheel.

WARNING

New tires or tires that are old, worn or damaged cannot provide maximum control and braking performance.

- **Improper care and handling of tires and wheels can reduce driving safety and cause accidents and severe injuries.**
- **Install only radial tires of the same make, the same dimensions (tread circumference), and similar tread profile on all 4 wheels.**
- **New tires tend to be slippery and must be broken in. Always drive with special care for the first 350 miles (560 km) to help reduce the risk of losing control, a collision, and serious personal injuries.**
- **Check tire inflation pressure regularly when the tires are cold and always maintain the prescribed tire pressure. Low tire pressure can cause tires to get too hot, resulting in tread separation, sudden loss of pressure, and blowouts. Tires with excessively low pressure flex (bend) more, which can cause the tire to overheat and fail suddenly without warning.**
- **Check tires regularly for wear and damage.**
- **Never drive with worn or damaged tires (for example, tires with punctures, cuts, cracks, blisters, or bumps). Driving with worn or damaged tires can lead to loss of vehicle control, sudden tire failure including blowouts and sudden deflation, crashes, and serious personal injuries.**
- **Have worn or damaged tires replaced immediately.**
- **Never exceed the maximum speed rating or the maximum load rating of the tires on your vehicle.**
- **The effectiveness of the driver assistance systems and the braking support systems depends on the tire traction.**
- **If you notice unusual vibration or if the vehicle pulls to one side when driving, always stop as soon as it is safe to do so and check the wheels and tires for damage.**
- **To reduce the risk of losing control, crashes, and serious personal injuries, never loosen the bolts on wheels with bolted rim rings.**
- **Never mount used tires on your vehicle if you are not sure of their past use. Old, used tires and wheels may have damage that cannot be seen that can lead to sudden tire failure and loss of vehicle control.**
- **Tires age even if they are not being used and can fail suddenly, especially at high speeds, causing loss of vehicle control, accidents, and severe personal injuries. Tires that are more than 6 years old can be used only in an emergency and even then only with special care and at low speed.**

For technical reasons it is usually not possible to use wheel rims from other vehicles. Even wheel rims from the same model may not fit properly. Check with an authorized Volkswagen dealer or authorized Volkswagen Service Facility if necessary.

Tire and wheel handling

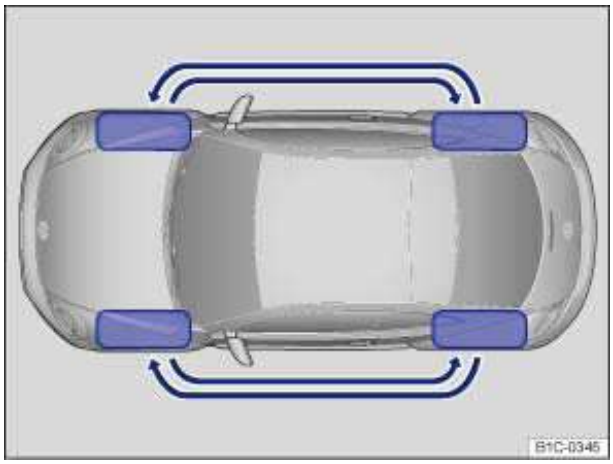

Fig. 122 Tire rotation diagram.

Please first read and note the introductory information and heed the WARNINGS ⚠..

Tires may be the least appreciated and most abused parts of a motor vehicle. Tires are very important, since their small patches of rubber are the only contact between your vehicle and the road.

Maintaining correct tire pressure, making sure that your vehicle and its tires do not have to carry more weight than they can safely handle, and regularly inspecting tires for damage (such as cuts, slashes, irregular wear, and overall condition) are the most important things that you can do to help avoid sudden tire failure, including tread separation and blowout.

The tires and wheels are essential parts of the vehicle's design. The tires and wheels approved by Volkswagen are specially matched to the characteristics of the vehicle for good road holding and safe handling when in good condition and properly inflated.

Avoiding tire damage

- If you must drive over a curb or other obstacle, drive very slowly and as much as possible at a right angle to the curb with the tire tread of both front wheels contacting the curb at the same time.
- Regularly check tires for damage, such as punctures, cuts, tears and blisters.
- Remove embedded material in the tread profile that **has not yet penetrated the inside of the tire**..
- Heed all warning messages from the Tire Pressure Monitoring System..
- Replace worn or damaged tires immediately..
- Damage to tires and wheels is often not readily visible. If you notice unusual vibration or the vehicle pulls to one side, this may indicate that one of the tires is damaged. The tires must be checked immediately for **hidden damage** by an authorized Volkswagen dealer or an authorized Volkswagen Service Facility. See also..
- Never exceed the load and permissible maximum speed rating of the tires..
- Always keep aggressive chemicals including grease, oil, gasoline and brake fluid off the tires,

including the compact spare wheel ⇒⚠.

- Replace missing valve caps immediately.

Unidirectional tires

Unidirectional tires are designed to rotate only in one direction. Unidirectional tires have arrows on the sidewalls that show the direction of rotation.. Unidirectional tires must always be mounted according to the specified direction of rotation in order to deliver their best grip, braking performance, low road noise, and good wear as well as good hydroplaning resistance.

If you have to mount a tire opposite to its proper direction of rotation, you must drive more carefully, since the tire is no longer being used as designed. This is particularly important on wet roads. You must replace or remount the tire as soon as possible in order to restore the correct direction of rotation.

Rotating tires

To help ensure even wear on all tires, regular tire rotation according to the diagram ⇒ fig. 122 is recommended. In this way all tires can have about the same service life.

Volkswagen recommends that you have your tires rotated by an authorized Volkswagen dealer or authorized Volkswagen Service Facility.

Tires more than 6 years old

Tires age even if they are not being used. Physical and chemical processes reduce tire strength and performance and cause them to harden and become brittle. Old tires can fail suddenly and without warning.

Volkswagen recommends replacing tires that are 6 years and older. This also applies to tires that lo**OK** new (including the tire on the compact spare wheel) or that seem to still be usable with tread depth that has not yet reached the legal minimum depth ⇒ ⚠.

The age of each tire can be determined with the manufacturing date that is part of the U.S. DOT tire identification number (TIN)..

Tire storage

Mark tires before removing them to help make sure that the previous location (left, right, front, rear) and rolling direction can be maintained when remounting them. Store tires in a cool, dry and preferably dark place. Do **not** store tires mounted on wheels standing up.

Tires not mounted on wheels should be covered to help protect them from dirt and stored vertically (sitting on the tread).

⚠ WARNING

Aggressive fluids and materials can cause visible and invisible tire damage that can cause tire blowouts.

- **Always keep chemicals, oils, grease, fuels, braking fluids and other aggressive substances away from tires.**

⚠ WARNING

Tires age even if they are not being used and can fail suddenly, especially at high speeds, causing loss of vehicle control, accidents, and severe personal injuries.

- **Tires that are more than 6 years old can be used only in an emergency and even then only with special care and at low speed.**

Always dispose of old tires in accordance with legal requirements.

Wheel rims

🕮 Please first read and note the introductory information and heed the WARNINGS ⚠..

The design of the wheel bolts is matched to the factory-installed wheels. If different wheels are installed, wheel bolts with the right length and bolt head shape must be used. This helps to ensure that wheels can be mounted securely and that the brakes will work correctly..

In most cases, you cannot use wheel bolts from a different vehicle. Even wheel rims from the same model may not fit properly.

Tires and wheel rims approved by Volkswagen have been matched precisely to your vehicle model and contribute considerably to good handling and safe vehicle performance.

Tightening torque

Wheel bolts must always be installed with the correct tightening torque.. The required tightening torque for your vehicle's wheel bolts is **103 ft-lbs (140 Nm)**. After changing a wheel, the bolt torque must be checked as soon as possible with an accurate torque wrench. See an authorized Volkswagen dealer or an authorized Volkswagen Service Facility.

Wheel rims with bolted rim rings

Wheel rims with bolted rim rings have several parts. The parts are bolted together with special screws in a special process. This helps to ensure that they will work properly, prevent leaks, run true and safely. Damaged wheel rims must be replaced, and you must never take them apart or try to repair them yourself. Have an authorized Volkswagen dealer or an authorized Volkswagen Service Facility repair them for you ⇒ ⚠.

Wheel rims with bolted decorative covers

Light-alloy wheels may have interchangeable decorative covers attached to the rim with self-locking screws. If you want to replace damaged wheel covers, contact your authorized Volkswagen dealer or authorized Volkswagen Service Facility.

⚠ WARNING

Using improper or damaged wheel rims can affect driving safety, cause accidents and severe personal injury.

- **Use only wheel rims approved for the vehicle.**
- **Regularly check wheel rims for damage and replace them if necessary.**

⚠ WARNING

Improper loosening and tightening of the bolts on wheel rims with bolted rim rings can cause accidents and severe personal injury.

- **Never loosen bolted connections on wheel rims with bolted rim rings.**
- **Have all work on wheel rims with bolted rim rings performed by an authorized Volkswagen dealer or authorized Volkswagen Service Facility.**

Tire inflation pressure

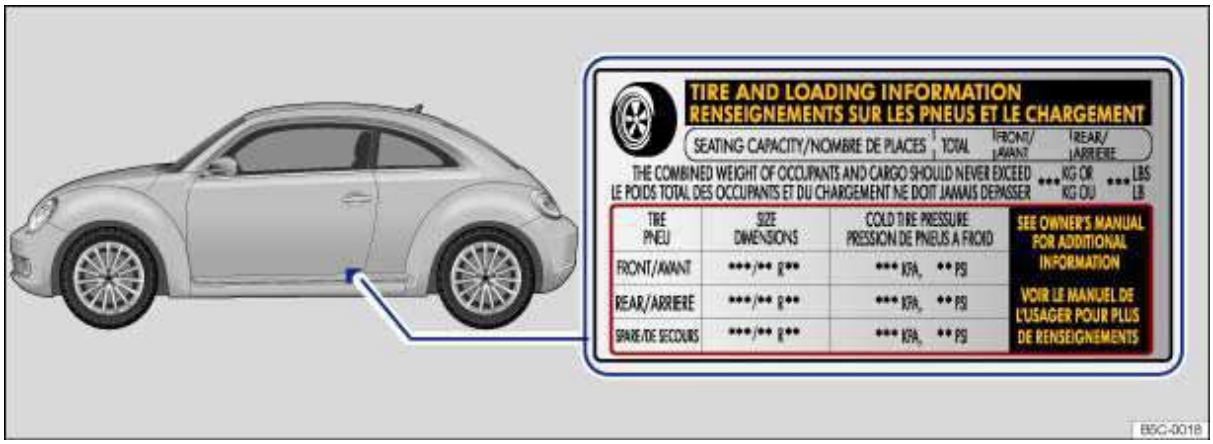

Fig. 123 Location of the tire inflation pressure label.

Please first read and note the introductory information and heed the WARNINGS ⚠..

The correct tire inflation pressure for the factory-installed tires is listed on a label. The factory-installed tires may be summer, winter, or all-season tires. The label ⇒ fig. 123 is on the driver door jamb.

Under- or over-inflation significantly shortens the service life of your tires and affects the handling of the vehicle ⇒ ⚠. The correct tire pressure is very important, particularly when the vehicle is driven at **higher speeds**. Incorrect tire pressure causes increased wear and even sudden tire failure and blowouts.

Therefore, tire pressure should be checked at least once a month and always before long trips.

The specified tire inflation pressure applies to a **cold tire**. When tires are warm, the pressure will be higher than when the tires are cold.

Do not reduce the tire pressure on warm tires to match the required cold tire inflation pressure. The tire inflation pressure would then be too low and could cause sudden tire failure and blowout.

Applicable only in the United States

Tire inflation pressure in cold tires

Please first read and note the introductory information and heed the WARNINGS ⚠..

Model	Engine	Tire size	Tire pressure		
			psi	kPa	bar
Beetle	**2.5 l/170 hp (125 kW)**	215/60 R16 95T	29	200	2.0
		215/55 R17 94H	29	200	2.0
		235/45 R18 94H	29	200	2.0
		235/40 R19 92H	32	220	2.2
	2.0 l/200 hp (147 kW)	215/55 R17 94H	30	210	2.1
		235/45 R18 94H	30	210	2.1
		235/40 R19 92H	32	220	2.2
	2.0 l/140 hp (103 kW) TDI	215/60 R16 95T	30	210	2.1

Model	Engine	Tire size	Tire pressure		
			psi	kPa	bar
		215/55 R17 94H	31	210	2.1
		235/45 R18 94H	31	210	2.1
		235/40 R19 92H	34	230	2.3
Compact spare wheel		T125/90 R16	60	420	4.2
The Tire Pressure Monitoring System is configured at the factory with the correct tire inflation pressure applicable for the vehicle model, engine and factory-installed tires. The tire inflation pressure is listed on the tire inflation pressure label on the driver door jamb.. The tire inflation pressures for the road tires are listed on this label. The inflation pressure for the compact spare is as specified on the tire pressure label or on a separate label for the compact spare, if there is one. In the event of a discrepancy between the above figures and the tire pressures listed on the tire inflation pressure label, the pressures listed on the label are the ones you should use. The listed pressure applies to all road tires. The Tire Pressure Monitoring System must be recalibrated using the SET button whenever you change or adjust the cold tire inflation pressures or remove and remount or change any wheel or tire on the vehicle, even if the reinstalled or replacement wheels and tires are identical to those that were removed and even if the tire pressure does not change..					

Applicable only in Canada

Tire inflation pressure in cold tires

Please first read and note the introductory information and heed the WARNINGS ⚠..

Model	Engine	Tire size	Tire pressure		
			psi	kPa	bar
Beetle	**2.5 l/170 hp (125 kW)**	215/60 R16 95T	29	200	2.0
		215/55 R17 94H	29	200	2.0
		235/45 R18 94H	29	200	2.0
		235/40 R19 92H	32	220	2.2
	2.0 l/200 hp (147 kW)	215/55 R17 94H	30	210	2.1
		235/45 R18 94H	30	210	2.1
		235/40 R19 92H	32	220	2.2
	2.0 l/140 hp (103 kW) TDI	215/60 R16 95T	30	210	2.1
		215/55 R17 94H	31	210	2.1
		235/45 R18 94H	31	210	2.1
		235/40 R19 92H	34	230	2.3
Compact spare wheel		T125/90 R16	60	420	4.2

Model	Engine	Tire size	Tire pressure		
			psi	kPa	bar
The tire inflation pressure is also listed on the sticker inside the driver door jamb ⇒ fig. 123. The tire inflation pressures for the road tires are listed on this label. The inflation pressure for the compact spare is as specified on the tire pressure label or on a separate label for the compact spare, if there is one. In the event of a discrepancy between the above figures and the tire pressures listed on the tire inflation pressure label, the pressures listed on the label are the ones you should use. The listed pressure applies to all road tires.					

Tread depth and tread wear indicators

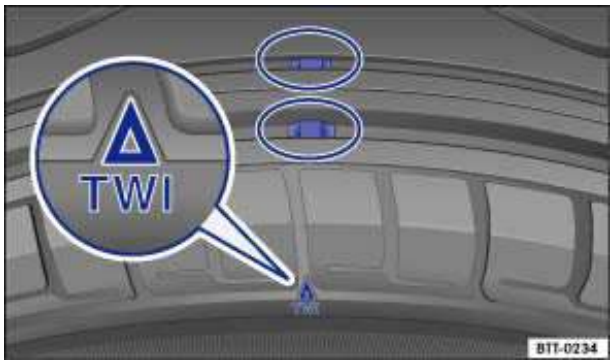

Fig. 124 Tread pattern: Wear indicator.

🕮 Please first read and note the introductory information and heed the WARNINGS ⚠..

Tread depth

Most driving situations require as much tread depth as possible and similar tread depth for the tires on the front and rear wheels. This is especially true when driving in winter weather, at low temperatures and under wet conditions ⇒ ⚠.

In most countries the legally permissible minimum tread depth is 1/16 in (1.6 mm), as measured in tread grooves next to the wear indicators. Please be sure to obey country-specific legal requirements.

Winter tires are no longer suitable for winter operation once the tread pattern is worn down to a depth of 3/16 in (4.8 mm).

The tread depth of new tires can differ between tire models and manufacturers because of the different design features and tread patterns.

Tread wear indicator (TWI) in the tire

The 1/16 in (1.6 mm) high wear indicators are molded into the bottom of the tread grooves of the original tires running across the treads ⇒ fig. 124. Several wear indicators are evenly spaced around the tire. Markings on the sides of the tires (for example “TWI” or symbols) show the position of the wear indicators.

Wear indicators show when the tires are worn down. The tires must be replaced no later than when the tread pattern is worn down to the wear indicators.

WARNING

Worn tires are dangerous and can cause loss of vehicle control including serious personal injuries.

- **Never drive a vehicle when the tread on any tire is worn down to the wear indicators, replace them sooner.**
- **Worn tires do not grip the road properly, especially on wet roads, increasing your risk of "hydroplaning" and loss of control.**
- **Worn tires reduce the ability of your vehicle to handle well in normal and difficult driving situations and increase braking distances and the risk of skidding.**

Tire wear and damage

Please first read and note the introductory information and heed the WARNINGS ⚠..

Wheel rim and tire damage is often difficult to see. Unusual **vibrations** or **pulling to one-side** can be an indication of tire damage ⇒ ⚠.

- If you suspect tire damage, immediately reduce speed!
- Check tires and wheel rims for damage.
- If a tire is damaged, do not drive any farther. Get expert assistance.
- If no external damage is visible, slowly and carefully drive to the nearest authorized Volkswagen dealer, authorized Volkswagen Service Facility, or other qualified workshop and have the vehicle checked.

Objects embedded in the tire

- If embedded objects have penetrated to the inside tire, do not remove them!
- Get professional help immediately.

Tire wear

Tire wear depends on several factors, including:

- Driving style.
- Unbalanced wheels.
- Wheel alignment.

Driving style – Fast cornering, hard acceleration and braking increase tire wear. If you experience increased tire wear under normal driving conditions, have the vehicle suspension checked by an authorized Volkswagen dealer or an authorized Volkswagen Service Facility.

Unbalanced wheels – The wheels on a new vehicle are balanced. When driving, however, various conditions can cause a wheel to become unbalanced. Unbalanced wheels can cause wear to the steering and suspension systems. Have all wheels rebalanced. A wheel must always be rebalanced if a new tire has been mounted.

Wheel alignment – Incorrect wheel alignment causes excessive and uneven tire wear, impairing vehicle safety. If you notice excessive or uneven tire wear, have the wheel alignment checked by an authorized Volkswagen dealer or an authorized Volkswagen Service Facility.

WARNING

Unusual vibrations or pulling to one side can indicate tire damage.

- **Reduce speed immediately and stop when it is safe to do so.**
- **Check tires and wheel rims for damage.**
- **Never drive with a damaged tire or rim. Get expert assistance instead.**
- **If no external damage is visible, slowly and carefully drive to the nearest authorized Volkswagen dealer, authorized Volkswagen Service Facility, or other qualified workshop and have the vehicle checked.**

Compact spare wheel

Fig. 125 In the luggage compartment: Compact spare wheel.

Please first read and note the introductory information and heed the WARNINGS ⚠..

Stowing the replaced wheel

- Lift up the floor covering and hang it on the hook beneath the luggage compartment cover.
- Put the wheel you took off the vehicle into the spare wheel well so that the center hole of the rim is aligned with the threaded pin.
- Turn the handwheel clockwise until the wheel is securely in place.
- If necessary, return the vehicle tool kit to its location in the luggage compartment.
- Unhook the floor covering and fold it back down onto the floor of the luggage compartment.
- Close the rear hatch.

Differences between the road tires and the compact spare

The compact spare is different in design from the road tires and must be used only in the event of a flat tire, only for a brief time, and only when driving with extra caution ⇒⚠.

Replace it with a tire matching the others on your vehicle as soon as possible.

Please heed the following:

- Do not drive faster than 50 mph (80 km/h)!
- Avoid full-throttle acceleration, hard braking and fast cornering!
- Do not use snow chains on the compact spare wheel..
- After installing the compact spare wheel, check the tire pressure as soon as possible.,..

Check the tire inflation pressure of the compact spare whenever you check the tire pressure of the road wheels, at least once a month. Inflate a **compact spare wheel** to the cold tire pressure specified for the compact spare on the tire pressure label or on a separate label for the compact spare, if there is one.

WARNING

Improper use of a compact spare wheel can cause loss of vehicle control, a crash or other accident, and serious personal injury.

- **Never use a compact spare wheel if it is damaged or worn down to the wear indicators.**
- **In some vehicles, the compact spare wheel is smaller than the original tire. A smaller compact spare wheel is identified with a sticker and the words “50 mph” or “80 km/h.” This is the maximum permissible speed when driving with this tire.**
- **Never drive faster than 50 mph (80 km/h) with a compact spare wheel. Avoid full-throttle acceleration, heavy braking, and fast cornering!**
- **Never drive more than 125 miles (200 km) if a compact spare wheel is installed on the front axle (drive axle).**
- **Replace the compact spare with a normal wheel and tire as soon as possible. Compact spare tires are designed for brief use only.**
- **Regularly check the U.S. DOT Tire Identification Number (TIN) to determine the age of the compact spare wheel.. Tires age even if they are not being used and can fail suddenly, especially at higher speeds.**
- **Tires that are more than 6 years old can only be used in an emergency and then with special care and at lower speeds.**
- **The compact spare wheel must always be secured with the wheel bolts provided by the factory.**
- **Never drive using more than one compact spare wheel.**
- **After installing the compact spare wheel, the tire pressure must be checked as soon as possible.,..**
- **Snow chains cannot be used on the compact spare wheel. If you must use snow chains and have a compact spare wheel mounted, move the compact spare wheel to the rear axle if a front tire has to be replaced. The tire taken off the rear axle can then be used to replace the flat front tire. Be sure you do not change the tire's direction of rotation. Install the snow chains on the full-sized road tire.**

NOTICE

When the spare wheel or compact spare is being used, the TPMS indicator light can come on after a couple of minutes..

If possible, attach the compact spare wheel or the wheel you took off the vehicle securely in the luggage compartment.

Tire labeling

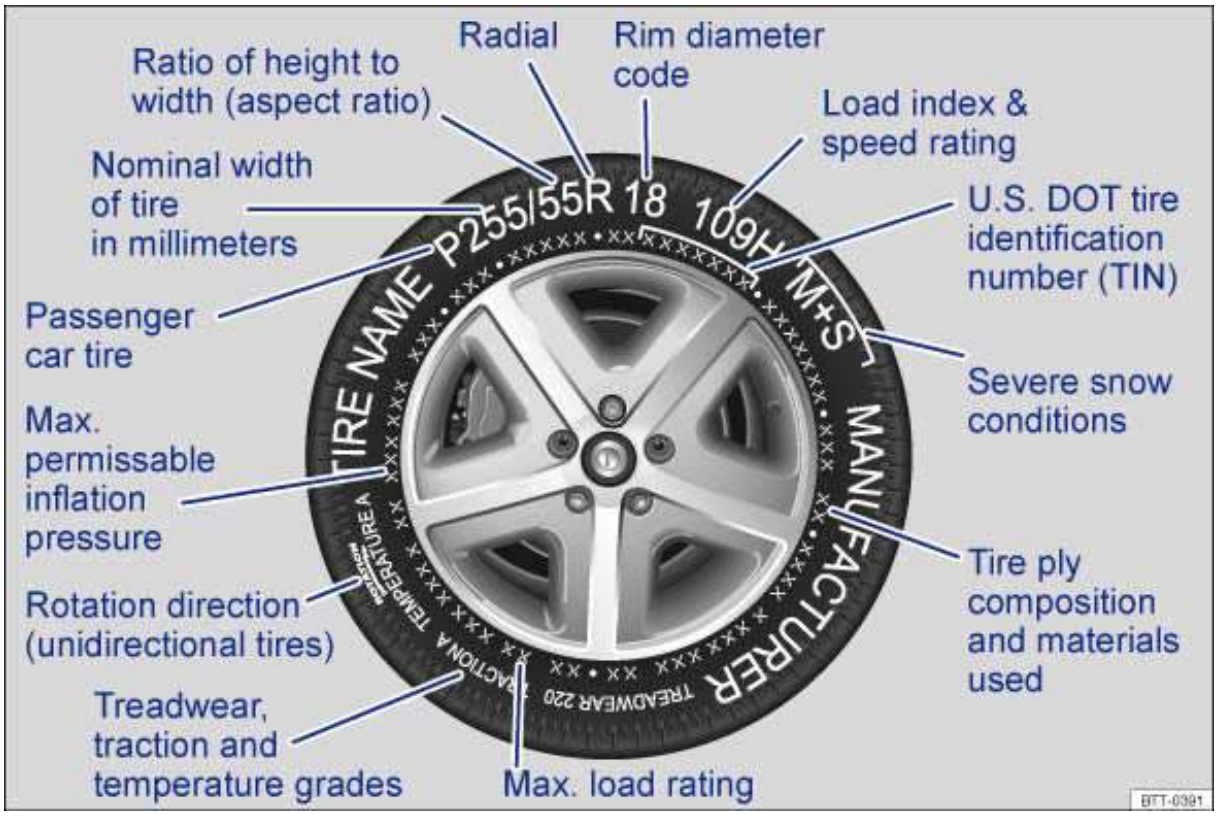

Fig. 126 International tire labeling.

Please first read and note the introductory information and heed the WARNINGS ⚠..

Knowing about tire specifications makes it easier to choose the correct replacement tires. Radial tires have specifications marked on the sidewall.

Tire labeling (example)	Meaning	
Brand, Logo	*Manufacturer*	
Tire name	Individual tire designation of the manufacturer.	
P215 / 55 R 18	Dimensions:	
	P	Tire application: Passenger car
	255	Nominal sidewall-to-sidewall width of tire in millimeters.
	55	Ratio of height to width (aspect ratio)
	R	Tire belt design letter code for radial.
	18	Rim diameter (in inches)
95 H	Load rating code. and speed rating code..	
XL	Indicates “reinforced” tire (heavy-duty)	
M+S *or* M/S	Indicates Mud and Snow capability (also M/S)..	
RADIAL TUBELESS	Tubeless radial tire.	

Tire labeling (example)	Meaning	
E4 ...	Labeling according to international regulations (E) including number of the approving country. The multi-digit approval number is listed next.	
DOT BT RA TY5 1709	Tire identification number (**TIN**)[4] – In some cases the manufacturing date is only on one side of the tire:	
	DOT	The tire complies with the requirements of the United States Department of Transportation, responsible for issuing safety standards.
	BT	Identification letter of the manufacturing site.
	RA	Manufacturer information regarding tire dimensions.
	TY5	Tire characteristics provided by the manufacturer.
	1709	Manufacturing date: 17th week in 2009.
TWI	Marks the position of the treadwear indicator..	
Made in Germany	Country of manufacture.	
MAX LOAD 615 KG (1356 LBS)	United States maximum load rating per wheel.	
MAX INFLATION 350 KPA (51 PSI)	United States maximum permissible inflation pressure.	
ROTATION	Rotation direction (unidirectional tires)	
SIDEWALL 1 PLY RAYON	Tire ply composition and materials used: 1 layer of rayon.	
TREAD 4 PLIES 1 RAYON + 2 STEEL + 1 NYLON	Tire tread composition and materials used: In this example there are 4 layers under the tread: 1 layer of rayon, 2 layers of steel belt and 1 layer of nylon.	
Consumer information regarding comparison to specified base tires (standardized test procedure).:		
TREADWEAR 220	Relative service life expectancy of the tire referenced to a U.S.-specific standard test.	
TRACTION A	Traction rating under wet conditions (AA, A,△or C).	
TEMPERATURE A	Temperature stability of the tire at increased test bench speeds (A,△or C).	
Additional numbers found on the tire could either be tire manufacturer internal labels or country-specific labels (such as for Brazil and China).		

Unidirectional tires

Unidirectional tires are designed to rotate only in one direction. Unidirectional tires have arrows on the sidewalls that show the direction of rotation. Make sure you mount the tire so that it rotates in the proper direction. The tire's performance with regard to hydroplaning, traction, noise, and wear is worse if it is not mounted in the proper direction of rotation.

If you have to mount a tire opposite to its proper direction of rotation, you must drive more carefully, since the tire is no longer being used as designed. This is particularly important on wet roads. You must replace or remount the tire as soon as possible in order to restore the correct direction of rotation.

[4] TIN represents the serial number of the tire.

Load rating code

The load index indicates the maximum permissible load per individual tire in pounds (kilograms).

91 1356 lbs (615 kg)

92 1388 lbs (630 kg)

93 1433 lbs (650 kg)

95 1521 lbs (690 kg)

97 1609 lbs (730 kg)

98 1653 lbs (750 kg)

99 1709 lbs (775 kg)

100 1763 lbs (800 kg)

101 1819 lbs (825 kg)

102 1874 lbs (850 kg)

103 1929 lbs (875 kg)

104 1984 lbs (900 kg)

110 2337 lbs (1060 kg)

Speed rating code letter

The speed rating code letter indicates the maximum permissible road speed of the tires.

P up to 93 mph (150 km/h)

Q up to 99 mph (160 km/h)

R up to 106 mph (170 km/h)

S up to 112 mph (180 km/h)

T up to 118 mph (190 km/h)

U up to 124 mph (200 km/h)

H up to 130 mph (210 km/h)

V up to 149 mph (240 km/h)

Z over 149 mph (240 km/h)

W up to 168 mph (270 km/h)

Y up to 186 mph (300 km/h)

Some tire manufacturers label tires with a maximum permissible road speed above 149 mph (240 km/h) with the letter combination “ZR.”

WARNING

Using incorrect or unmatched tires and/or wheels or improper tire and wheel combinations can lead to loss of control, collision and serious personal injury.

- **Always use tires, wheels and wheel bolts that meet the specifications of the original factory-installed tires or other combinations that have been specifically approved by the vehicle manufacturer.**
- **All 4 wheels must be fitted with radial tires of the same type, the same size (tread circumference), and the same tread pattern. Driving with different tires reduces vehicle handling and can lead to a loss of control.**
- **Never drive faster than the maximum speed for which the tires installed on your vehicle are rated because tires that are driven faster than their rated speed can fail suddenly.**
- **Overloading tires can cause heat build-up, sudden tire failure, including a blowout and sudden deflation and loss of control.**
- **Temperature grades apply to tires that are properly inflated and not over- or underinflated.**

Winter tires

Please first read and note the introductory information and heed the WARNINGS ⚠..

Winter tires improve the handling characteristics of your vehicle significantly when driving under wintry road conditions. Summer tires have less traction on snow and ice because of their design (width, rubber composition, tread design). Volkswagen strongly recommends that you always have winter tires or all-season tires installed on all 4 wheels on your vehicle, especially when winter road conditions are expected. Winter tires also improve the vehicle's braking performance and help reduce stopping distances during winter weather. Volkswagen recommends installing winter tires once temperatures are below +45 °F (+7 °C).

Winter tires are no longer suitable for winter driving once the **tread pattern** is worn down to a depth of 3/16 in (4.8 mm). In addition, winter tire performance decreases with **age** – independent of the tread profile depth.

When using winter tires:

- Obey state and country-specific legal requirements.
- Install winter tires on all 4 wheels.
- Use winter tires only under wintry road conditions.
- Only use winter tires with dimensions approved for the vehicle.
- Use only winter tires of the same tire belt design, the same dimensions (tread circumference), and the same tread design.
- Follow speed restrictions according to the winter tire's speed rating code letter ⇒⚠.

Speed restrictions

Winter tires are certified up to a top speed identified by speed rating code letters on the side wall..

In some vehicle models it is possible to set a speed warning in the menu in the instrument cluster display.

Top speed rating and tire inflation pressure for **winter tires** depend on the engine installed in your vehicle. Be sure to ask you authorized Volkswagen dealer or authorized Volkswagen Service Facility about the maximum permissible speed and the required tire inflation pressure for the winter tires that you plan to use.

WARNING

Driving faster than the maximum speed for which the winter tires on your vehicle were designed can cause sudden tire failure including a blowout and sudden deflation, loss of control, crashes and serious personal injuries.

- **Winter tires have a maximum speed rating that may be lower than your vehicle's maximum speed.**
- **Never drive faster than the maximum speed for which the winter tires installed on your vehicle are rated because tires that are driven faster than their rated speed can fail suddenly.**
- **Never exceed the maximum load rating for the winter tires installed on your vehicle.**

Install summer tires promptly in the spring. Summer tires offer better handling characteristics for temperatures above +45 °F (+7 °C). They are quieter, do not wear as quickly, and reduce fuel consumption.

The Tire Pressure Monitoring System must be recalibrated using the SET button whenever you remove and remount or change any wheel or tire on the vehicle, even if the reinstalled or replacement wheels and tires are identical to those that were removed and even if the tire pressure does not change.

If necessary, ask your authorized Volkswagen dealer or authorized Volkswagen Service Facility about permissible winter tire dimensions.

Snow chains

Please first read and note the introductory information and heed the WARNINGS ..

Obey local regulations as well as the applicable speed limits when driving with snow chains.

Snow chains improve forward motion, traction and braking characteristics under wintry conditions.

Snow chains may be used **only on the front wheels** and only in tire and wheel combinations that have been approved by Volkswagen.

Please contact your authorized Volkswagen dealer or authorized Volkswagen Service Facility about appropriate wheel, tire and snow chain dimensions.

If possible, use only chains with low profile links that are not thicker than 37/64 in. (15 mm) including the tensioner.

Remove center hubcaps and decorative rim rings before installing snow chains ⇒. However, for safety reasons, caps must be installed on the wheel bolts. These are available from authorized Volkswagen dealers and authorized Volkswagen Service Facilities.

Compact spare wheel

For technical reasons, snow chains cannot be used on the compact spare..

If you must use snow chains and have a compact spare wheel mounted, move the compact spare wheel to the rear axle if a front tire has to be replaced. The tire taken off the rear axle can then be used to replace the flat front tire. Be sure to install the unidirectional tires so that they will run in the proper direction. Volkswagen recommends installing the snow chains before mounting the wheel to the vehicle.

WARNING

Using the wrong snow chains or installing snow chains improperly can cause accidents and severe personal injuries.

- **Always use the proper snow chains.**
- **Follow the installation instructions provided by the snow chain manufacturer.**
- **Never exceed the permissible speed limit when driving with snow chains.**

NOTICE

- **Remove snow chains when roads are free of snow. Otherwise, the chains can damage the tires, impair vehicle handling and can be quickly worn down.**
- **Snow chains can scratch or damage wheel rims if they have direct contact with the rims. Volkswagen recommends using coated snow chains.**

Glossary of tire and loading terminology

Please first read and note the introductory information and heed the WARNINGS ⚠..

Accessory weight

The combined weight (in excess of those standard items which may be replaced) of automatic transmission, electro-mechanical power steering, power brakes, power windows, power seats, radio, and heater, to the extent that these items are available as factory-installed equipment (whether installed or not).

Aspect ratio

The ratio of sidewall height to tire width, expressed as a percentage. A number of 70 (0.7:1 or 70%) or lower indicates a low-profile tire with a shorter sidewall for improved steering response and better overall handling on dry pavement.

Bead

The part of a tire made of steel wires, wrapped or reinforced by ply cords, with the shape and structure to ensure proper fit to the wheel rim.

Bead separation

A breakdown of the bond between components in the bead.

Carcass

The tire structure, except tread and sidewall rubber which, when inflated, bears the load.

Chunking

The breaking away of pieces of the tread or sidewall.

Cord

The strands of material forming the plies in the tire.

Cord separation

The parting of cords from adjacent rubber compounds.

Cracking

Any parting within the tread, sidewall, or inner liner of the tire extending to cord material.

Cold tire inflation pressure

The tire pressure recommended by the vehicle manufacturer for a tire of a specified size that has not been driven for more than a couple of miles (kilometers) at low speeds in the 3 hour period before the tire pressure is measured or adjusted.

Curb weight

The weight of a motor vehicle with standard equipment including the maximum capacity of fuel, oil, and coolant, air conditioner, and additional weight of optional equipment.

Extra load tire

A tire designed to operate at higher loads and at higher inflation pressures than the corresponding standard tire.

Gross Axle Weight Rating (GAWR)

The load-carrying capacity of a single axle system, measured where the tire contacts the ground.

Gross Vehicle Weight Rating (GVWR)

The maximum loaded weight of the vehicle.

Groove

The space between 2 adjacent tread ribs.

Load rating (code)

The maximum load that a tire is rated to carry for a given inflation pressure. You may not find this information on all tires because it is not required by law.

Maximum load rating

The load rating for a tire at the maximum permissible inflation pressure for that tire.

Maximum loaded vehicle weight

The total of:

- Curb weight.
- Accessory weight.
- Vehicle capacity weight.
- Production options weight.

Maximum (permissible) inflation pressure

The maximum cold inflation pressure to which a tire may be inflated. Also called “maximum inflation pressure.”

Normal occupant weight

Means 150 lbs (68 kilograms) times the number of occupants seated in the vehicle up to the total seating capacity of your vehicle.

Occupant distribution

The placement of passengers in a vehicle.

Outer diameter

The diameter of a new, properly inflated tire.

Overall width

Total width measured at the exterior sidewalls of an inflated tire, including the additional width of labeling, decorations, or protective bands or ribs.

Passenger car tire

A tire intended for use on passenger cars, multipurpose passenger vehicles, and trucks, that have a gross vehicle weight rating (GVWR) of 10,000 pounds or less.

Ply

A layer of rubber-coated parallel cords.

Ply separation

A parting of rubber compound between adjacent plies.

Pneumatic tire

A mechanical device made of rubber, chemicals, fabric, and steel or other materials, that, when mounted on an automotive wheel, provides the traction and contains the gas or fluid that sustains the load.

Production options weight

The combined weight of installed regular production options weighing over 5 lbs (2.3 kg) more then the standard items they replace, and not previously considered as curb weight or accessory weight. These include, for example, heavy-duty brakes, ride levelers, roof rack, heavy-duty battery, and special trim.

Radial ply tires

A pneumatic tire in which the ply cords that extend to the beads are laid at substantially 90 degrees to the centerline of the tread.

Recommended inflation pressure

The tire pressure recommended by the vehicle manufacturer for a tire of a specified size that has not been driven for more than a couple of miles (kilometers) at low speeds in the 3 hour period before the tire pressure is measured or adjusted.

Reinforced tire

A tire designed to operate at higher loads and at higher inflation pressures than the corresponding standard tire.

Rim

The outer edge of a wheel upon which the tire beads are seated.

Rim diameter

The nominal diameter of the wheel's tire bead seating surface. If you change your wheel size, to wheels of a different diameter, you will have to purchase new tires to match the new wheels.

Rim size

Designation means rim diameter and width.

Rim type designation

The industry or manufacturer's designation for a rim by style or code.

Rim width

The nominal distance between wheel rim flanges.

Section width

The linear distance between the exteriors of the sidewalls of an inflated tire, excluding elevations due to labeling decoration, or protective bands.

Sidewall

The portion of a tire between the bead and the tread.

Sidewall separation

The parting of the rubber compound from the cord material in the sidewall.

Speed rating (letter code)

A standardized letter code indicating the maximum speed at which a tire is designed to be driven for extended periods of time. The ratings range from 93 mph or 150 km/h (“P”) to 186 mph or (300 km/h) “Y”.

The speed rating letter code, where applicable, is molded on the tire sidewall., *Tire labeling*. You may not find this information on all tires because it is not required by law.

Tire Pressure Monitoring System

A system that detects when at least one of a vehicle's tires is underinflated and illuminates a low tire-pressure warning light.

Tread

The portion of a tire that normally touches the road.

Tread rib

A tread section running circumferentially around a tire.

Tread separation

Tire failure caused by the tread pulling away from the tire carcass.

Tread wear indicators (TWI)

Raised areas within the main tread grooves that show, visually, when tires are worn and near the end of their useful life..

Uniform Tire Quality Grading (UTQG)

A tire information system developed by the U.S. National Highway Traffic Safety Administration (NHTSA) that is designed to help buyers compare tires. UTQG is not a safety rating, nor is it a guarantee that a tire will last for a certain number of miles or perform a certain way. It gives tire buyers more information to compare with factors such as price, brand loyalty and dealer recommendations. Under UTQG, tires are graded by the tire manufacturers in 3 areas: tread wear, traction and temperature resistance. UTQG information is molded into the tire sidewalls.

U.S. DOT Tire Identification Number (TIN)

A tire's serial number. It begins with the letters “DOT” (“Department of Transportation”) and indicates that the tire meets all federal standards. The next 2 numbers or letters indicate the plant where the tire was manufactured. The last 4 numbers represent the week and year of manufacture.

For example, the numbers 1709 mean that the tire was produced in the 17th week of 2009. Any other numbers are marketing codes used by the tire manufacturer. This information is used to help identify affected consumers if a tire defect requires a recall.

Vehicle capacity weight

The total rated cargo, luggage and passenger load. Passenger load is 150 lbs (68 kilograms) times the vehicle's total seating capacity (as listed on the label inside the driver door).

Vehicle maximum load on the tire

The load on an individual tire that is determined by taking each axle's share of the maximum loaded vehicle weight (GAWR) and dividing by 2.

Vehicle normal load on the tire

The load on an individual tire that is determined by taking each axle's share of the curb weight, accessory weight, and normal occupant weight (distributed according to the table below) and dividing by 2.

Wheel size designation

Wheel rim diameter and width.

Occupant loading and distribution for vehicle normal load for various designated seating capacities

Designated seating capacity, number of occupants	Vehicle normal load, number of occupants	Occupant distribution in a normally loaded vehicle
2, 3, or 4	2	2 in front

Tires and vehicle load limits

Please first read and note the introductory information and heed the WARNINGS ⚠..

There are limits to the load any vehicle or any tire can carry. A vehicle that is overloaded will not handle well and is more difficult to stop. Overloading can damage important parts of the vehicle. Overloading can also lead to blowout, sudden loss of pressure or other tire failure that can cause loss of control.

Your safety and the safety of your passengers depends on making sure that load limits are not exceeded. Vehicle load includes everybody and everything in and on the vehicle. These load limits are technically referred to as the vehicle's **Gross Vehicle Weight Rating (GVWR)**.

The GVWR includes the weight of the basic vehicle, all factory-installed and other accessories, a full tank of fuel, oil, coolant and other fluids plus maximum load. The maximum load includes the number of passengers that the vehicle is intended to carry (seating capacity) with an assumed weight of 150 lbs (68 kg) for each passenger at a designated seating position and the total weight of any luggage in the vehicle. If you tow a trailer, the weight of the trailer hitch and the tongue weight of the loaded trailer must be included as part of the vehicle weight. At altitudes above 3000 ft (1000 m), combined towing weight (vehicle plus trailer) must be reduced by 10% for every 3000 ft (1000 m).

The Gross Axle Weight Rating (GAWR) is the maximum load that can be carried at each of the vehicle's 2 axles (by the front or rear tires). GVWR and GAWR are listed on the safety compliance label on the driver door jamb. Your vehicle has 4 total seating positions: 2 in the front and 2 in back. Each seating position has a safety belt. Because there is an upper limit to your vehicle's total weight (GVWR), the weight of whatever is being carried (including the weight of a trailer hitch and the tongue weight of the loaded trailer) is also limited. More passengers, or passengers who are heavier than the assumed 150 lbs (68 kg), mean that less weight can be carried as luggage or other cargo. The tire pressure label on your Volkswagen also lists the maximum combined weight of all of the occupants and luggage or other cargo that the vehicle can carry.

⚠ WARNING

Overloading a vehicle can cause loss of vehicle control, a crash or other accident, serious personal injury, and even death.

- **Carrying more weight than your vehicle was designed to carry will prevent the vehicle from handling properly and increase the risk of the loss of vehicle control.**
- **The brakes on a vehicle that has been overloaded may not be able to stop the vehicle in a safe distance.**
- **Tires on a vehicle that has been overloaded can fail suddenly, including a blowout and sudden deflation, causing loss of control and a crash.**
- **Always make sure that the total load being transported – including the weight of a trailer hitch and the tongue weight of a loaded trailer – does not make the vehicle heavier than the vehicle's Gross Vehicle Weight Rating.**

Determining the correct load limit

🕮 Please first read and note the introductory information and heed the WARNINGS ⚠..

Never overload tires. The following example illustrates how to determine the combined weight of all vehicle occupants and luggage or other vehicle payloads. Never overload the vehicle!

	Steps for Determining Correct Load Limit:
1.	Locate the statement “THE COMBINED WEIGHT OF OCCUPANTS AND CARGO SHOULD NEVER EXCEED XXX KG OR XXX LBS” on your vehicle's placard (tire inflation pressure label)..
2.	Determine the combined weight of the driver and passengers that will be riding in your vehicle.
3.	Subtract the combined weight of the driver and passengers from XXX kg or XXX lbs.
4.	The resulting figure equals the available amount of cargo and luggage load capacity. For example, if the “XXX” amount equals 1400 lbs. and there will be five 150 lb. passengers in your vehicle, the amount of available cargo and luggage load capacity is 650 lbs. (1400-750 (5 x 150) = 650 lbs.)
5.	Determine the combined weight of luggage and cargo being loaded on the vehicle. That weight may not safely exceed the available cargo and luggage load capacity calculated in Step 4.
6.	If your vehicle will be towing a trailer, load from your trailer will be transferred to your vehicle. Consult this Manual to determine how this reduces the available cargo and luggage capacity of your vehicle.
	Check the tire sidewall to determine the load index specified for the tire.

Parts, accessories, repairs and modifications

Introduction

In this section you'll find information about:

Break-in period

Parts and accessories

Operating fluids and equipment

CB radio equipment

Notice about data recorded by vehicle control modules

Using a mobile phone in a motor vehicle when it is not connected to the vehicle telephone antenna - some important things to know

More information:

- Safety belts.
- Airbag system.
- Roof rack.
- 12 Volt sockets.
- Braking, stopping and parking.
- Starting assistance systems.
- Cruise control system (CCS).
- Tire Pressure Monitoring System.
- Preparations for working in the engine compartment.
- Engine oil.
- Engine coolant.
- Vehicle battery.
- Exterior care and cleaning.
- Interior care and cleaning.
- Consumer information.
- ⇒ Booklet *Radio*
- ⇒ Booklet *Navigation system*
- ⇒ Booklet *Mobile Phone Package*

WARNING

Inappropriate spare parts and accessories as well as improperly performed work, modifications and repairs can cause vehicle damage, accidents and serious personal injuries.

- **Volkswagen strongly recommends to only use accessories approved by Volkswagen and Genuine Volkswagen Parts®. These parts and accessories have been evaluated by Volkswagen for their suitability, reliability and safety.**
- **Have repairs and vehicle modifications performed by an authorized Volkswagen dealer or authorized Volkswagen Service Facility. Authorized Volkswagen dealers and authorized Volkswagen Service Facilities have the required tools, diagnostic equipment, repair information, and trained personnel to properly replace any airbag in your vehicle and assure system effectiveness in a crash.**
- **Only install parts on the vehicle that are consistent with factory-installed parts with respect to design and characteristics.**
- **Never store, mount, or attach objects, such as cup holders or phone cradles, on or next to the airbag module covers or within the airbags deployment zones.**
- **Only use wheel rim/tire combinations approved by Volkswagen for the respective vehicle type.**

Break-in period

Please first read and note the introductory information and heed the WARNINGS ..

Note applicable requirements for breaking in new parts.

Breaking in a new engine

A new engine must be carefully broken in during the first 1000 miles (1600 kilometers). During the first few hours of driving, the engine's internal friction is higher than later when all moving parts have been broken in.

Engine life is influenced by how you drive the vehicle for the first 1000 miles (1600 km). Even afterwards, driving at moderate engine speeds, especially when the engine is cold, will tend to reduce engine wear and help the engine to last longer and go farther. But do not drive at an excessively low engine speed, either. Always downshift if the engine is not running smoothly. **For the first 600 miles (1000 km):**

- Do not use full throttle.
- Don't let the engine speed get above 2/3 of the maximum speed.
- Do not tow a trailer.

From 600 to 1000 miles (1000 to 1600 km): Speed may *gradually* be increased to maximum permissible road and engine speed.

New tires and brake pads

- New tires and replacement tires.
- Brakes.

Breaking in a new engine gently will increase service life and reduce oil consumption.

Parts and accessories

Please first read and note the introductory information and heed the WARNINGS ⚠..

Volkswagen recommends that you consult an authorized Volkswagen dealer or authorized Volkswagen Service Facility before purchasing accessories, spare parts or other equipment. Always do so if you want to install additional accessories or replace parts. Your authorized Volkswagen dealer or authorized Volkswagen Service Facility can provide information about legal requirements and factory-recommended accessories, spare parts, and other equipment.

⚠ WARNING

Improper vehicle modifications and repairs affect the performance of the airbag system and cause malfunctions and severe personal injuries.

- **Never store, mount, or attach objects, such as cup holders or phone cradles, on or next to the airbag module covers or within the airbag deployment zones.**
- **Objects on or near the surface where airbags are located can come loose and cause serious personal injury if the airbag deploys.**

Operating fluids and equipment

Please first read and note the introductory information and heed the WARNINGS ⚠..

Operating fluids and parts that wear out with use (such as timing belts, tires, engine coolants, engine oils, spark plugs, and vehicle batteries) are constantly being improved. For this reason, it is important to have operating fluids changed and wearing parts replaced by an authorized Volkswagen dealer or authorized Volkswagen Service Facility. Authorized Volkswagen dealers and authorized Volkswagen Service Facilities are always up-to-date regarding new developments and changes.

⚠ WARNING

Improper use of operating fluids and equipment can cause accidents, serious personal injuries, burns and/or poisoning.

- **Always store vehicle care products in a safe place in original containers that are securely closed.**
- **To reduce the risk of poisoning, never use empty food or beverage containers that might mislead someone into drinking from them.**
- **Always keep vehicle care products out of the reach of children.**
- **Always read and heed all the instructions and all WARNINGS on the package before using vehicle care products.**
- **When using products that give off harmful fumes, always work outdoors or in a well ventilated area.**
- **Never use fuel, turpentine, engine oil, nail polish remover or other volatile fluids for vehicle care. They are poisonous and highly flammable. They could cause fires and explosions!**

NOTICE

- **Only refill with suitable operating fluids. When changing or topping off fluids, make sure that you pour the fluids into the correct reservoirs. Adding incorrect fluids will cause serious malfunctions and engine damage! Under no circumstances should you mix up operating fluids. Otherwise serious malfunctions and engine damage can occur!**

- **Accessories and other things installed in front of the cooling air intakes impair the efficiency of the engine coolant. The engine can overheat under high outside temperatures or under high engine loads!**

Leaking operating fluids can pollute the environment. Collect leaking operating fluids in suitable containers and dispose of them properly in accordance with applicable environmental laws and regulations.

CB radio equipment

Please first read and note the introductory information and heed the WARNINGS ..

An outside antenna is required for the operation of radio equipment in the vehicle.

Volkswagen approves the operation of radio equipment in the vehicle under the following conditions:

- Professionally installed outside antenna.
- Maximum transmission power 10 watts.

Optimal device coverage can only be assured when an outside antenna is properly installed.

Consult with an authorized Volkswagen dealer or authorized Volkswagen Service Facility if you would like to use a radio with transmission power higher than 10 watts. Authorized Volkswagen dealers and authorized Volkswagen Service Facilities are familiar with technical possibilities for the installation of aftermarket equipment or can advise you where equipment can be professionally installed. Obey legal requirements as well as instructions and operational guidelines provided by the equipment manufacturer in the operating manuals for the radio equipment.

WARNING

Loose or improperly installed radio equipment can be thrown around the passenger compartment during sudden driving or braking maneuvers or a crash and cause serious personal injuries.

- **Always install radio equipment properly and securely outside of the airbag deployment zones.**

WARNING

Using a radio device in the vehicle without connection to an outside antenna can exceed electromagnetic radiation thresholds. This also applies if the outside antenna is not installed properly.

- **Use a CB radio in the vehicle only with a professionally installed and connected outside antenna.**

Notice about data recorded by vehicle control modules

Please first read and note the introductory information and heed the WARNINGS ..

Your vehicle is **not equipped** with an Event Data Recorder (EDR).

EDRs, sometimes called “crash recorders,” are installed by some manufacturers for the express purpose of capturing data for retrieval after an accident or crash event.

Some state laws restrict the retrieval or downloading of data stored by EDRs installed in a vehicle for the express purpose of retrieving data after an accident or crash event without the owner's consent.

Although your vehicle is not equipped with an EDR, it is equipped with a number of electronic control modules for various vehicle systems, such as engine management, emission control, airbags, and safety belts.

These electronic control modules also record data during normal vehicle operation for diagnostic and repair purposes. Their recording capability is limited to data (no sound is recorded). Only a small amount of data is actually recorded over a very limited period of time, or stored when a system fault is detected by a control module. Some of the data stored may relate to vehicle speed, direction, or braking, as well as restraint system use and performance in the event of a crash. Stored data can only be read and downloaded with special equipment.

Using a mobile phone in a motor vehicle when it is not connected to the vehicle telephone antenna - some important things to know

Please first read and note the introductory information and heed the WARNINGS ⚠..

Mobile or cellular telephones send and receive radio waves, sometimes called “radiofrequency energy” (RF energy), both when they are being used and when they are in standby mode. Current scientific literature indicates that radio waves that exceed a certain level can have effects on the human body. Limits and guidelines have been established by governmental authorities and international committees in an effort to keep the electromagnetic radiation from cellular phones at levels that will not cause health problems. However, there is no scientifically based proof that wireless phones are absolutely safe.

Therefore some experts recommend a precautionary approach regarding the use of cellular phones by taking measures that lower the personal exposure to electromagnetic fields. When using a cellular telephone inside a motor vehicle without a proper connection to an integrated vehicle telephone antenna, the personal exposure to electromagnetic fields will be higher than when using the cellular telephone while properly connected to an integrated or other outside vehicle telephone antenna.

Your vehicle may be equipped with an optional hands-free system that will permit many of the features of compatible Bluetooth® enabled cellular telephones to be used for greater convenience and is consistent with the laws of an increasing number of states and localities that prohibit the use of cellular telephones without some kind of hands-free device.

The hands-free system in your vehicle can be used with certain cell phones that are connected by wire and hardware connector or via compatible Bluetooth® enabled phones with a cradle that is designed to fit your cellular telephone. The special cradle offers several advantages: The phone cradle must be safely secured to the base plate. Your phone is firmly attached to the instrument panel and is within reach at all times. Placing the phone in its cradle permits it to be charged, but more importantly connects the mobile phone to the vehicle's outside antenna. A cellular telephone that is properly connected to the integrated or other outside vehicle telephone antenna will lower the personal exposure to electromagnetic fields. You should also experience a better quality of service. Although a cellular telephone can be used inside your vehicle without a cradle, the phone will not be securely attached to the vehicle, will not be charged through the cradle wiring, and more importantly will not be connected to the vehicle's integrated telephone antenna. The mobile phone will also not be recharged. You might also experience more dropped calls and an overall impaired quality of the connection.

Therefore we strongly recommend that you use your cellular telephone in your vehicle only when it is properly attached to an appropriate cradle mounted on a base plate on the instrument panel.

Because of the large number and variety of cellular telephones on the market and the frequency with which new models are introduced, Volkswagen does not offer cradles for cellular telephones. Please check with the manufacturer of the cellular telephone that you plan to use.

Bluetooth® is a registered trademark of Bluetooth® SIG, Inc.

WARNING

A mobile phone on the seat, instrument panel or in other places can be thrown around the inside of the vehicle during a sudden braking maneuver, a crash or other accident and injure vehicle occupants.

- **Never place or attach accessories or other objects (such as cup holders, telephone brackets, note pads, navigation systems, large, heavy or bulky objects) on the doors, on the windshield, over or near the area marked "AIRBAG" on the steering wheel, instrument panel, backrests or between these areas and the occupant. Such objects could cause serious injury in a collision, especially if an airbag inflates.**

WARNING

Using a mobile phone or CB radio inside the vehicle without a properly installed and separate outside antenna can be dangerous to your health and that of your passengers because the electromagnetic radiation energy that cell phones and CB radios emit may be above established limits. This also applies if the outside antenna is not installed properly.

- **Always keep the mobile phone antenna at least 8 in. (20 cm) away from pacemakers. Heart specialists advise that cell phones can adversely affect the way pacemakers work.**
- **Never carry a mobile phone that is switched on in the breast pocket directly over a pacemaker.**
- **If you suspect there may be interference with a pacemaker or other medical device, switch the mobile phone off immediately.**

Consumer information

Introduction

In this section you'll find information about:

Stickers and labels
Operating your vehicle outside of the United States and Canada
Radio antenna and reception
UTQG classification
Volkswagen service information

More information:

- Exterior views.
- Starting assistance systems.
- Parts, accessories, repairs and modifications.
- ⇒ Booklet *Warranty and Maintenance*

WARNING

Improper vehicle care and use, as well as improper changes to the vehicle, increase the risk of accidents and injuries.

- **Obey all applicable legal requirements.**
- **Read your Owner's Manual and heed all WARNINGS.**

NOTICE

Improper vehicle care and use, as well as improper changes to the vehicle, can result in damage to the vehicle.

- **Obey all applicable legal requirements.**
- **Perform service according to the specifications in the ⇒ Booklet *Warranty and Maintenance*.**
- **Read your Owner's Manual and heed all WARNINGS.**

Stickers and labels

Please first read and note the introductory information and heed the WARNINGS ⚠..

Factory-installed safety certificates, stickers and signs containing important information regarding vehicle operation can be found in the engine compartment and on certain vehicle components, such as inside the fuel filler flap, on the passenger sun visor, in the driver door jamb or on the luggage compartment floor.

- Do not remove, alter or render unusable or illegible any safety certificates, stickers and labels.
- If vehicle components bearing safety certificates, stickers, or labels are replaced, make certain that the firm doing the work attaches new conforming certificates, stickers, or labels to the same part of the new components.

Safety Compliance Certification Label

A safety certificate affixed to the door jamb in the driver door confirms that at time of production all necessary safety standards and requirements of the traffic safety agency of the respective country were met. The month and year of production as well as the vehicle identification number may be listed as well.

Radiator fan and high voltage warning sticker

A warning sticker about the radiator fan and the high voltage of the electrical system is located in the engine compartment next to the engine hood release. The vehicle ignition system complies with the Canadian standard ICES-002.

Operating your vehicle outside of the United States and Canada

Please first read and note the introductory information and heed the WARNINGS ⚠..

Government regulations in the United States and Canada require that automobiles meet specific emission regulations and safety standards. Therefore, vehicles built for the U.S. and Canada differ from vehicles sold in other countries.

If you plan to take your vehicle outside the continental limits of the United States or Canada, there is the possibility that:

- Unleaded fuels for vehicles with catalytic converters may not be available.
- Ultra Low Sulphur Diesel (ULSD) fuel No. 2 that your diesel engine requires may not be available.
- Fuel may have a considerably lower octane rating and may cause engine damage.
- Service may be inadequate due to lack of proper service facilities, tools or testing equipment.
- Replacement parts may not be readily available.
- DVD navigation systems for vehicles built for the United States and Canada will not necessarily work in Europe, and may not work in other countries outside of North America.

NOTICE

Volkswagen is not responsible for mechanical damage that may result from substandard fuel or service or the unavailability of Genuine Volkswagen parts.

- **Volkswagen is not responsible if the vehicle does not meet the respective legal requirements in other countries and continents.**

Radio antenna and reception

Please first read and note the introductory information and heed the WARNINGS ⚠..

If the radio and navigation systems were installed at the factory, the radio antenna may be installed in different locations in the vehicle:

- On the inside of the rear window with the rear window defroster,
- On the inside of the rear side windows,
- On the inside of the windshield,
- On the vehicle roof.

Antennas on the insides of windows are thin wires.

NOTICE

Antennas installed on the insides of windows can be damaged by abrasive objects or by corrosive or acidic cleaning agents or other chemicals. Do not place any stickers on the windshield-integrated antenna and never clean the antenna with corrosive or acidic cleaning agents or other chemicals.

If electrical devices are operated close to the integrated windshield antenna, interference with AM radio reception may occur.

UTQG classification

Please first read and note the introductory information and heed the WARNINGS ..

Uniform Tire Quality Grading (UTQG): Quality grades can be found where applicable on the tire sidewall between the tread shoulder and maximum section width. Example:

- Treadwear (number)
- Traction: AA, A,B or C
- Temperature: A, B or C

For example: Treadwear 200, Traction AA, Temperature A.

All passenger car tires must conform to Federal Safety Requirements in addition to these grades.

Treadwear

The treadwear grade is a comparative rating based on the wear rate of the tire when tested under controlled conditions on a specified government test course.

For example, a tire graded 150 (Treadwear-value 150) would wear one-and-one-half (1 1/2) times as well on the government course as a tire graded 100.

The relative performance of tires depends upon the actual conditions of their use, however, and may depart significantly from the norm due to variations in driving habits, service practices and differences in road characteristics and climate.

Traction

The traction grades, from highest to lowest, are AA, A, B and C. Those grades represent the tire's ability to stop on wet pavement as measured under controlled conditions on specified government test surfaces of asphalt and concrete. A tire marked C may have poor traction performance ⇒.

Temperature

The temperature grades are A (the highest), B, and C representing the tire's resistance to the generation of heat, and its ability to dissipate heat when tested under controlled conditions on a specified indoor laboratory test wheel.

Sustained high temperature can cause the material of the tire to degenerate and reduce tire life, and excessive temperature can lead to sudden tire failure.

The grade C corresponds to a level of performance which all passenger car tires must meet under the Federal Motor Vehicle Safety Standard No. 109. Grades B and A represent higher levels of performance on the laboratory test wheel than the minimum required by law ⇒.

WARNING

The traction grade assigned to this tire is based on straight-ahead braking traction tests, and does not include acceleration, cornering, hydroplaning or peak traction characteristics.

WARNING

The temperature grade for this tire is established for a tire that is properly inflated and not overloaded. Excessive speed, underinflation or excessive loading, either separately or in combination, can cause heat buildup and possible tire failure.

Volkswagen service information

Please first read and note the introductory information and heed the WARNINGS ..

Volkswagen service information is published as soon as possible after model introduction.

To order service information contact:

Volkswagen Technical Literature Ordering Center

www.vw.techliterature.com

WARNING

Improperly performed repairs and modifications can cause vehicle damage and malfunctions, and can impair the efficiency of driver assistance systems and the airbag system. This can lead to accidents and severe personal injuries.

- **Have repairs and vehicle modifications performed by an authorized Volkswagen dealer or an authorized Volkswagen Service Facility.**

Declaration of Compliance, Telecommunications and Electronic Systems

Radio Frequency Devices and Radiocommunication Equipment User Manual Notice.

Radio-based equipment

- Mobile Phone Package
- Electronic immobilizer
- Remote control vehicle key
- Keyless Access locking and starting system

These devices comply with:

FCC Part 15.19

These devices comply with **Part 15 of the FCC Rules**. Operation is subject to the following 2 conditions:

(1) This device may not cause harmful interference, and

(2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Part 15.21

CAUTION:

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

These devices comply with **RSS-210 of Industry Canada**.

Operation is subject to the following 2 conditions:

(1) this device may not cause interference, and

(2) this device must accept any interference, including interference that may cause undesired operation of the device.

The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment.

Applicable only in the United States

Reporting Safety Defects

If you believe that your vehicle has a defect which could cause a crash or could cause injury or death, you should immediately inform the National Highway Traffic Safety Administration (NHTSA) in addition to notifying Volkswagen of America, Inc. 3800 Hamlin Road, Auburn Hills, MI 48326.

If NHTSA receives similar complaints, it may open an investigation, and if it finds that a safety defect exists in a group of vehicles, it may order a recall and remedy campaign. However, NHTSA cannot become involved in individual problems between you, your dealer, or Volkswagen of America, Inc.

To contact NHTSA, you may call the Vehicle Safety Hotline toll-free at 1-888-327-4236 (TTY: 1-800-424-9153);

go to http://www.nhtsa.gov;

or write to:

Administrator
NHTSA
1200 New Jersey Avenue, SE.
Washington, D.C. 20590

You can also obtain other information about motor vehicle safety from
http://www.safercar.gov.

Applicable only in Canada

Reporting Safety Defects

If you live in Canada and you believe that your vehicle has a defect that could cause a crash, injury or death, you should immediately inform Transport Canada, Defect Investigations and Recalls. You should also notify Volkswagen Canada, Inc.

Transport Canada

Canadian customers who wish to report a safety-related defect to Transport Canada, Defect Investigations and Recalls, may either call Transport Canada toll-free at

Phone: 1-800-333-0510 or
1-819-994-3328 (Ottawa region and from other countries)

or contact Transport Canada by mail at:

Transport Canada
Motor Vehicle Safety Investigations Laboratory
80 Noel Street
Gatineau, QC
J8Z 0A1

For additional road safety information, please visit the Road Safety website at:

http://www.tc.gc.ca/eng/roadsafety/menu.htm

Engine control and emission control system

Introduction

In this section you'll find information about:

Indicator lights
Catalytic converter
Diesel particulate filter

More information:

- Shifting gears.
- Refueling.
- Fuel.
- Engine oil.
- Vehicle battery.
- Notice about data recorded by vehicle control modules.
- Towing.

WARNING

The vehicle exhaust system and the catalytic converter or diesel particulate filter get very hot. This can cause a fire and serious personal injury.

- **Never park where parts of the hot exhaust system and catalytic converter could ignite flammable materials, such as brush, leaves, dry grass, spilled fuel, etc.**
- **Never apply additional undercoating or rust proofing on or near the exhaust manifold, exhaust pipes, catalytic converter, diesel particulate filter, or heat shields.**

WARNING

California Proposition 65 Warning

- **Engine exhaust, some of its constituents, and certain vehicle components contain or emit chemicals known to the State of California to cause cancer and birth defects and reproductive harm. In addition, certain fluids contained in vehicles and certain products of component wear contain or emit chemicals known to the State of California to cause cancer and birth defects and reproductive harm.**

Indicator lights

Please first read and note the introductory information and heed the WARNINGS ..

Lights up	Possible cause	Proper response
EPC	Engine control malfunction (Electronic Power Control).	Have engine checked immediately by an authorized Volkswagen dealer or authorized Volkswagen Service Facility.

Lights up	Possible cause	Proper response
	Diesel engine pre-glow before engine start-up.	⇒page 113.
	Engine control/monitoring system malfunction (engine Malfunction Indicator Light - MIL)	Ease off the accelerator. Carefully drive to the nearest authorized Volkswagen dealer or authorized Volkswagen Service Facility. Have engine checked.
	Diesel particulate filter clogged with soot.	Drive about 15 minutes in 4th gear (manual transmission) or in Drive **(D)** (automatic transmission) and at a speed of about 45 mph (70 km/h). There may be a noticeable smell. Obey speed limits ⇒⚠. See an authorized Volkswagen dealer or authorized Volkswagen Service Facility if the indicator light is still on.

Flashes	Possible cause	Proper response
	Engine control malfunction (diesel engine).	Have engine checked immediately by an authorized Volkswagen dealer or authorized Volkswagen Service Facility.
	Misfire, which can damage the catalytic converter.	Ease off the accelerator. Carefully drive to the nearest authorized Volkswagen dealer or authorized Volkswagen Service Facility. Have engine checked.

When the ignition is switched on, several warning and indicator lights come on briefly for a function check. They go out after a few seconds.

⚠ WARNING

Obey all applicable legal requirements when cleaning the diesel particulate filter.

- **Clean the diesel particulate filter as recommended only when visibility, weather, road, and traffic conditions permit.**
- **Do not put others at risk.**

NOTICE

Failure to heed warning lights or text WARNINGS can result in vehicle damage.

As long as the indicator lights , or **EPC** are on, expect engine malfunctions, increased fuel consumption, and loss of engine efficiency.

Catalytic converter

Please first read and note the introductory information and heed the WARNINGS ⚠..

The catalytic converter provides exhaust gas after-treatment to help reduce pollutants in the exhaust gas. To help ensure long service life of the exhaust system and gasoline engine catalytic converter:

- Only use unleaded fuel.
- Never completely empty the fuel tank.
- Do not exceed the correct oil level..
- Do not tow the vehicle to start it, but use a jump-start instead..

If you experience misfires, loss of power or the engine is not running smoothly while driving, reduce speed immediately and have the vehicle checked by an authorized Volkswagen dealer or authorized Volkswagen Service Facility. Otherwise, gasoline could reach the exhaust system and get into the atmosphere. The catalytic converter could also be damaged by overheating!

Under certain engine conditions, you may smell a sulfur odor. This is not an indication of a malfunctioning emission control system. This depends upon the sulfur content of the diesel fuel.

Diesel particulate filter

Please first read and note the introductory information and heed the WARNINGS ..

The diesel particulate filter helps take soot particles out of the exhaust. The soot particles are collected and burned in the filter. Volkswagen recommends frequently driving longer distances to help clean the filter.

- Use only Ultra Low Sulphur Diesel (ULSD) fuel No. 2..
- Never refuel with gasoline or fuel oil or biodiesel that does not comply with the special requirements for diesel fuel., *Diesel fuel*.
- Do not exceed the correct oil level..
- Do not tow the vehicle to start, but use a jump-start instead..

On vehicles with automatic transmissions, increase the engine speed slightly while driving to automatically start cleaning the diesel particulate filter. This helps to minimize clogging of the filter. The indicator light will not come on.

Under certain engine conditions, you may smell a sulfur odor. This is not an indication of a malfunctioning emission control system. This depends upon the sulfur content of the diesel fuel.

Frequently asked questions

If you suspect a malfunction or vehicle damage, read and follow the following advice **before** contacting an authorized Volkswagen dealer or an authorized Volkswagen Service Facility. You may also find helpful information under “Special considerations” or “Checklist” in the index.

Description	Possible causes, among others	Possible remedy
Engine does not start.	Vehicle battery dead.	– Perform jump-start.. – Charge vehicle battery..
	The wrong vehicle key is used.	Use a valid vehicle key.
	Fuel level too low.	Refuel..
Vehicle cannot be locked or unlocked using vehicle key.	– Battery in the remote control vehicle key is dead. – Too far away from the vehicle (out of range). – Buttons have been pressed too many times.	– Replace the battery in the remote control vehicle key. – Move closer to vehicle. – Synchronize vehicle key. – Lock or unlock vehicle manually..
Unusual noises.	Cold engine, braking assist systems, electronic steering column lock.	Check the “Noises” entry in the index.
Odd driving behavior.	Assistance systems activated.	Check the “Assistance systems” entry in the index.
	DSG® Direct Shift Gearbox too hot.	Stop vehicle as soon as you can safely do so.
Features do not work as described in this manual.	Settings were adjusted in the Volkswagen Information System.	Check and reset to factory settings if necessary.
Headlights do not light up the road as they should.	– Headlights incorrectly adjusted. – Light bulbs burned out. – Low beams not switched on.	– Have the headlight range adjusted by an authorized Volkswagen dealer or an authorized Volkswagen Service Facility. – Change light bulbs.. – Switch on low beams.
Electrical consumers do not work.	Vehicle battery charge too low.	Charge vehicle battery..
	Remaining fuel level too low.	Refuel..
	Fuse blown.	Check fuse and replace if necessary..
Fuel consumption higher than indicated.	– Short hauls. – “Jumpy” accelerator pedal.	– Avoid short distance driving. – Drive defensively. – Accelerate smoothly.
	Electrical loads switched on.	Switch off unnecessary loads.
	Engine control malfunction.	Have the malfunction corrected..
	Tire pressure too low.	Adjust tire pressure..
	Driving in the mountains.	No direct corrective action possible.
	Driving with a roof rack.	– Check use. – Remove if not in use.
	Driving with heavy payload.	No direct corrective action possible.

Description	Possible causes, among others	Possible remedy
	Driving at high engine speed.	Select a higher gear.

In an emergency

Introduction

In this section you'll find information about:

Protecting yourself and the vehicle

More information:

- Braking, stopping and parking.
- Emergency closing and opening.
- Vehicle tool kit.
- Changing a wheel.

WARNING

A vehicle breakdown in traffic is dangerous and creates a great risk for you, your passengers, and others.

- **Always stop the vehicle as soon as it is safe to do so. Move the vehicle a safe distance off the road where it is safe to park and, if necessary, lock all doors in an emergency. Turn on the emergency flashers and set up another warning device about 25 yards (25 meters) behind the vehicle to warn approaching traffic.**
- **Never leave children, disabled persons, or anyone who cannot help themselves alone in the vehicle when locking the doors. This could result in people being trapped in the vehicle in an emergency. Depending on the time of year, people trapped in the vehicle can be exposed to very high or very low temperatures.**

Protecting yourself and the vehicle

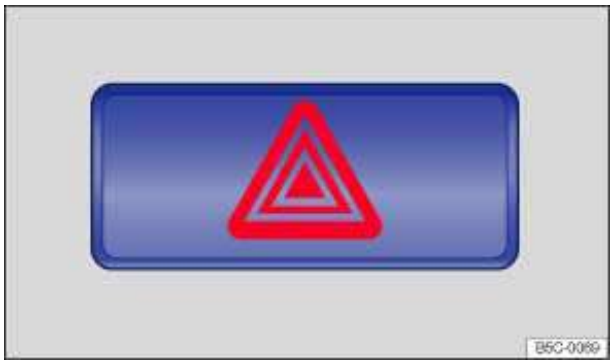

Fig. 129 In the center of the instrument panel: Switch for emergency flashers.

Please first read and note the introductory information and heed the WARNINGS ..

Obey all legal requirements regarding protecting a broken-down vehicle. For example, turning on the emergency flashers and wearing a safety vest are mandatory in many countries.

Checklist

For your own safety and that of your passengers, carry out the following steps in the order listed ⇒ ⚠:

1. Park the vehicle at a safe distance from traffic and on a suitable surface ⇒ ⚠.
2. Switch on emergency flashers by pressing the ⚠ switch ⇒ fig. 129.
3. Apply the parking brake to help prevent the vehicle from moving..
4. Shift the transmission into Park **(P)** (automatic) or Neutral (manual only)..
5. Stop the engine and remove the key from the ignition switch..
6. Have all passengers exit and go to a safe location away from moving traffic, such as behind a guard rail.
7. Take all vehicle keys with you when leaving your vehicle.
8. Set up a warning triangle or other warning device in order to alert other motorists and cyclists.
9. Let the engine cool down and get expert assistance if necessary.

If the emergency flashers are on, use the turn signal lever to indicate a direction or lane change, for example when the vehicle is being towed. This temporarily interrupts the emergency flashers.

Switch on the emergency flashers when:

- Traffic suddenly slows down or stops in front of you to warn those approaching from behind.
- In any emergency situation.
- If the vehicle breaks down.
- When being towed.

Always obey traffic laws that govern the use of emergency flashers where you are driving.

If the emergency flashers are not working, a different method – as permitted by law – must be used to alert other motorists and cyclists to the breakdown.

WARNING

Disregarding the safety-related checklist may lead to accidents and serious personal injuries.

- **Always review and follow the checklist. Follow accepted safety practices and use common sense.**

WARNING

The vehicle exhaust system and the catalytic converter or diesel particulate filter get very hot. They can cause fires and serious personal injury.

- **Never park where parts of the hot exhaust system or catalytic converter could ignite flammable materials, such as dry grass, brush, leaves, spilled fuel, etc.**

The vehicle battery will be drained if the emergency flashers are on for a long time – even if the ignition is switched off.

Emergency closing and opening

Introduction

In this section you'll find information about:

Manually unlocking and locking the driver door

Manually locking the passenger door

Opening the rear hatch from inside the luggage compartment

Emergency release for the selector lever

The doors and rear hatch can be manually locked and, in some cases, unlocked if necessary, for instance because the power locking system or the remote control vehicle key malfunctions.

More information:

- Vehicle key set.
- Power locking and closing system.
- Doors.
- Rear hatch.
- In an emergency.

WARNING

Serious injuries can result if the emergency closing and opening procedures are used carelessly.

- **Never leave children, disabled persons, or anyone who cannot help themselves in the vehicle. The doors can be locked with the remote control vehicle key. This could result in people being trapped in the vehicle in an emergency.**
- **A closed vehicle can become very hot or very cold, depending on the season. Particularly in the summer, heat build-up in the passenger and luggage compartment of a parked vehicle can result in temperatures in the vehicle that are much higher than the outside temperatures. Temperatures can quickly reach levels that can cause unconsciousness and death, particularly to small children.**

WARNING

Careless opening and closing of doors, the rear hatch, and the power sunroof is dangerous and can cause serious personal injury.

- **Open or close doors, the rear hatch, and the power sunroof only when no one is in the way.**

NOTICE

If the vehicle's battery fails or if the power windows won't work, the door window will not lower when you open or close the door. Always close and open the door carefully to help prevent damage to the window, the paint, or the rubber seal.

NOTICE

To help prevent vehicle damage, carefully remove and properly reinstall parts after emergency locking or unlocking.

Manually unlocking and locking the driver door

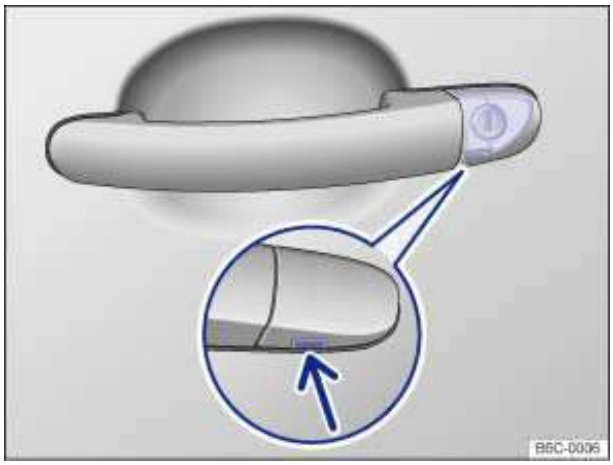

Fig. 130 Door handle on driver door: Concealed lock cylinder.

Please first read and note the introductory information and heed the WARNINGS ⚠..

When locking the vehicle manually, all doors are locked. Keep the key turned in the locking position to close the windows and the power sunroof (convenience closing). When the vehicle is unlocked manually, only the driver door is unlocked. Keep the key turned in the unlocking position to open the windows. Note the instructions for the anti-theft alarm system.

- Unfold the key bit from the remote control vehicle key.
- Insert the key bit from below into the opening of the cover cap on the driver door ⇒ fig. 130 (arrow) and lift the cover cap off. Grasping the door handle and pulling slightly makes it easier to remove the cap.
- Insert the key bit into the lock cylinder of the driver door and unlock or lock the door.
- Reinsert the cover cap from top to bottom and press until it clicks into place. Grasping the door handle and pulling slightly makes it easier to reinstall the cap.

Special considerations when unlocking:

- If the vehicle is equipped with an anti-theft alarm system, the system remains activated for the unlocked vehicle. But the alarm is not triggered at first.
- Open the driver door. The alarm will sound.
- Switch on the ignition. The electronic immobilizer recognizes a valid remote control vehicle key when the ignition is switched on and deactivates the anti-theft alarm system. For vehicles with Keyless Access, deactivate the alarm by holding the remote control vehicle key to the right of the steering column trim and pressing the starter button..

The driver door can be unlocked separately from the inside the vehicle by pulling the door handle to open the door.

The anti-theft alarm system, when installed, is not activated when the vehicle is locked manually with the key bit.

Manually locking the passenger door

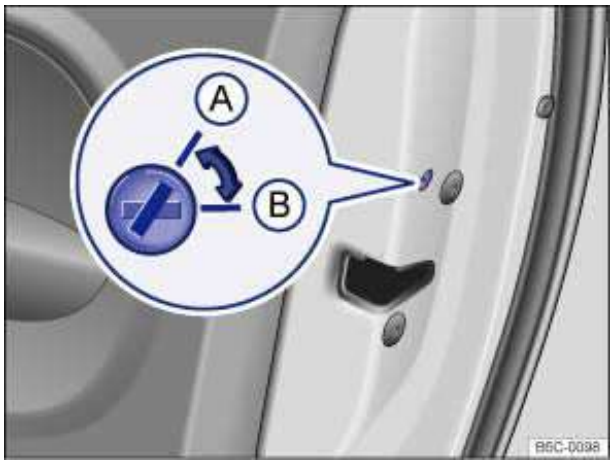

Fig. 131 On the edge of the passenger door: A unlocked,△locked.

🕮 Please first read and note the introductory information and heed the WARNINGS ⚠..

The passenger door can be locked manually. This will **not** activate the anti-theft alarm system, when installed.

Manually locking the passenger door

- Open the door.
- Unfold the key bit from the remote control vehicle key.
- Insert the key bit into the slot and turn to the locked position ⇒fig. 131 (B).
- Close the door.
- Make sure that the door is locked.
- Have the vehicle checked immediately by an authorized Volkswagen dealer or an authorized Volkswagen Service Facility.

Key slot position :

(A) Door unlocked.

(B) Door locked.

ⓘ The passenger door can be unlocked and opened separately from the inside the vehicle by pulling the door handle to open the door.

Opening the rear hatch from inside the luggage compartment

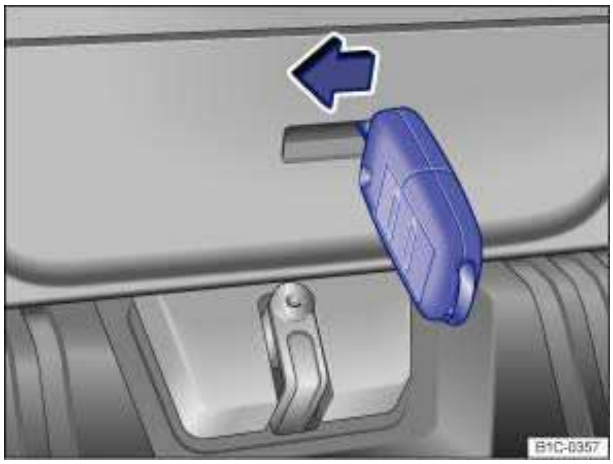

Fig. 132 View from luggage compartment: Opening the rear hatch.

Please first read and note the introductory information and heed the WARNINGS ⚠..

- If necessary, fold the rear seat backrests forward.
- Remove luggage in order to reach the rear hatch from the inside.
- Unfold the key bit from the vehicle key fob.
- Insert the key into the slot on the rear hatch ⇒ fig. 132.
- Press the release lever in the direction of the arrow to unlock the rear hatch and press upward at the same time until it opens.

Emergency release for the selector lever

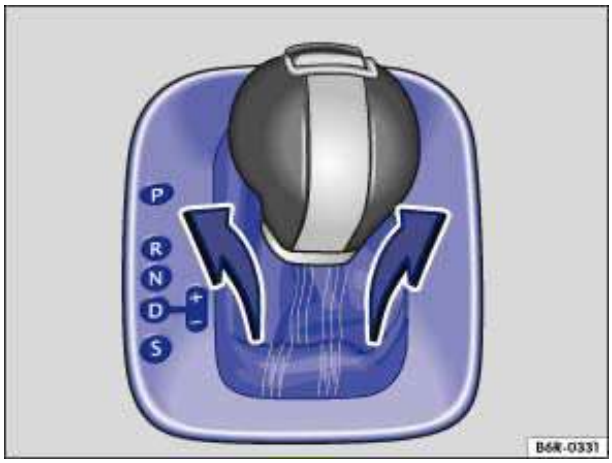

Fig. 133 Removing the selector gate cover.

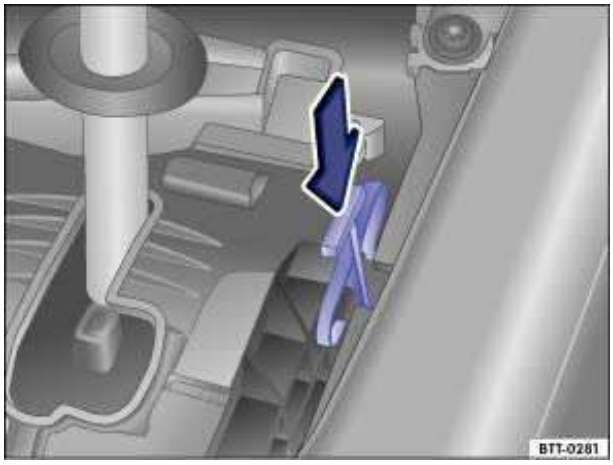

Fig. 134 Releasing the selector lever lock.

Please first read and note the introductory information and heed the WARNINGS ⚠..

If the power supply fails (due to a dead vehicle battery, for example) and the vehicle has to be pushed or towed, the emergency release must be used to move the selector lever to Neutral **(N)**.

The emergency release is located under the selector gate cover on the right side when viewed in the driving direction.

Preparations

- Set the parking brake. If the parking brake cannot be set firmly, you must find another way to help prevent the vehicle from moving.
- Switch off the ignition.

Removing the selector gate cover

- Pull upward on the cover around the selector lever sleeve ⇒ fig. 133.
- Slip the cover up and over the selector lever ⇒ ⚠.

Emergency release for the selector lever

- Push the release lever ⇒ fig. 134 in the direction of the arrow and hold it in this position.
- Press the release button in the selector lever handle and shift the selector lever to Neutral **(N)**.

⚠ WARNING

Never shift the transmission out of Park (P) without first firmly applying the parking brake. Otherwise, the vehicle can start to roll unexpectedly, especially on hills or inclines, and cause an accident and serious injuries.

NOTICE

Even with the selector lever is in Neutral (N), the automatic transmission will be damaged if the vehicle is towed (or you let it coast) for an extended period or at high speed with the engine shut off.

Vehicle tool kit

Introduction

In this section you'll find information about:

Storage
Contents

When securing the vehicle after a breakdown, always obey all applicable legal requirements.

More information:

- Preparations for working in the engine compartment.
- In an emergency.
- Changing a wheel.

WARNING

Loose tools and other items in the vehicle tool kit and a loose compact spare wheel may be thrown through the passenger compartment if you brake suddenly or steer sharply or are involved in an accident. This can cause severe injuries.

- **Always make sure the vehicle tool kit and compact spare wheel are securely stowed in the luggage compartment.**

WARNING

Improper or damaged vehicle tools can lead to accidents and injury.

- **Never work with tools that are damaged or not right for the job.**

Storage

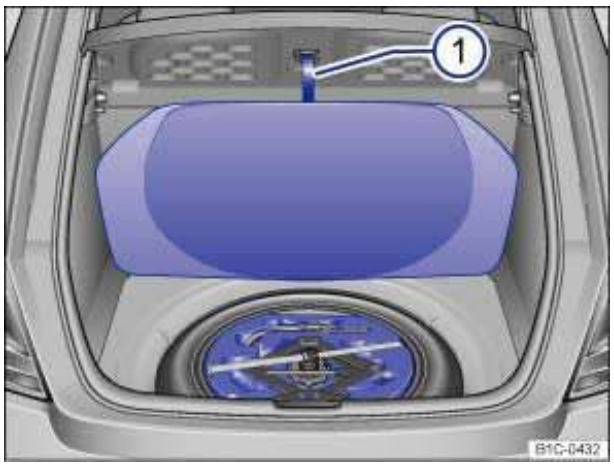

Fig. 135 In the luggage compartment: Floor covering raised and 1 secured.

Please first read and note the introductory information and heed the WARNINGS ⚠..

The vehicle tool kit is in the luggage compartment in one of several places, such as under the luggage compartment floor panel.

- Open the rear hatch.
- Lift the floor panel by the handle and hang it on the hook beneath the luggage compartment cover

⇒fig. 135 (1).

Completely retract the jack after use. Otherwise it will not fit in its compartment and cannot be stowed safely.

Contents

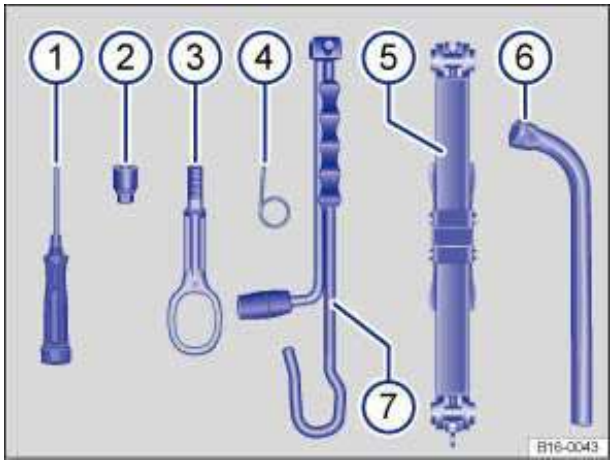

Fig. 136 Contents of the vehicle tool kit.

Please first read and note the introductory information and heed the WARNINGS ⚠..

The contents of the vehicle tool kit depend on the vehicle configuration. The following describes the maximum contents.

Contents of the vehicle tool kit ⇒fig. 136

(1) Screwdriver with a hexagonal socket in the handle for removing or inserting previously loosened wheel bolts. The screwdriver blade is reversible. The screwdriver may be stored under the lug wrench. For vehicles with a subwoofer in the luggage compartment, the tool kit contains a Torx bit for the screwdriver. Use the screwdriver with the Torx bit to remove or install the subwoofer screws.

(2) Adapter for anti-theft wheel bolts. Volkswagen recommends that you always carry the adapter for the wheel bolts in the vehicle along with the vehicle tool kit. The **code number** of the wheel bolt lock is imprinted on the front side of the adapter. If lost, a replacement adapter can be ordered using this number. Record the code number of the wheel bolt lock and store it separately from the vehicle.

(3) Screw-in towing eye.

(4) Hubcap puller clip for removing hubcaps, wheel covers, or wheel bolt caps.

(5) Jack. Before putting the jack back in the foam insert, be sure to completely crank the jack down to its original position.

(6) Lug wrench.

(7) Crank.

Wheel covers

Introduction

In this section you'll find information about:

Hubcaps
Wheel covers
Wheel bolt caps

More information:

- Exterior care and cleaning.
- Vehicle tool kit.
- Changing a wheel.

WARNING

Unsuitable wheel covers and improper installation of wheel covers can cause accidents and severe injuries.

- **Improperly installed wheel covers can come loose while driving and endanger other motorists and cyclists.**
- **Do not use damaged wheel covers.**
- **Always make sure that the flow of air for brake system cooling is not blocked or reduced before installing wheel covers. This applies to both factory-installed wheel covers and aftermarket wheel covers. Insufficient air supply may significantly increase stopping distance.**

NOTICE

To help prevent damage to the vehicle, be careful when removing wheel covers and be sure to install them properly.

Hubcaps

Fig. 137 Pulling the hubcap off.

Fig. 138 Twisting the hubcap off.

Please first read and note the introductory information and heed the WARNINGS ⚠..

Depending on the vehicle model, the hubcaps can either be pulled off ⇒ fig. 137 or removed by twisting ⇒ fig. 138.

Vehicles with pull-off hubcaps

- *To remove* Take the wire clip out of vehicle tool kit and hook it into one of the holes in the hubcap ⇒ fig. 137.
- Pull the hubcap off in the direction of the arrow.
- *To install* Press the hubcap against the rim until it latches.

Vehicles with twist-off hubcaps

- *To remove* Twist the hubcap to the left or right until it loosens from the wheel rim ⇒ fig. 138.
- Grasp behind one of the lugs and pull the hubcap off.
- *To install* Push the hubcap onto the center of the rim.
- Press the hubcap against the rim until it latches.

Wheel covers

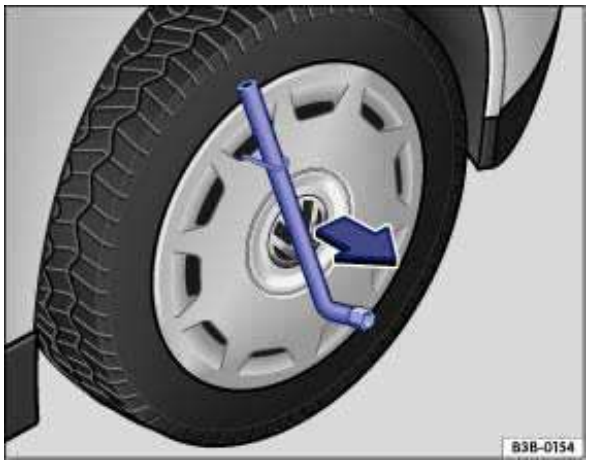

Fig. 139 Pulling the wheel cover off (Version 1).

Fig. 140 Pulling the wheel cover off (Version 2).

Please first read and note the introductory information and heed the WARNINGS ⚠..

Pulling off the wheel cover (Version 1)

- Take the lug wrench and wire clip out of the vehicle tool kit..
- Place the wire clip hook in one of the openings of the wheel cover.
- Slide the lug wrench through the clip ⇒fig. 139 and pull the wheel cover off in the direction of the arrow.

Pulling off the wheel cover (Version 2)

- Place the wire clip hook ⇒fig. 140 in the opening of the wheel cover.
- Pull the wheel cover off in the direction of the arrow.

Installing the wheel cover (Version 1)

Before installing the wheel cover, the anti-theft wheel bolt must be screwed into position ⇒fig. 143 (2) or (3) in relation to the position of the tire valve (1). Otherwise, the wheel cover cannot be installed.

Make sure that the valve cutout is aligned with the valve ⇒fig. 143 (1), and press the wheel cover onto the wheel rim. Make sure that the wheel cover is latched onto the rim along the entire circumference.

Installing the wheel cover (Version 2)

- Press the wheel cover onto the wheel rim. Make sure that the wheel cover is latched onto the rim along the entire circumference.

Wheel bolt caps

Fig. 141 Pulling cover caps off wheel bolts.

Please first read and note the introductory information and heed the WARNINGS ⚠..

- Take the wire clip out of the vehicle tool kit..
- Insert the wire clip through the opening of the cover cap ⇒ fig. 141 and pull off in the direction of the arrow.

The caps are designed to protect the wheel bolts and should be installed again after the wheel change.

The **anti-theft wheel bolt** has a separate cap. This only fits the anti-theft wheel bolt, but not the standard wheel bolts.

Changing a wheel

Introduction

In this section you'll find information about:
Error! Bookmark not defined.

Change a wheel by yourself only if the vehicle is parked in a safe location, you are familiar with safety procedures and the technical steps, and you have proper tools available. Otherwise, get expert assistance.

The vehicle jack can only be safely used to change the wheel on a vehicle that has **only one** flat or damaged tire. If the vehicle does not have the support it needs from 3 fully inflated tires, the vehicle can fall off the jack. If more than 1 tire on the vehicle is flat or damaged, do not lift the vehicle with the vehicle jack. Instead, get expert assistance.

More information:

- Exterior views.
- Vehicle key set.
- Tires and wheels.
- In an emergency.
- Vehicle tool kit.
- Wheel covers.

WARNING

Changing a wheel, especially on the side of the road, can be dangerous. To help reduce the risk of serious personal injury:

- **Always stop the vehicle as soon as it is safe to do so. Move the vehicle a safe distance off the road where it is safe to change the wheel.**
- **Always make sure that all passengers, especially children, are in a safe place outside the vehicle and away from the vehicle and traffic (such as behind a guard rail).**
- **Turn on the emergency flashers and set up another warning device about 25 yards (25 meters) behind the vehicle to warn approaching traffic.**
- **Change a wheel by yourself only if you are familiar with the necessary steps. Otherwise, get expert assistance.**
- **Always switch the engine off, firmly apply the parking brake, and shift the transmission into Park (P) (automatic transmission) or any gear (manual only) to help prevent the vehicle from moving suddenly and slipping off the jack.**
- **Always make sure that the ground is level and firm. If necessary, place the jack on a large and sturdy board or on a similar ground support.**
- **Always block the wheel diagonally opposite the wheel being changed with chocks or other similar things.**
- **Always use proper and undamaged tools when changing a wheel.**
- **Once a wheel is lifted off the ground, having the transmission in Park (P) or in gear will not prevent sudden vehicle movement.**
- **Always use a jack that has been approved by the manufacturer for your vehicle. Never use other jacks, even if they have been approved for use on other Volkswagen models.**
- **To reduce the risk of losing control, crashes, and serious personal injuries, never loosen the screws on rims with threaded rim rings.**
- **After changing a wheel, have the wheel bolt tightening torque checked with an accurate torque wrench.**
- **After changing a wheel or tire, reset the Tire Pressure Monitoring System..**

Fuses

Introduction

In this section you'll find information about:

Fuses in the vehicle

Due to ongoing development of the vehicle, configuration-dependent allocation of fuses and the combined fuse protection of multiple loads with one fuse, an up-to-date overview of the fuse location per load is not possible at the time of printing. Detailed information regarding fuse box layout is available from authorized Volkswagen dealers and authorized Volkswagen Service Facilities.

In general, one fuse can protect several loads. One load can also be protected by several fuses.

Find out why the fuse blew and correct the problem before replacing a blown fuse. If a newly replaced fuse blows again after a short time, the electrical system should be checked by an authorized Volkswagen dealer or an authorized Volkswagen Service Facility.

More information:

- Preparations for working in the engine compartment.

WARNING

High voltage systems in the engine compartment can cause electrical shocks, severe burns, and even death!

- **Never touch ignition cables. Never touch other components of the high voltage electronic ignition system.**
- **Avoid short circuits in the electrical system.**

WARNING

Using the wrong fuse, using a blown fuse that has been repaired, and using metal objects in place of fuses to complete the electrical connection in the circuit can cause fires and serious personal injury.

- **Never replace a fuse with one that has a higher amp rating. Replace a blown fuse only with a fuse of the same amperage (same color and same imprint) and same overall size.**
- **Never repair fuses.**
- **Never replace fuses with a metal strip, a paper clip, or a similar object.**

NOTICE

- **To help prevent damage to the electrical system, switch off all lights and accessories, switch off the ignition, and remove the key from the ignition switch before replacing a fuse.**
- **If a fuse is replaced with a fuse with higher amperage, this can also cause damage at different locations in the electrical system.**
- **Open fuse boxes must be protected from dirt and moisture. Dirt and moisture in fuse boxes can cause damage to the electrical system.**

Fuses in the vehicle

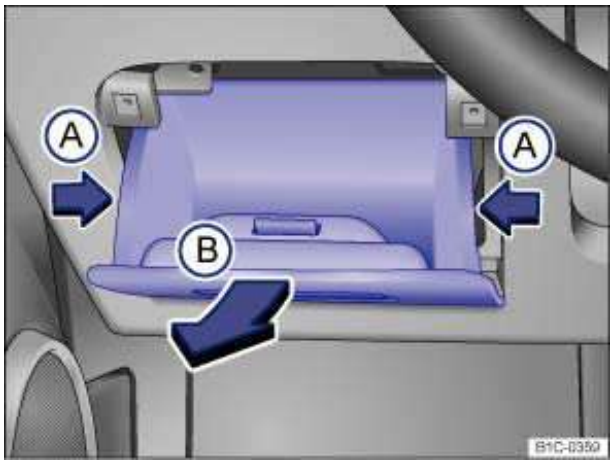

Fig. 147 On the driver side in the instrument panel: Storage compartment in front of the fuse box.

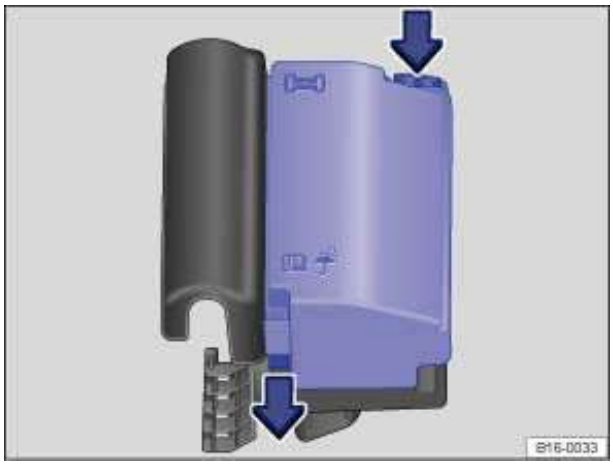

Fig. 148 In the engine compartment: Fuse box cover.

Please first read and note the introductory information and heed the WARNINGS ⚠..

Replace a blown fuse only with a fuse of the same amperage (same color and same imprint) and same overall size.

Fuse types

- Regular blade fuse (ATO®).
- Mini blade fuse (MINI®).
- Cartridge fuse (JCASE®).

Fuse color coding

Color	Current strength in amps (ATO/MINI)	Current strength in amps (JCASE)
Black	1	—
Purple	3	—
Light brown	5	—
Brown	7.5	—

Color	Current strength in amps (ATO/MINI)	Current strength in amps (JCASE)
Red	10	50
Blue	15	20
Yellow	20	60
White or clear	25	—
Green	30	40
Orange	40	—
Pink	30	30

Opening the fuse box in the instrument panel

- Open the storage compartment ⇒fig. 147,..
- On the back of the cover there are plastic tweezers for removing and inserting fuses.
- Press the sides of the storage compartment in slightly ((A) arrows) while pulling back firmly ((B) arrow).
- To **install**, guide the cover from the bottom into the instrument panel by pushing in the direction opposite to the arrows (A), then push forward until you can hear it latch into place.

Opening the fuse box in the engine compartment

- Open the engine hood ⚠..
- Move the release tabs in the direction of the arrows ⇒fig. 148 to unlock the fuse box cover.
- Remove the cover upward.
- To **install** push the cover onto the fuse box. The locking tabs must latch with an audible “click.”

NOTICE

- **To help prevent vehicle damage, be careful when removing fuse box covers and be sure to reinstall them properly.**
- **Open fuse boxes must be protected from dirt and moisture. Dirt and moisture in fuse boxes can cause damage to the electrical system.**

The vehicle contains other fuses in addition to those mentioned in this section. Have these fuses replaced by an authorized Volkswagen dealer or an authorized Volkswagen Service Facility.

Changing light bulbs

Introduction

In this section you'll find information about:

Indicator light

Information on light bulb replacement

Changing a light bulb requires a certain amount of skill. If you are uncertain about how to proceed, Volkswagen recommends having the light bulb changed by an authorized Volkswagen dealer or an authorized Volkswagen Service Facility. Special training and knowledge are generally required when other vehicle parts must be disassembled to replace a bulb, or when HID – High Intensity Discharge (Xenon) headlights must be replaced.

You should always keep a box in the vehicle with all the replacement bulbs required for traffic safety. Replacement bulbs are available from your authorized Volkswagen dealer or authorized Volkswagen Service Facility. The laws of some countries explicitly require you to have replacement bulbs in the vehicle.

Driving with outside lights that do not work may be against the law.

Additional light bulb specifications

Some factory-installed light bulbs in the headlights or the rear lights may have different specifications than conventional light bulbs. Specifications are on the glass bulb or on the metal base.

More information:

- Exterior views.
- Lights and Vision.
- Preparations for working in the engine compartment.
- Vehicle tool kit.
- Fuses.

WARNING

Crashes and other accidents can happen when you cannot see the road ahead and when you cannot be seen by other motorists.

WARNING

Improper replacement of burned out headlights and other light bulbs can cause serious personal injury.

- **Stop! Always read and heed the WARNINGS before doing any work in the engine compartment.. The engine compartment of any motor vehicle is a potentially dangerous area, and work in this area can lead to serious personal injury.**
- **HID – High Intensity Discharge (Xenon) headlights get power from a high voltage source that can cause severe personal injury and even death if handled improperly.**
- **HB2 (H4) bulbs and HID – High Intensity Discharge (Xenon) headlights are under high pressure and can explode if handled improperly.**
- **Always let a burned out light bulb cool down before replacing it.**
- **Never replace a light bulb unless you are familiar with all of the necessary procedures. In particular, never remove a headlight unless you know exactly how to carry out the job and have the correct tools and light bulbs.**
- **If you are uncertain about what to do, have the work performed by an authorized Volkswagen dealer, an authorized Volkswagen Service Facility, or another qualified workshop. Serious personal injury may result from improperly performed work.**
- **We strongly recommend that you always have HID – High Intensity Discharge (Xenon) headlights and HB2 (H4) bulbs replaced by a qualified technician.**
- **Do not touch the glass of light bulbs with your bare hands. Fingerprints left on the bulb evaporate due to the heat when the bulb is switched on and cause the reflector to "cloud."**
- **There are sharp edges on and around the headlight housing in the engine compartment and the rear light housing. Wear hand protection if you replace bulbs.**

NOTICE

After replacing a headlight bulb or other light bulb, always make sure that the rubber covers or plastic caps have been properly and securely reinstalled to help prevent water from getting into the electrical connections and headlight housing and damaging the electrical system.

You cannot replace the LEDs in LED daytime running lights. Contact your authorized Volkswagen dealer or an authorized Volkswagen Service Facility for assistance.

Indicator light

Please first read and note the introductory information and heed the WARNINGS ..

Lights up	Possible cause	Proper response
	Light bulb of the exterior vehicle lighting not working.	Replace the light bulb that isn't working.

When the ignition is switched on, several warning and indicator lights come on briefly for a function check. They go out after a few seconds.

WARNING

Failure to heed warning lights and instrument cluster text messages can cause the vehicle to break down in traffic and result in a collision and serious personal injury.

- **Never ignore warning lights or text WARNINGS.**
- **Always stop the vehicle as soon as it is safe to do so.**

NOTICE

Failure to heed warning lights or text WARNINGS can result in vehicle damage.

Failure of a single LED within a taillight is not indicated. However, the indicator light will come on if all LEDs fail.

Information on light bulb replacement

Please first read and note the introductory information and heed the WARNINGS ..

Checklist

Steps for replacing a light bulb. Please carry out these steps only in the order listed ⇒.

1. Stop the vehicle in a safe place on level and firm ground at a safe distance from traffic.
2. Apply the parking brake to help prevent the vehicle from moving..
3. Turn the light switch to **0** position.
4. Move the turn signal lever to neutral position.
5. Automatic transmission: Shift the transmission into Park **(P)**..
6. Stop the engine and remove the key from the ignition switch..
7. Manual transmission: Engage a gear..
8. Let orientation lighting go out.
9. Let the burned out light bulb cool down.
10. Check if the fuse is blown..
11. Replace the burned out light bulb according to instructions ⇒. Always replace a burned-out light bulb with a good bulb with the same specifications. Specifications are on the glass bulb or on the metal base.
12. Never touch the glass of the light bulb with your bare hands. Fingerprints can cloud the outer surface of the light bulb when heated, affecting the lighting power, clouding the reflector, and reducing the brightness.
13. Always make sure that the new bulb works. If the bulb does not work, it may not be installed correctly; the connection plug may not be completely seated; the corresponding fuse may be burned out; or the bulb may be bad.
14. Always have the headlights adjusted by an authorized Volkswagen dealer or an authorized Volkswagen Service Facility after a headlight bulb has been replaced.

WARNING

Disregarding the safety-related checklist may lead to accidents and serious personal injuries.

- **Always review and follow the checklist. Follow accepted safety practices and use common sense.**

NOTICE

Always insert and remove lamps carefully to help prevent damage to the vehicle paint or to other parts of the vehicle.

Jump-starting

Introduction

In this section you'll find information about:

Using jumper cables

If your engine does not start because the vehicle battery is dead, your vehicle's battery can be connected to the battery of another vehicle to start your engine (jump-starting). Check the battery acid level indicator on the vehicle battery before jump-starting..

You must use jumper cables that meet recognized industrial standards (check information provided by the jumper cable manufacturer). For vehicles with **gasoline engines**, the cross-section of the jumper cable wire must be at least 0.038 in.^{2} (25 mm^2), or about 3 ga. (AWG). For vehicles with **diesel engines**, the cross-section must be at least 0.054 in^2 (35 mm^2), or about 2 ga. (AWG).

More information:

- Starting assistance systems.
- Preparations for working in the engine compartment.
- Vehicle battery.

WARNING

Working on the batteries or the electrical system in your vehicle can cause serious acid burns, fires, or electrical shock.

- **Always keep children away from battery acid and vehicle batteries in general.**
- **Sulfuric battery acid is very corrosive and can cause blindness and damage to unprotected skin. Never let battery acid or lead particles contact your eyes, skin, and clothing.**
- **Never lean over a vehicle battery. Always wear protective gloves and eye protection. To reduce your risk of injury, never tilt the batteries; acid could spill out through the vents and burn you.**
- **A highly explosive mixture of gases is given off when the battery is being charged.**
- **Always avoid fires, sparks, open flame, and smoking. Never create sparks or electrostatic charges when handling cables and electrical equipment. Never short-circuit the battery terminals. High-energy sparks can cause serious personal injury.**
- **If you get battery acid in your eyes or on your skin, immediately rinse with cold water for several minutes and get medical attention immediately. If you swallow any battery acid, get medical attention immediately.**

WARNING

Improper use of jumper cables when jump-starting a vehicle with a dead battery can cause the battery to explode, leading to serious personal injury. To help reduce the risk of battery explosion:

- **All work on the batteries or the electrical system in your vehicle can cause serious acid burns, fires, or electrical shocks. Always read and heed the following WARNINGS and safety precautions before working on the batteries or the electrical system., *Vehicle battery*.**
- **Always make sure that the battery providing starting assistance (the booster battery) has the same voltage as the dead battery (12 V) and about the same amperage capacity (see battery label).**
- **Never jump-start a vehicle with a thawed or frozen vehicle battery. The battery can explode. A dead battery can freeze at temperatures around +32 °F (0 °C).**
- **A battery that is frozen or was frozen, but has since thawed, must be replaced.**
- **When the vehicle battery is jump-started, it gives off hydrogen gas, which is highly explosive! Always keep fire, sparks, open flame, and smoking materials far away from vehicle batteries. Never use a cellular telephone while connecting or disconnecting jumper cables.**
- **Jump-start batteries only in well-ventilated areas. Batteries give off highly explosive hydrogen gas during jump-starting.**
- **Always route the jumper cables so that they cannot get caught in any moving parts in the engine compartment.**
- **Never short out the battery terminals by connecting the positive (+) and negative (-) terminals with each other.**
- **Never connect the negative cable from the other vehicle directly to the negative terminal of the dead battery, as this may cause the hydrogen gas given off by the dead battery to explode.**
- **Never attach the negative cable from the vehicle providing starting assistance to any part of the fuel system or to the brake hoses or brake lines.**
- **Never allow the non-insulated parts of the battery clamps to touch.**
- **Never allow the jumper cable attached to the positive battery terminal to contact metal parts of the vehicle.**
- **Always follow the instructions of the jumper cable manufacturer.**

NOTICE

To help prevent extensive damage to the vehicle electrical system, read and heed the following:

- **Connecting jumper cables improperly can cause a short circuit and do expensive damage to the vehicle's electrical system.**
- **Do not let the vehicles touch each other while the jumper cables are connected. If they do, electrical current may flow between the vehicles when the positive (+) terminals are connected, causing electrical system damage.**

Using jumper cables

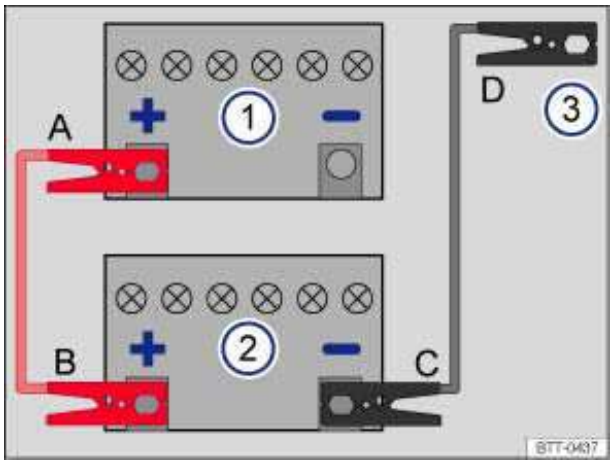

Fig. 165 Diagram for attaching the jumper cables: Dead battery 1 and booster battery 2.

Please first read and note the introductory information and heed the WARNINGS ⚠..

The dead battery must be properly connected to the vehicle's electrical system.

Make certain that the vehicles are not touching each other. Otherwise, electric current could flow as soon as the positive terminals (+) are connected. Use longer jumper cables if necessary.

The clamps on the jumper cables must have good contact to bare metal on the battery terminals.

If the engine does not start, stop the process after 10 seconds and repeat after about 1 minute.

The procedure for attaching and for removing the jumper cables is described below. Perform each of the following steps only in the order described, which follow the letters shown in the illustration ⇒ fig. 165.

Attaching jumper cables

1. Switch off the ignition in both vehicles..
2. Open the battery cover in the engine compartment if the battery has a cover..
3. Attach one end of the *red* jumper cable to the **positive terminal** (+) of the dead battery: (1) ⇒ ⚠.
4. Attach the other end of the *red* jumper cable to the **positive terminal** (+) of the good battery (booster battery): (2).
5. Attach one end of the *black* jumper cable to the **negative terminal** (-) of the booster battery: (2) .
6. Attach the other end of the *black* jumper cable (3) to **a bare metal part of the vehicle with the dead battery**. This part should be connected directly to the engine block. You may also attach the cable to the engine block itself or to the towing eye installed on the front of the vehicle.. Attach the clamp to a point that is as far away as possible from the dead battery (1) ⇒ ⚠.
7. Route the jumper cables so that they cannot get caught in any moving parts in the engine compartment of either vehicle.

Starting the engine

- Start the engine of the vehicle with the good battery that is providing help and let it run at idle speed.
- Turn on the ignition of the vehicle with the dead battery. If the engine starts, wait 2 to 3 minutes until it “runs smoothly” before removing the jumper cables as described below ⇒ ⚠. If the engine does not start within about 10 seconds, turn off the ignition and wait at least 1 minute; then try again.

Before removing the jumper cables

- Switch off the headlights (if they are on).
- In the vehicle with the dead battery, switch on the heater fan and the rear window defroster. This helps to minimize voltage spikes when the cables are disconnected.

Removing jumper cables

With the engine running, remove the jumper cables **in reverse order** to the way they were connected.

1. Disconnect the black (-) cable from the vehicle with the **dead** battery.
2. Disconnect the black (-) cable from the other vehicle (vehicle with the **good** battery).
3. Disconnect the red (+) cable from the other vehicle (vehicle with the **good** battery).
4. Disconnect the red (+) cable from the vehicle with the **dead** battery.
5. Close the battery cover.
6. If necessary, unscrew the towing eye on the front of the vehicle..

WARNING

Improper use of jumper cables when jump-starting a vehicle with a dead battery can cause the battery to explode, leading to serious personal injury. To help reduce the risk of battery explosion:

- **All work on the batteries or the electrical system in your vehicle can cause serious acid burns, fires, or electrical shocks. Always read and heed the following WARNINGS and safety precautions before working on the batteries or the electrical system., *Vehicle battery*.**
- **Always wear proper eye protection. Never lean over the vehicle battery.**
- **Attach the jumper cables in the correct order: first the positive cable, then the negative cable.**
- **Never connect the negative cable from the vehicle providing starting assistance to parts of the fuel system or to the brake hoses or brake lines.**
- **Never allow the non-insulated parts of the battery clamps to touch.**
- **Never allow the jumper cable attached to the positive battery terminal to contact metal parts of the vehicle.**
- **Check the battery acid level indicator window on the vehicle battery. Use a flashlight, never a match, cigarette lighter, or other open flame. If you cannot see the color of the window clearly, or if it is light yellow or colorless, do not jump-start the vehicle. Get expert assistance.**
- **Avoid electrostatic discharge in the vicinity of the vehicle battery. Sparks may cause the hydrogen gas escaping from the vehicle battery to ignite.**
- **Never jump-start a vehicle with a battery that is damaged or frozen or that was frozen and has thawed. The battery can explode. Replace the battery instead.**
- **Always follow the instructions of the jumper cable manufacturer.**
- **Always make sure that the battery providing starting assistance has the same voltage as the dead battery (12 V) and about the same capacity (see battery label).**
- **Batteries give off explosive hydrogen gas. Always keep fire, sparks, open flame and smoking materials away from batteries.**
- **Never connect the negative cable from the other vehicle directly to the negative terminal of the dead battery. The hydrogen gas from the battery is explosive.**
- **Never short out the battery terminals by connecting the positive (+) and negative (-) terminals with each other.**

Towing

Introduction

In this section you'll find information about:

Towing on a commercial tow truck
Tips on towing
Driving tips while towing

Observe legal requirements when towing.

For technical reasons:

- **A vehicle with a dead battery must never be towed. Jump-start the vehicle instead.**
- **It is not possible to tow-start or push-start your vehicle. Jump-start the vehicle instead.**

Vehicles with Keyless Access may only be towed with the ignition on.

Towing the vehicle when the engine is turned off and the ignition is turned on drains the vehicle battery. Depending on the charge level of the vehicle battery, it is possible that even after just a few minutes, electrical devices such as the emergency flashers may not have the power necessary to function. The steering wheel might lock in vehicles with Keyless Access ⇒ ⚠.

More information:

- Exterior views.
- Shifting.
- Engine control and emission control system.
- Jump-starting.

⚠ WARNING

Never tow a vehicle without any electrical power.

- **Never remove the remote control vehicle key from the ignition switch or turn off the ignition with the starter button while the vehicle is moving. The electronic steering column lock could suddenly engage, and you would not be able to steer or control the vehicle. You can lose control of the vehicle, crash, and seriously injure yourself and others.**
- **If the vehicle loses power while it is being towed, stop towing the vehicle immediately and contact your authorized Volkswagen dealer or authorized Volkswagen Service Facility for assistance.**

WARNING

Towing a vehicle changes the way it handles and brakes. To help reduce the risk of an accident and serious personal injury, note the following:

- **The driver of the vehicle that is being towed:**
  - **Since the brake booster also does not work when the engine is stopped, you will need to press harder on the brake pedal to slow down or stop. Always be alert so as not to rear-end the towing vehicle.**
  - **Will have to use considerably more force to turn the steering wheel because the power steering is not working.**
- **The driver of the vehicle that is doing the towing:**
  - **Must accelerate gradually and gently and avoid jerking movements.**
  - **Must not brake hard or steer sharply.**
  - **Must brake earlier and more gently than in normal driving.**

NOTICE

- **Be careful not to damage the paint when installing and removing the towing eye and the cover for the threaded hole behind the bumper.**
- **Unburned fuel can get into the catalytic converter during towing and damage it.**

Towing on a commercial tow truck

Please first read and note the introductory information and heed the WARNINGS ⚠..

To help avoid damaging the vehicle, have it towed only by a professional towing company. Read and heed the following information:

General information

Never let the vehicle be towed at speeds above 30 mph (50 km/h).

Never let the vehicle be towed for more than 30 miles (50 km).

Towing manual transmission vehicles

- Release the parking brake.
- Shift the transmission into Neutral **(N)**.
- If possible, have the vehicle towed with the front wheels off the ground.
- If necessary, the vehicle can also be towed with the rear wheels off the ground ⇒ ⓘ.

Towing automatic transmission vehicles

- Release the parking brake.
- Shift the transmission into Neutral **(N)**.
- Tow the vehicle only with its front wheels off the ground ⇒ ⓘ.

When not to tow your vehicle

If there is little or no oil in the transmission because of damage to your vehicle, it must be moved with the drive wheels off the ground. The vehicle can only be towed if its ignition is switched on and its electrical system is operating. In the following situations, the vehicle cannot be towed at all and must be transported on a flatbed truck or trailer:

- If the front and rear wheels cannot turn.
- If the vehicle battery is dead (because the electronic steering column lock engages and cannot be released).
- If you have to tow an automatic transmission vehicle more than 30 miles (50 km).

WARNING

It is not safe for children or other persons to ride in a vehicle that is being towed.

- **Never let children or anyone else remain in the vehicle while it is being towed.**

NOTICE

The drive axle rotates while the vehicle is being towed with its rear wheels off the ground. This can damage the automatic transmission.

- **Never tow automatic transmission vehicle with the rear wheels off the ground.**
- **Tow manual transmission vehicles with the rear wheels off the ground only if it is certain that no transmission fluid can leak out.**

Tips on towing

Please first read and note the introductory information and heed the WARNINGS ..

Towing eye; tow rope or tow bar

A towing eye is included in your vehicle's tool kit. This can be inserted in a threaded hole in the front bumper and used when your vehicle is being towed by another vehicle. On most vehicles, there is another threaded hole in the rear bumper, so you can use the towing eye to tow other vehicles as well. Towing a vehicle with a tow bar is safer and easier on both vehicles than using a tow rope. A tow rope should be used only if a tow bar is not available.

The tow rope should be flexible enough to help protect both vehicles from damage. Use a synthetic fiber rope or similar rope.

Attach the tow rope or tow bar only to the towing eye included in the vehicle tool kit for this purpose.

Towing manual transmission vehicles

Check whether your vehicle can be towed at all; see below., *When not to tow your vehicle*

If yes, not the following for the towed vehicle:

- Shift the gearshift lever to Neutral..
- Do not tow faster than 30 mph (50 km/h).
- Do not tow more than 30 miles (50 km).

Towing automatic transmission vehicles

Check whether your vehicle can be towed at all; see below., *When not to tow your vehicle*

If yes, not the following for the towed vehicle:

- Put the transmission in Neutral **(N)**.
- Do not tow faster than 30 mph (50 km/h).
- Do not tow more than 30 miles (50 km).
- When a commercial tow truck is being used, the vehicle must only be towed with the front wheels lifted off the ground.

When not to tow your vehicle

In the following situations, the vehicle cannot be towed and must be transported on a flatbed truck or trailer:

- If transmission fluid has leaked out of the transmission.
- If there is little or no oil in the transmission because of damage to your vehicle, it must be moved with the drive wheels off the ground.
- If the front and rear wheels cannot turn.
- When the vehicle battery is dead, because the steering may remain disabled and it may not be possible to release the electronic steering column lock.
- If you have to tow an automatic transmission vehicle more than 30 miles (50 km).

Towing other vehicles

- Obey all legal requirements
- Read and heed all towing information in the owner's manual for the other vehicle.

A vehicle can be towed only if the electronic steering column lock is released. In case of a power loss or malfunctions of the electrical system, the engine may have to be jump-started in order to release the electronic steering column lock.

- Push on the cover until the lip has locked into place.

NOTICE

Always make sure the towing eye is screwed all the way into threaded hole so that it is secure. If not, it could be pulled out while your vehicle is being towed.

Driving tips while towing

Please first read and note the introductory information and heed the WARNINGS ..

Towing requires some experience, especially when using a tow rope. Both drivers must be familiar with the techniques required for towing. Inexperienced drivers should not try to tow a vehicle or to drive a vehicle that is being towed.

Do not pull too hard with the towing vehicle, and avoid jerking the tow rope. When towing on an unpaved road, there is always a risk of overloading and damaging the attachment points.

If your vehicle is being towed, it can still signal turns even if the emergency flashers are activated, as long as the ignition is switched on. Use the turn signal in the normal way. The emergency flashers go off as long as the turn signal is blinking. As soon as the turn signal lever returns to its neutral position, the emergency flashers are automatically activated again.

As the driver of the vehicle being towed:

- If your vehicle is the one being towed, the ignition switch must be switched on to keep the steering wheel from locking. Also make sure that the turn signals, horn, windshield wipers, and windshield washers work properly.
- Since power steering does not work when the engine is switched off, more effort is needed to steer the vehicle.
- Since the brake booster also does not work when the engine is stopped, you will need to press harder on the brake pedal to slow down or stop. Do not hit the towing vehicle.
- Read and heed the information and WARNINGS in the towing vehicle's owner's manual.

As the driver of the towing vehicle:

- Drive especially carefully and accelerate gently. Avoid sudden driving maneuvers.
- Brake earlier and more gently than usual and with light pedal pressure.
- Read and heed the information and WARNINGS in the owner's manual of the vehicle being towed.